

# Installation And Servicing Instructions

Models covered by these instructions

170

(41-930-04)Keston 170

# **KESTON**

---

# Boilers

170,000 Btu/h (50 kW) Model

Fan Powered High Efficiency

Condensing Gas Boiler

CE No : 87AR50

These instructions must be left either with the user or next to the site gas meter.

# **KESTON**

---

# Boilers

34 West Common Road

Hayes, Bromley, Kent BR2 7BX

Tel. 0181 462 0262 Fax. 0181 462 4459

## **CONTENTS**

| Section              | Description                                  |
|----------------------|--|
| <a href="#">1</a>    | GENERAL INSTRUCTION                          |
| <a href="#">1.1</a>  | Description                                  |
| <a href="#">1.2</a>  | Boiler Schematic                             |
| <a href="#">1.3</a>  | Related Documents                            |
| <a href="#">1.4</a>  | Performance Data                             |
| <a href="#">1.5</a>  | General Data                                 |
| <a href="#">2</a>    | BOILER LOCATION                              |
| <a href="#">2.1</a>  | Dimensions & Minimum Clearances              |
| <a href="#">2.2</a>  | Service Connections                          |
| <a href="#">2.3</a>  | Position                                     |
| <a href="#">2.4</a>  | Electrical                                   |
| <a href="#">2.5</a>  | Boiler Size Selection                        |
| <a href="#">2.6</a>  | Gas Supply                                   |
| <a href="#">2.7</a>  | Water Systems                                |
| <a href="#">2.8</a>  | Flue System                                  |
| <a href="#">2.9</a>  | Air Supply                                   |
| <a href="#">2.10</a> | Compartment Installation                     |
| <a href="#">2.11</a> | Condensate Drainage                          |
| <a href="#">2.12</a> | Radiant Floor Heating                        |
| <a href="#">2.13</a> | Low Water Volume Boiler vs. Cast Iron Boiler |
| <a href="#">2.14</a> | Determine Radiation Needed Room-By-Room      |
| <a href="#">3</a>    | INSTALLATION OF THE BOILER                   |
| <a href="#">3.1</a>  | Wall Mounting Bracket                        |
| <a href="#">3.2</a>  | Mounting The Boiler                          |
| <a href="#">3.3</a>  | Assembly Practice                            |

| Section              | Description                              |
|----------------------|--|
| <a href="#">3.4</a>  | Installing Flue And Air Pipes            |
| <a href="#">3.5</a>  | Condensate Drainage                      |
| <a href="#">3.6</a>  | Water System                             |
| <a href="#">3.7</a>  | Gas Supply                               |
| <a href="#">3.8</a>  | Electrical Supply                        |
| <a href="#">3.9</a>  | Exchanging A Boiler                      |
| <a href="#">4</a>    | COMMISSIONING OF THE BOILER              |
| <a href="#">4.1</a>  | Initial Flushing                         |
| <a href="#">4.2</a>  | Gas Supply                               |
| <a href="#">4.3</a>  | Electrical Installation                  |
| <a href="#">4.4</a>  | LP Gas Conversion                        |
| <a href="#">4.5</a>  | Initial Firing                           |
| <a href="#">4.6</a>  | Hot Flushing                             |
| <a href="#">4.7</a>  | Checking The Gas Pressure                |
| <a href="#">4.8</a>  | Timing The Gas Meter                     |
| <a href="#">4.9</a>  | Handing Over To The User                 |
| <a href="#">5</a>    | FAULT FINDING                            |
| <a href="#">5.1</a>  | Electrical Control Sequence              |
| <a href="#">5.2</a>  | Fault Finding Flow Chart                 |
| <a href="#">5.3</a>  | Continuity Checking                      |
| <a href="#">5.4</a>  | Functional Flow Wiring Diagram           |
| <a href="#">5.5</a>  | Electrical Wiring Diagram                |
| <a href="#">5.6</a>  | Illustrated Wiring Diagram               |
| <a href="#">6</a>    | SERVICING                                |
| <a href="#">6.1</a>  | Pre Service Checks                       |
| <a href="#">6.2</a>  | Recommended Routine Service              |
| <a href="#">7</a>    | REPLACEMENT OF PARTS                     |
| <a href="#">7.1</a>  | General                                  |
| <a href="#">7.2</a>  | Precautions                              |
| <a href="#">7.3</a>  | Access                                   |
| <a href="#">7.4</a>  | Electrical                               |
| <a href="#">7.5</a>  | Gas Orifice                              |
| <a href="#">7.6</a>  | Spark Ignition/Flame Detection Electrode |
| <a href="#">7.7</a>  | Burner Head & Burner                     |
| <a href="#">7.8</a>  | Heat Exchanger                           |
| <a href="#">7.9</a>  | Air Screen                               |
| <a href="#">7.10</a> | Condensate Trap                          |
| <a href="#">7.11</a> | Pressure Gauge                           |
| <a href="#">7.12</a> | Sight Glass                              |
| <a href="#">7.13</a> | HT Ignition Lead                         |
| <a href="#">7.14</a> | Air Vent                                 |
| <a href="#">7.15</a> | Air Orifice                              |



## BENCHMARK INITIATIVE

As part of the industry wide "Benchmark" Initiative all Keston 170 boilers now include a Benchmark Installation, Commissioning and Service Record Log Book. Please read this carefully and complete all sections relevant to the appliance installation. The details of the Log Book will be required in the event of and warranty work being required. There is also a section to be completed after each regular service visit. The completed Log Book should be left with the customer.

## CORGI CONTACT INFORMATION

The boiler should be installed and serviced only by CORGI registered operatives. All CORGI registered Installers carry a CORGI ID card, and have a registration number. **Both should be recorded in the Benchmark Log Book.** You can call CORGI direct on 01256 372300.

# 1. GENERAL INSTRUCTION

## 1.1 DESCRIPTION

The Keston Condensing Boiler is unique in its concept and design. While the application for which the boiler was designed is the same as those which other boilers are used, the Keston boiler has the added advantage of very high efficiency, and small diameter plastic flue which can be extended to 15 metres horizontally or vertically.

The Keston uses a high power combustion blower to deliver a pre-mix of gas and air to a downward firing burner in a high efficiency, single pass heat exchanger. Normally the combustion temperature of the air gas mixture is around 1800°C but the Keston achieves combustion at an amazing 1000°C thereby reducing the NO<sub>x</sub> emissions.

The flue system is room sealed and fan powered. The ignition is direct spark and fully automatic. The boiler housing is **not** waterproof. The boiler should be installed in a position where it will always be dry. A small air intake point is incorporated within the appliance cabinet to ensure that the interior of the cabinet is maintained under a slight negative pressure. This is a safety feature to ensure no products may leak out of the cabinet into the installation space.

The boiler is suitable for connection to open vented or, preferably, sealed systems. The system must be pumped central heating or pumped central heating with combined indirect sanitary hot water. Gravity circuits must not be used.

Forming part of the boiler is the heat exchanger which is made from a highly corrosion resistant stainless steel, formed into tightly wound coil. The hot combustion gases from the central down firing burner pass through this coil imparting heat into the system water. Head characteristics of the boiler coil must be taken into consideration when calculating the pump size. The Keston boiler is not a high water content boiler and does not contain the metal mass, or water volume, of a cast iron or steel boiler. This boiler is of low mass and low water content and therefore responds faster when there is a call for heat. This feature requires a higher water pumping rate through the boiler otherwise localised boiling will occur within the boiler. Allow a pressure drop through the boiler of 13.75 ft head and a water flow of 13.2 gallons (60 litres) per minute.


The boiler selected must be sized relative to the total calculated heat loss of the building. The boiler rated output should not be greater than the total required to make up the calculated heat loss plus the heat required to provide sanitary hot water, if the system is not hot water priority design. If there are special conditions such as excessive sanitary hot water usage consult the manufacturer.

## 1.2 BOILER SCHEMATIC

Air is drawn into the boiler through a 50mm muPVC pipe. The air flow is proved by a differential pressure across the air control orifice. Gas is mixed with combustion air at the inlet to the fan. The gas flow is regulated by an orifice located in the housing downstream of the gas valve.

The gas and air are thoroughly mixed in the blower and fed into the burner located at the top end of the heat exchanger module. The gas and air mixture is ignited by a direct spark ignition control system and burns with a blue flame just off the surface of the burner. As the hot products of combustion pass downwards, they are cooled by exchanging heat with the circulating water which enters the heat exchanger coil at the bottom of the heat exchanger.

Fig. 1.2 - Boiler Schematic

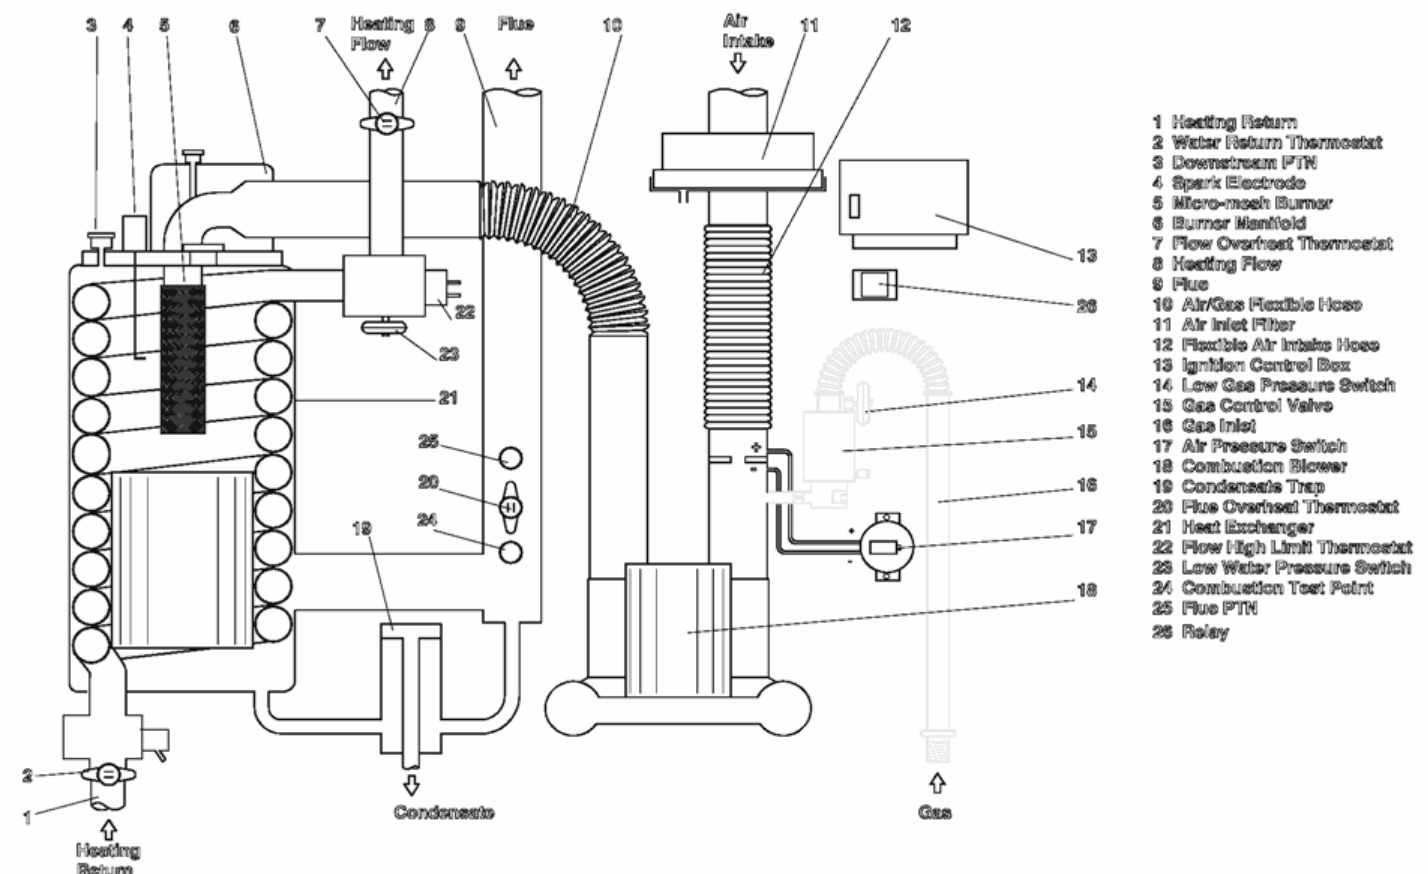

When the return water temperature is below 54°C, part of the water vapour in the combustion products will condense inside the heat exchanger, thus increasing the boiler efficiency by releasing the latent heat of condensation. This condensate falls to the bottom of the heat exchanger where it is separated from the flue gases and exits from the boiler through the condensate drain. Any condensate formed in the flue runs back down the flue way and is drained at the base of the flue connection to the heat exchanger or drain points within the flue..

The condensate is very slightly acidic (about the same acidity as vinegar) and should be piped in a plastic pipe. It is not harmful to the waste disposal system and may be disposed of as normal waste water.

The flue gases are piped in a 50mm muPVC pipe to the outside. The temperature of the flue gases are usually around 10°C above the temperature of the return water. The flue pipe should be terminated outside the building from where they cannot re-enter the

building or any other adjacent building.

The heating level may be controlled by room thermostats, hot water cylinder thermostats, programmer time clocks and energy management systems.

### 1.3 RELATED DOCUMENTS

The Keston Condensing Boiler must be installed in accordance with the current issue of the *Gas Safety (Installation and Use) Regulations*, current *IEE Wiring Regulations*, *Building Regulations*, *Building Standards (Scotland) Consolidation*, and the *Bye Laws of the local Water Undertaking*.

In addition, due account must be taken to the following Codes Of Practice:

|                  |   |   |
|------------------|---|---|
| <i>BS 6891</i>   | : | <i>Gas Supplies</i>   |
| <i>BS 6798</i>   | : | <i>Installation Central Heating Boilers</i>   |
| <i>BS 5449</i>   | : | <i>Installation Pumped Central Heating</i>  |
| <i>BS 5546</i>   | : | <i>Installation Domestic Hot Water</i>  |
| <i>BS 5440.1</i> | : | <i>Flues</i>  |
| <i>BS 5440.2</i> | : | <i>Air Supply</i>   |
| <i>BS 5482.1</i> | : | <i>Domestic Propane &amp; Butane Burning Installations</i>                            |
| <i>BS 7074.1</i> | : | <i>Expansion Vessels</i>  |
| <i>BS 7593</i>   | : | <i>Treatment of Water in Hot Water Central Heating Systems</i>                        |
| <i>BS 7671</i>   | : | <i>Requirments for Electrical Installations. IEE Wiring Regulations 16th Edition.</i> |

For Timber Framed Buildings, British Gas Publications DM2. Also British Gas Publications 'Guidance Notes For The Installation Of Domestic Gas Condensing Boilers' and 'Specification For Domestic Wet Central Heating Systems'.

### 1.4 PERFORMANCE DATA

|   |                     |          |
|---|---------------------|----------|
| Boiler Input (gross)  | kW                  | 55.0     |
|   | Btu/h               | 187,600  |
| Boiler Output To Water (80°C Flow 60°C Return)  | kW                  | 49.8     |
|   | Btu/h               | 170,000  |
| Boiler Output To Water (60°C Flow 40°C Return)  | kW                  | 52.4     |
|   | Btu/h               | 179,000  |
| Boiler Output To Water (50°C Flow 30°C Return)  | kW                  | 54.5     |
|   | Btu/h               | 186,000  |
| Burner Setting Pressure (Hot)   | mbar                | 10.0     |
|   | in wg               | 3.94     |
| Gas Consumption After 10 mins Running (CV of Gas - 38.7 MJ/m <sup>3</sup> ) (1038 Btu/Ft <sup>3</sup> ) | l/s                 | 1.42     |
|   | Ft <sup>3</sup> /hr | 180.73   |
| Max. Operating Flow Temp.   | °C                  | 80.00    |
| Max. Head (Open Systems)  | m                   | 30.50    |
|   | Ft                  | 100.0    |
| Max. Press. (Sealed Sys.)   | Bar                 | 2.70     |
| Min. Head (Open Systems)  | m                   | 2.5      |
|   | Ft                  | 8.0      |
| Inlet Gas Pressure  | mbar                | 20.0     |
|   | in wg               | 8.0      |
| Gas Orifice Size  | mm                  | 4.5      |
| Air Orifice Size  | mm                  | 23.0     |
| Recommended Temperature Differential  | °C                  | 10 to 15 |

### 1.5 GENERAL DATA

|                       |   |
|-----------------------|---|
| Main Burner           | <i>Keston Premix</i>                          |
| Gas Control           | <i>White Rogers 36E Series</i>                |
| Combustion Fan        | <i>Keston</i>                                 |
|                       | <i>Type LPB 103 220/240 0.6 kW 2900 RPM</i>   |
| Direct Spark          | <i>RAM Electronics Ignition</i>               |
| Ignition              | <i>Full Sequence Control</i>                  |
| Air Press. Switch     | <i>Tridelta FS6717-1428</i>                   |
| Filter                | <i>Keston Filter</i>                          |
| Gas Supply Connection | <i>0.75 inch BSPT Male (22mm to gas cock)</i> |
| Flow Connection       | <i>35mm Copper</i>                            |
| Return Connection     | <i>35mm Copper</i>                            |
| Power Supply          | <i>230V 50Hz</i>                              |
| Pwr Consumption       | <i>610 W</i>                                  |

|                 |                              |
|-----------------|------------------------------|
| Ext Fuse Rating | 10 Amp                       |
| Weight - Full   | 68 kg (150 lbs)              |
| Weight - Empty  | 61 kg (134 lbs)              |
| Data Badge Posn | Right Hand Panel Inside Case |
| Water Content   | 7.0 litres                   |

## 2. BOILER LOCATION

### 2.1 DIMENSIONS AND MINIMUM CLEARANCES

The boiler must be installed in minimum clearances shown to allow subsequent servicing, and safe operation.

### 2.2 SERVICE CONNECTIONS

Gas, water, air and flue pipe, condensation, and electrical connections are as shown. Gas :7 0.5 inch BSP male. Flow/Return 35 mm copper.

### 2.3 POSITION

The Keston is not suitable for external installation. The boiler may be installed in any room or internal space, although particular attention is drawn to the requirements of the current IEE Wiring Regulations and, in Scotland, the electrical provisions of the Building Regulations applicable in Scotland, with respect to the installation of the boiler in a room or internal space containing a bath or shower.

Where a room-sealed appliance is installed in a room containing a bath or shower, any electrical switch or appliance control, utilising mains electricity, should be so situated that it cannot be touched by a person using the bath or shower.

Figure 2.1.1 Minimum Clearances

*All dimensions in mm.*


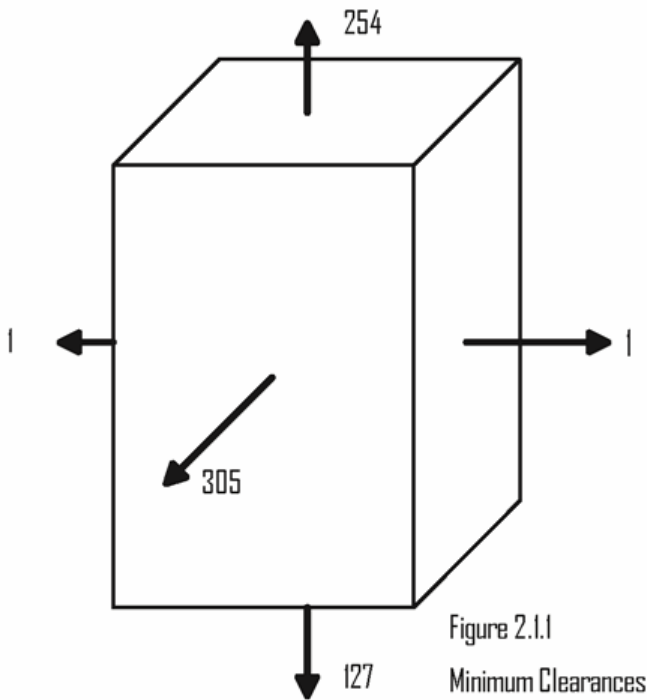


Figure 2.1.2 Dimensions

**Figure 2.1.2**  
**Dimensions**

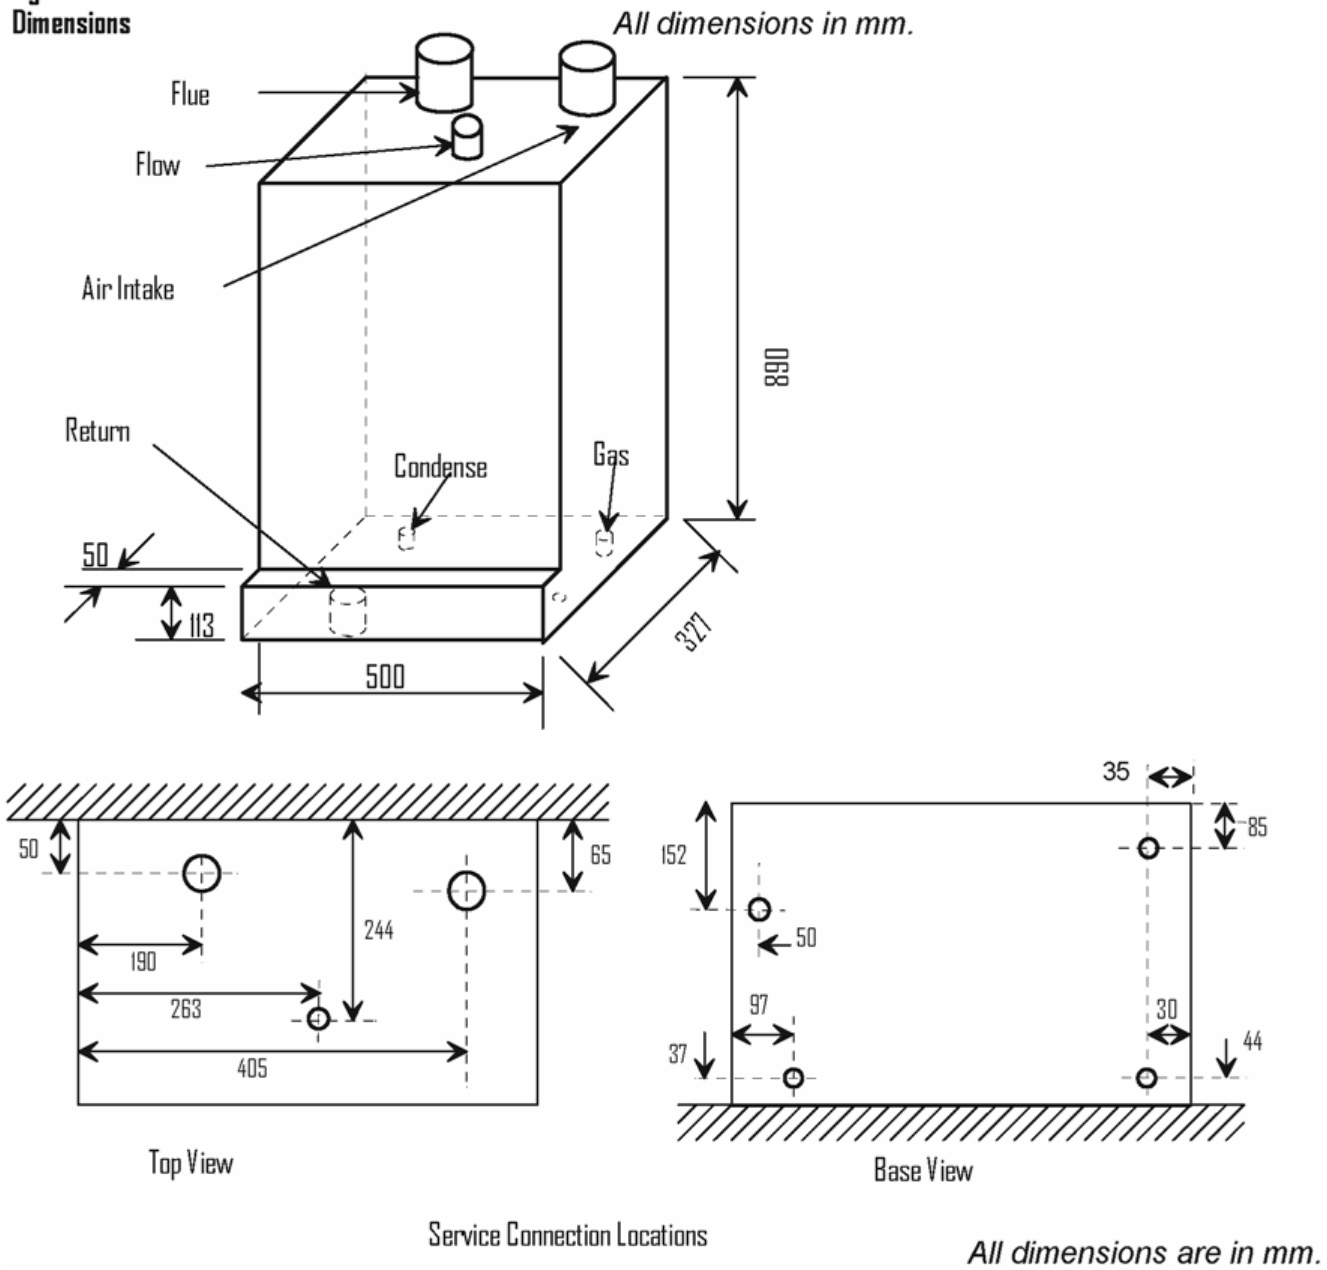


Compartment installation is permitted - such compartments must be constructed in accordance with BS 6798.

The wall on which the boiler is mounted must be of suitable load bearing capacity and must be non-combustible.

**IMPORTANT:**

*It is not recommended to install the boiler on a studded wall or similar - it is possible that the vibration from the fan would be amplified and transmitted to other parts of the property.*

Figure 2.3

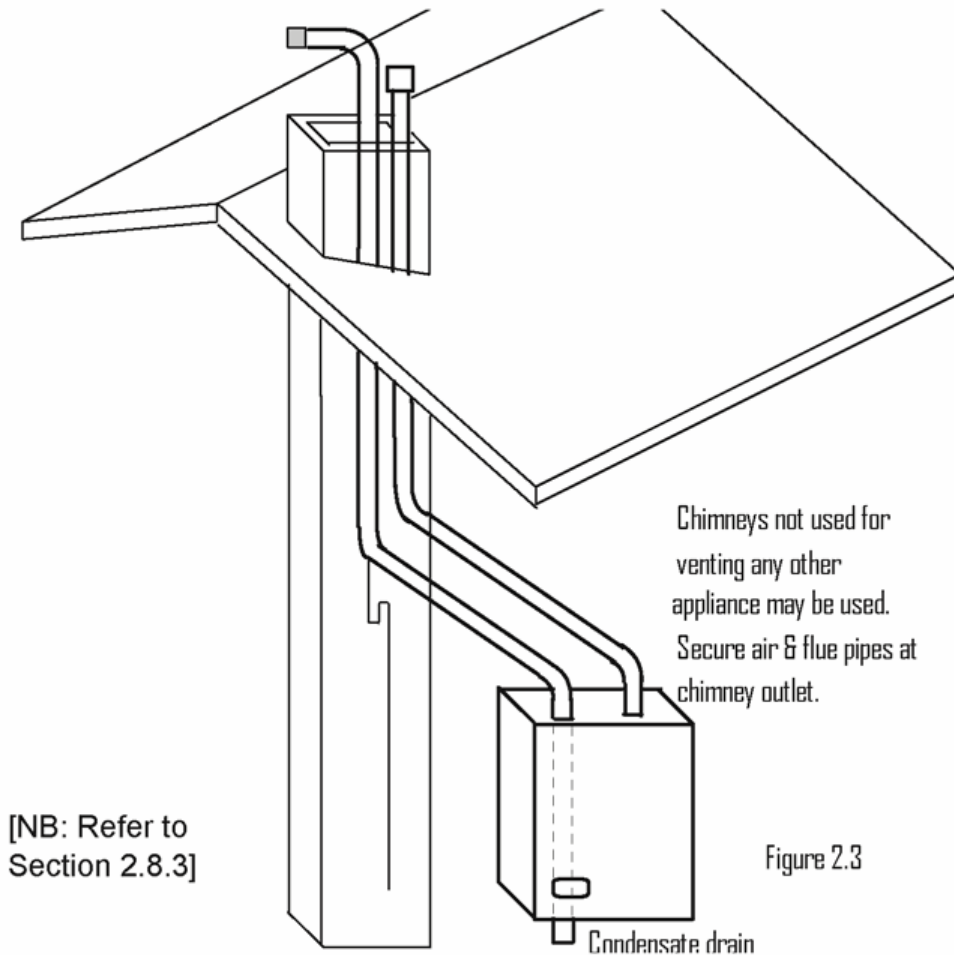

The Keston can be located virtually anywhere desired provided that all regulations are complied with. Because of the boiler's compact size and venting flexibility, the installation is not limited to a boiler room setting. Before locating the boiler near a living space consider whether the sounds generated by the boiler will be objectionable.

## 2.4 ELECTRICAL

### 2.4.1 Electrical Connections

The boiler must be connected to a 230V ~ 50Hz supply, fused at 10A. **All external controls and wiring must be suitable for mains voltage.** Wiring external to the boiler must be in accordance with current I.E.E wiring regulations and local regulations.

The method of connection to the mains electricity supply **must** facilitate complete electrical isolation of the boiler, preferably by the use of a fused, unswitched three pin plug and a shuttered socket-outlet, both complying with the requirements of BS 1363.

The appliance must be connected to the supply via a fused double pole switch having at least 3mm (1/8 inch) contact separation in both poles, serving only the boiler and the system.

The connection point to the mains supply should be readily accessible and adjacent to the boiler, except for rooms containing a bath or a shower. Refer to [section 2.3](#) Position.

### 2.4.2 External Wiring & Controls

1. The boiler is designed so that **all** control wiring is external to the boiler. Hence, any programmers or room thermostats etc must act by switching the 230V supply to the boiler.
2. System designs which allow the boiler to fire when there is no pumped circulation must **NOT** be used.
3. A programmer may be used with zone valves to give independent control of central heating and hot water.

## 2.5 BOILER SIZE SELECTION

The size of the boiler to be used is determined by the total calculated heat loss of the building. Match the calculated heat loss with the boilers rated output. *If a boiler is installed with an output rating greatly exceeding the total capacity of the distribution system the efficiency of the boiler will be reduced.*

## 2.6 GAS SUPPLY

A gas meter should be connected to the service pipe by the local gas region or their contractor. An existing meter should be checked preferably by the gas region to ensure that the meter is adequate to deal with the rate of gas supply required. Installation pipes should be fitted in accordance with BS 6891.

### **Minimum/Maximum Natural Gas Pressure:**

Natural gas pressure before the gas valve must be maintained at 20 mbar (8 in WG) while the boiler is running. Gas pressures above or below this level will lead to problems associated with the gas valve's internal pressure regulator.

Supply pipes to the boiler must not be sized less than the boiler inlet connection (22 mm). Due consideration must be given to the supply pressure to other gas appliances in the premises. Reduction in dynamic gas supply pressure will result in intermittent ignition failures. Ensure gas supply pipe work is adequately sized for the length of run from the meter to the boiler.

A gas cock is supplied loose with the boiler. This cock should be fitted in the gas line to the boiler as close to the boiler as possible so that it is easily identified as the cock to isolate the boiler.

## **2.7 WATER SYSTEMS**

All piping must be installed in accordance with all applicable local and Water Supply Bylaws for forced hot water heating systems.

Consideration must be given to pipe capabilities and pressure drop through the piping.

Water treatment must be carried out to BS 7593 : Treatment of Water in Hot Water Central Heating Systems.

Pump isolating valves must be positioned as close to the pump as possible.

a The Keston 170 is suitable for use on open vented water systems with combined feed and vent.

b It is preferable for use on sealed water systems, provided the appropriate components required (see [Section 2.7.2 Sealed Systems](#)) are included in the system.

c Any system must be thoroughly flushed clean of grease, dirt and debris, prior to connection with the boiler. A trap should be installed in the flow line to collect any solder, or other debris, from the installation.

d All water systems must be constructed to comply with requirements of the Local Water Authority.

e Only fully pumped systems can be used - gravity systems are strictly not suitable.

f Always use a system complying with the requirements of BS 5449 and BS 6798.

g The system must be so arranged that there shall always be a minimum flow of 13.2 gpm (60 litres/min) when the boiler is firing. This can be via a specially installed by-pass arrangement.

h Copper tubing to BS 2871 Part 1 is recommended.

i Jointing should be either with capillary, threaded or compression fittings. Pipes should have a gradient to ensure air is passed easily to vent points and water flows readily to drain points.

j Draining taps must be located in accessible positions which permit the draining of the boiler and hot water storage vessel. Draining taps should be at least 22 mm in nominal size and be in accordance with BS 2879.

### **AIR VENT POINTS**

k These must be fitted at all high points where air will naturally collect and must be sited to allow complete draining of the system.

#### **2.7.1 Open Vented Systems**

A typical system is shown in [Figure 2.7.1](#) which includes a combined feed and vent. Note there must be no valve between the boiler flow and the open vent. Note that the minimum static head required is 9 ft at the boiler flow pipe. If the cold feed/vent is not brought to the flow pipe as shown, then the pressure loss across the heat exchanger may have to be taken into account when estimating the static pressure.

Figure 2.7.1 : Open Vented System Diagram



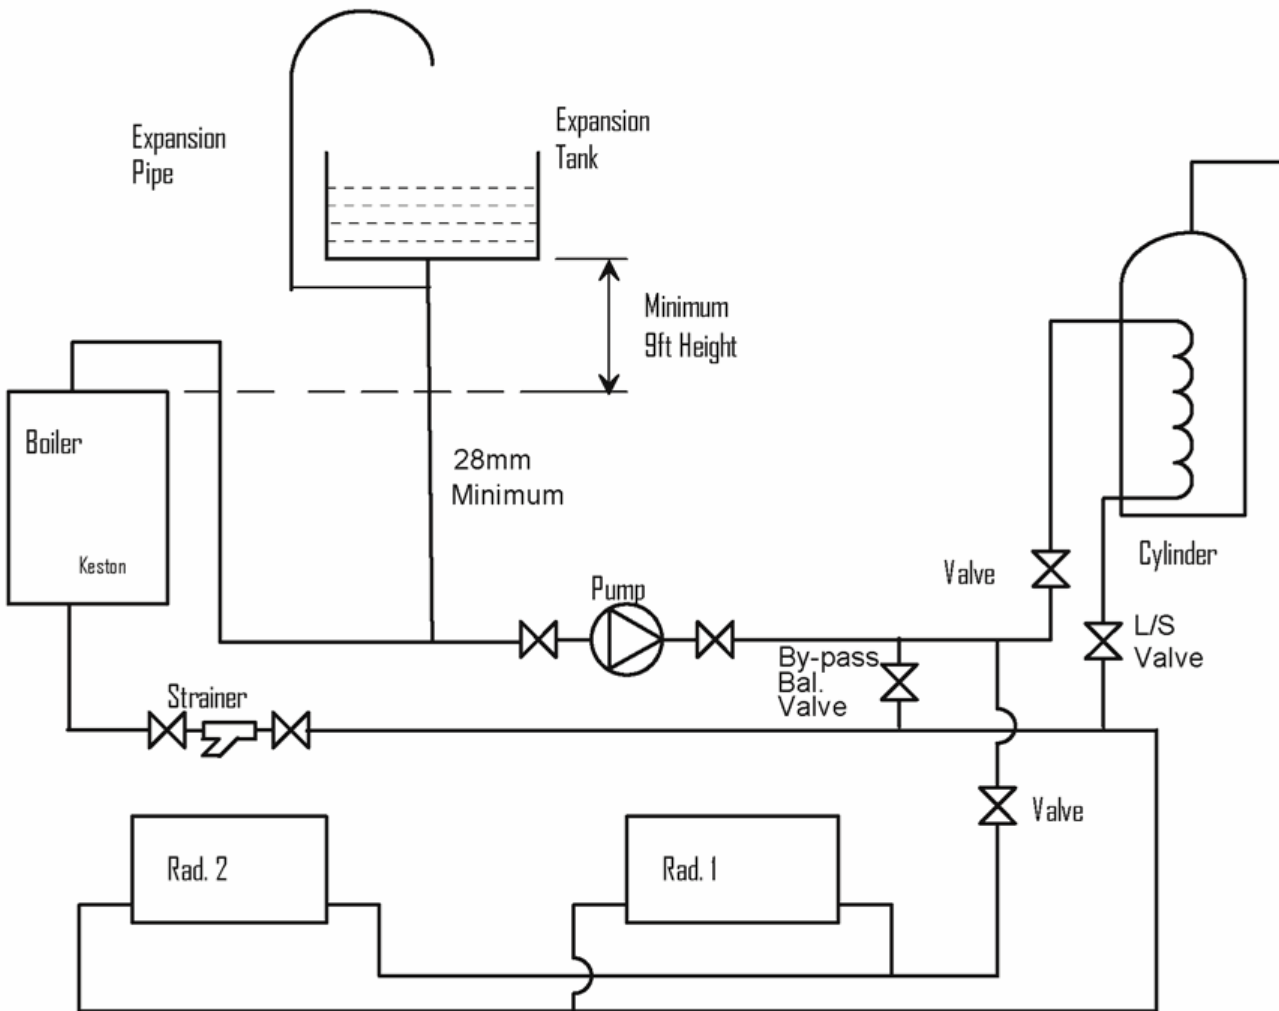


Figure 2.7.1: Open Vented System Diagram

Although suitable for open vented systems with combined feed and vent arrangements, the Keston is a low water content boiler. As such, any air entrainment within the system water will produce boiler “kettling”. It is therefore recommended, if in any doubt, to consider the use of sealed systems where possible.

### 2.7.2 Sealed Systems

Sealed systems must be designed in accordance with BS 5449 and BS 7074 Pt1. A typical sealed system is shown in [Figure 2.7.2](#). It must include :

Figure 2.7.2 : Sealed System Diagram

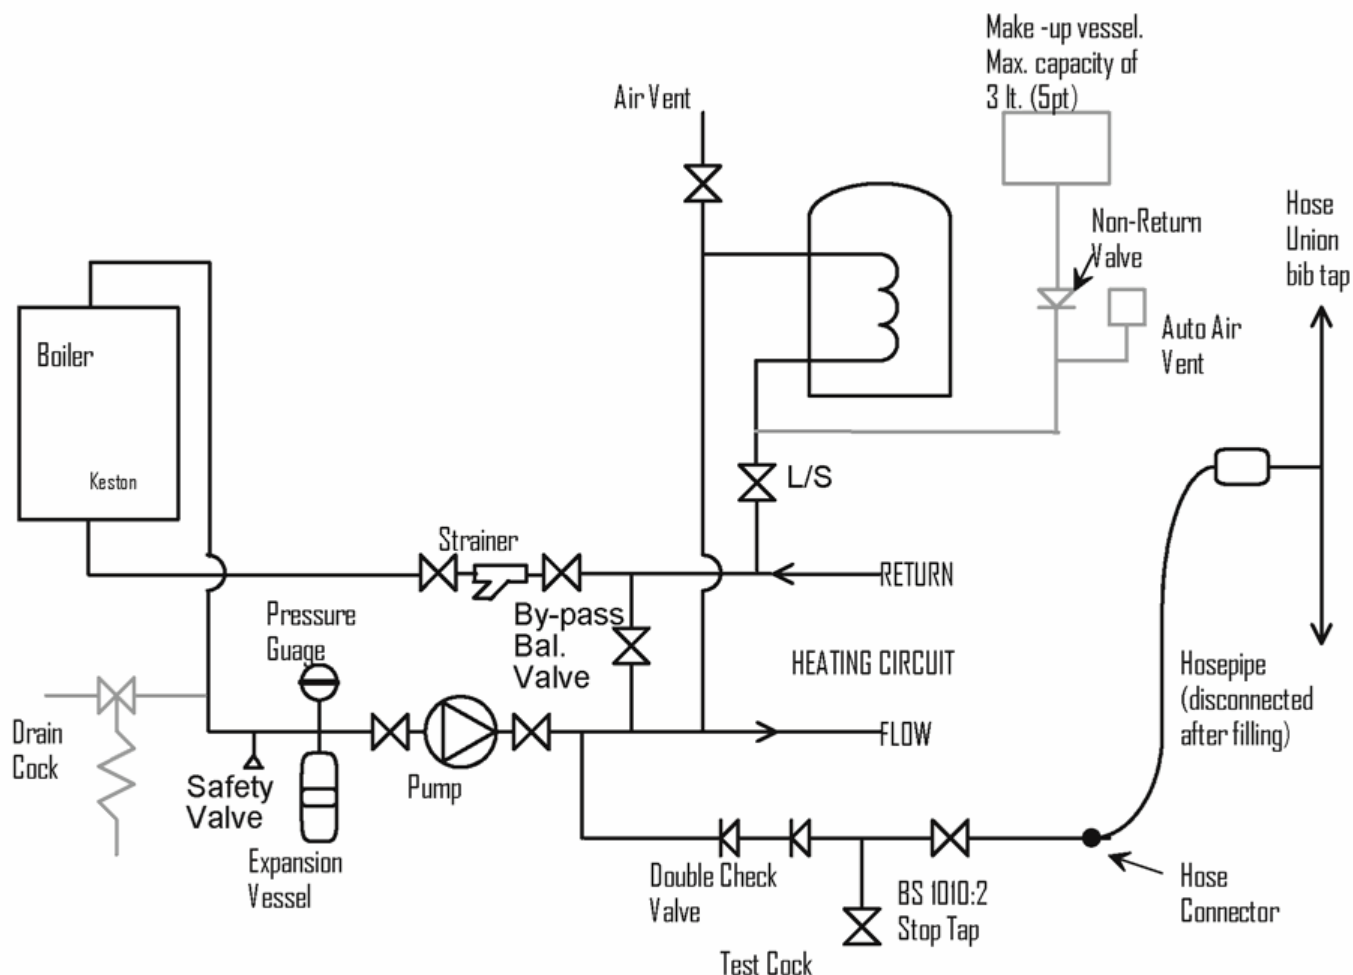


Figure 2.7.2 : Sealed System Diagram

- i. A safety valve fitted on the flow, adjacent to the boiler. It must be non adjustable and preset to 3 bar. A drain pipe must be attached, at least as big as the valve connection, and routed to drain in any area not hazardous nor where it may be subject to freezing.
- ii. An expansion vessel complying with BS 4814 and sized in accordance with the requirements of BS 5449 and BS 7074 Pt 1. The vessel must be positioned on the inlet to the pump.
- iii. A filling point, in accordance with local water authority requirements.
- iv. A method of system make-up (automatic or manual), in accordance with local water authority requirements.
- v. There must be no permanent connection of mains water to the boiler system.
- vi. The installation must be designed to work with flow temperatures of up to 110°C.

All components of the system including the heat exchanger of the indirect cylinder must be suitable for a working pressure of 3 bar and a temperature of 110°C. Care should be taken in making all connections that the risk of leakage is minimised.

### 2.7.3 Hot Water System (if applicable)

The hot water storage vessel must be of the indirect type (certain direct cylinders can be used provided they are suitably adapted by fitting an immersion calorifier). **DIRECT CYLINDERS MUST NOT BE USED.** Further guidance is provided in BS 1394. It is advisable to fit a lockshield valve on the cylinder return to enable balancing of the flow rate through the cylinder.

### 2.7.4 Boiler By-pass Piping

Boiler water flows are critical to the operation of the boiler. If flow cannot be maintained through the system piping to meet the minimums required by the boiler (see paragraph 2.7 (g)). Insufficient water flows through the boiler will cause the boiler to "kettle" or even produce steam which can damage the heat exchanger and will invalidate the heat exchanger warranty.

It is normally advisable to incorporate a boiler by-pass in the system, especially if thermostatic radiator valves are used. The by-pass should be fitted with an automatic by-pass valve to permit balancing of the by-pass flow rate. The flow/return differential should be 10°C to 15°C. The valve should be adjusted to maintain this condition with all thermostatic radiator valves closed.

### 2.7.5 Air Elimination


In the initial charge of water to the boiler system and in all subsequent additions of water to the system some air will be dissolved in the water. As the water is heated the air is driven out of the solution and will collect in high spots in the system. **These air bubbles can interfere with pumping and heat transfer and must be eliminated.**

Installation of air bleed valves at the high spot(s) in the system will allow for air elimination when filling the system and will allow re-venting in a day or so after all air has been driven out of solution.

### 2.7.6 Strainers

Debris in the heating system can cause noise if it enters the heat exchanger. Fitting of a Y-strainer ahead of the circulating pump will trap any debris left in the system and will protect the pump from damage. The boiler guarantee does not cover heat exchanger failure due to debris abrasion within the system.

Figure 2.7.6 Strainers

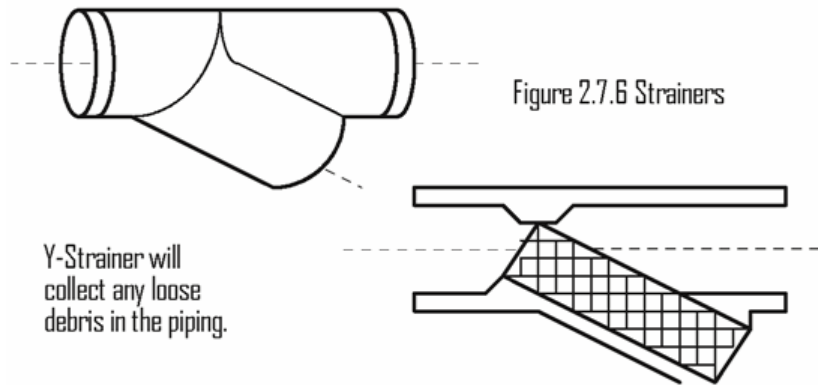

### 2.7.7 Pump Selection

The Keston boilers have low water content heat exchangers with a high resistance to flow, when compared with cast iron heat exchanger boilers. As a result selection of the correct pump is essential in order to avoid localised boiling within the heat exchanger. The selected pump must be capable of maintaining the required flow rate for the boiler against the pressure losses contributed by the boiler.

**The Keston 170 condensing boiler offers a hydraulic resistance of 4.2m (13.75ft) water at the required flow rate of 60 l/m (13.2 gpm).**

Figure 2.7.7 : Pressure Loss Graph

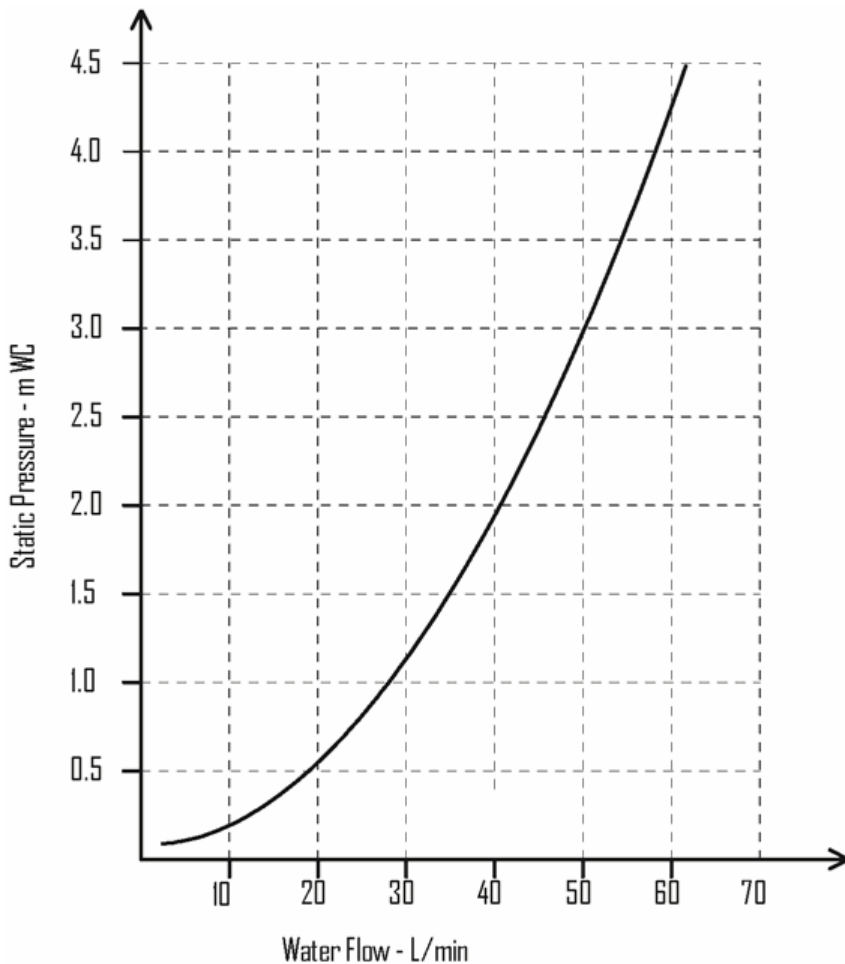


Figure 2.7.7 : Pressure Loss Graph

If a single pump is to be used for the entire installation the boiler resistance must be added to the pressure loss caused by the rest of the system and a pump selected that is capable of meeting the flow rate required at the total pressure loss generated by the boiler and the rest of the system. The selected pump must comply with BS 1394. It is important to note that the minimum flow rate must be maintained whenever the boiler is firing. Systems using zone valves must be specifically designed to only fire the boiler when the pump is running and the minimum flow rate can be achieved.

## 2.8 FLUE SYSTEM

### 2.8.1 Design

Individual air supply and flue outlet pipes are used. The material used for flue outlet &/or air inlet must be **muPVC** to BS 5255 and of an internal diameter of 51 mm.

Both flue outlet terminal and air inlet terminal are supplied and are illustrated in [Figure 2.8.1](#) above.

Figure 2.8.1 : Terminals

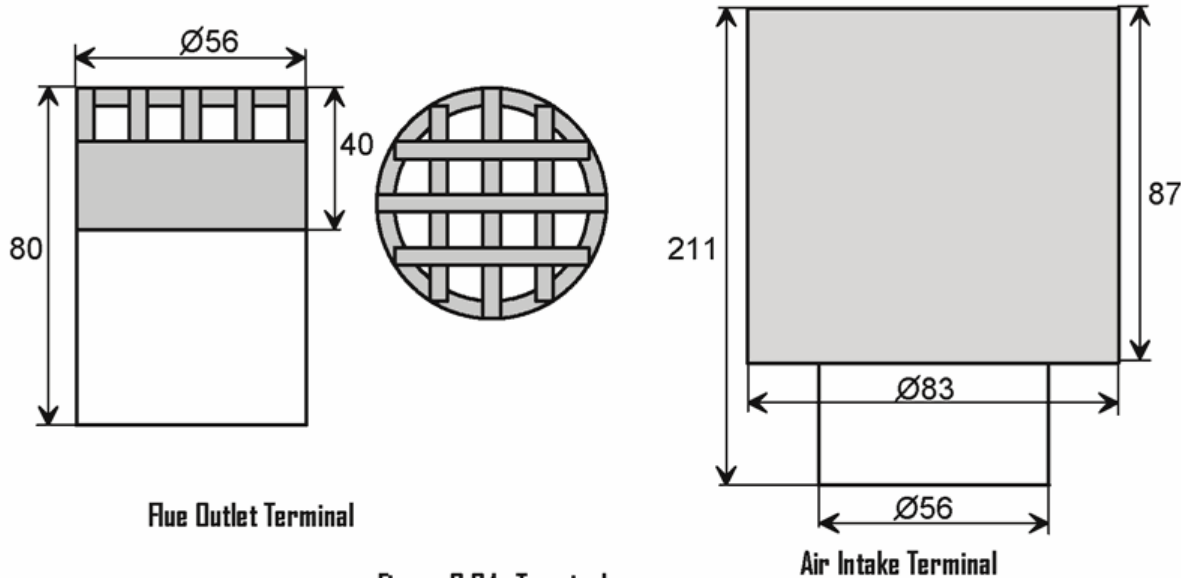


Figure 2.8.1 : Terminals

### 2.8.2 Maximum Lengths

The maximum lengths of both air inlet pipe and flue outlet pipe, when no bends are used, are as detailed below.

|                            |   |        |
|----------------------------|---|--------|
| Maximum Air Inlet Length   | : | 15.0 m |
| Maximum Flue Outlet Length | : | 15.0 m |

However, each bend used has an equivalent length that must be deducted from the maximum straight length stated above. Knuckle bends must not be used.

A 92.5° sweep elbow is equivalent to 1.0m straight length.

#### Example:

Air inlet uses two one 92.5° sweep elbows. Hence, maximum length permissible (ie a+b in [figure 2.8.2](#)) = 15.0m - 1.0m - 1.0m = 13.0m

Figure 2.8.2 : Flue & Air Maximum Length Example

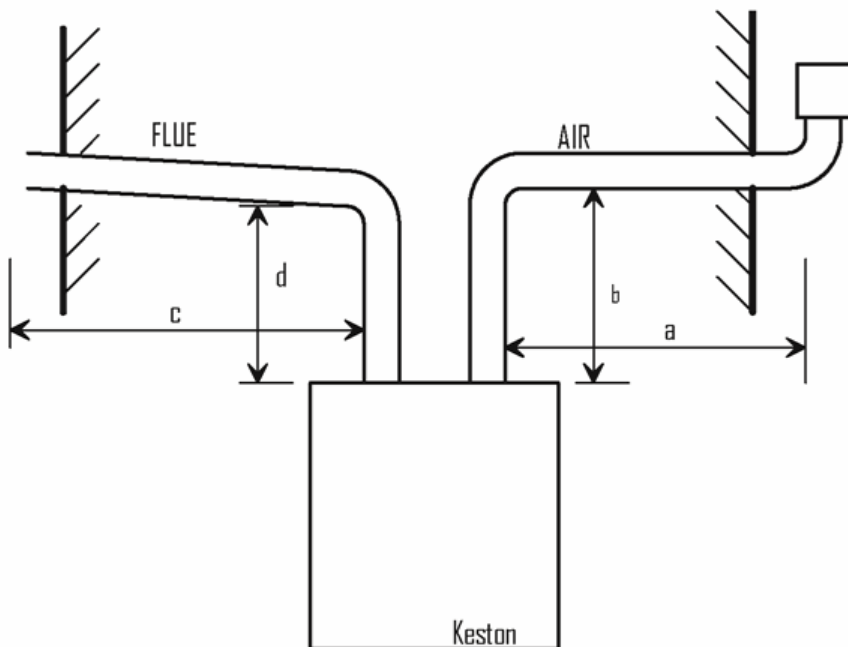


Figure 2.8.2 : Flue & Air Maximum Length Example

Flue outlet uses one 92.5° sweep elbow. Hence, maximum length permissible (ie c+d in [figure 2.8.2](#)) = 15.0m - 1.0 m = 14.0m

### 2.8.3 Slope


'Horizontal' flue outlet pipework **MUST** slope at least 5 degrees (80 mm per metre run) downwards towards the boiler. Pipework can be vertical. Only swept elbows can be used.

Air inlet pipework can be truly horizontal or vertical, or sloping in a downward direction towards the boiler but in this case rain, etc, **must** be prevented from entering the pipe. **There must be no troughs in any of the pipework, whether it be air inlet or flue outlet.** If a 80 mm per meter slope is not possible, contact Keston Boilers Technical Department for further guidance.

Due the low temperature of the flue gases further condensate will form within the flue system.

Drain points, with suitable traps, must therefore be incorporated within the flue system at the base of vertical flue sections in excess of 2m. These additional condensate drains must be run to discharge as detailed in [section 2.11](#). Such drain points can be formed using standard muPVC fittings. Refer to the example in [Figure 2.8.3](#).

Figure 2.8.3 : Flue Condensate Drain Point Example

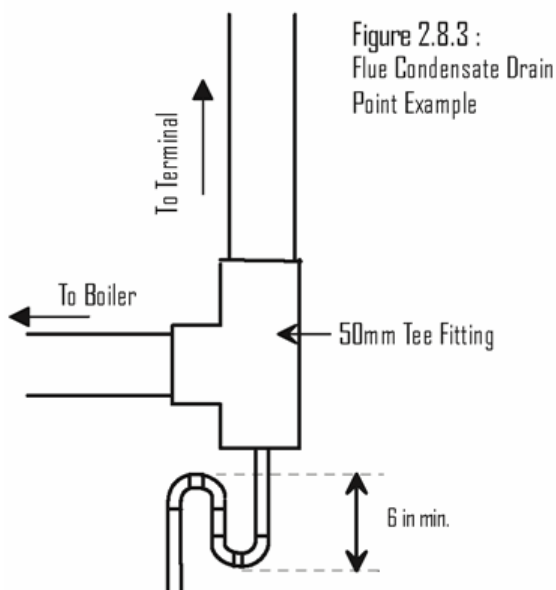

### 2.8.4 Terminations

Air inlet terminals must be facing upwards and positioned to ensure only fresh air is drawn into the boiler. The air terminal must be located outside of the building. Drawing of combustion air directly from a ventilated boiler room will invalidate the heat exchanger warranty. The air intake terminal must face upwards to prevent entry of rain into the air intake pipework.

The flue outlet terminal is designed to face outwards but can, if desired, be adapted to face in any direction BUT must not be directed in the region of the air inlet.

Table 2.8.4 Minimum Flue Terminations & Air Inlet Dimensions

|   | Dimensions (mm)                          | Flue Terminal | Air Inlet |
|---|--|---------------|-----------|
| A | Below openable window, air brick, etc.   | 300           | 50        |
| B | Below gutters, soil pipes, drain pipes.  | 75            | 75        |
| C | Below eaves.                             | 300           | 50        |
| D | Below balconies or car port roof.        | 200           | 50        |
| E | From vertical drain or soil pipes.       | 75            | 50        |
| F | From internal or external corner.        | 600           | 50        |
| G | Above ground or balcony or roof.         | 300           | 100       |
| H | From surface facing a terminal           | 600           | 100       |
| I | From terminal facing a terminal.         | 1,200         | 1,200     |
| J | From opening in a car port.              | 1,200         | 100       |
| K | Vertically from terminal on same wall.   | 1,500         | 1,500     |
| L | Horizontally from terminal on same wall. | 300           | 300       |

The two terminals are subject to the requirements of BS 5440 Pt 1 for clearances from features of the building although some can be decreased to the values indicated.

If either the air inlet or the flue outlet terminate at a height of less than 2m (6ft) above ground level the termination must be protected by a suitable guard. The K4 terminal guard, manufactured by Tower Flue Components Ltd, is suitable for this purpose and can be obtained from Keston Boilers.

The Keston condensing boiler, as with any condensing boiler, will generate a condensate "plume" from the flue terminal in all weather conditions. Consideration must therefore be given to the effect of this "plume" when selecting a location for the flue terminal. It is advisable, for horizontal flue terminals, to place a 45° elbow at the end of the flue to direct the condensate plume up and away from the property.

### 2.8.5 Clearances From Wall

Flue outlet and air inlet terminations must be at least 60 mm and 95 mm respectively from the wall face.

### 2.8.6 Distance Between Flue Outlet & Air Inlet

There is no maximum - the terminations can be on opposite sides of the dwelling if desired.

A minimum clearance of at least 500 mm must be left between the terminations.

### 2.8.7 General Installations

All parts of the system must be constructed in accordance with BS 5440 Part 1, except where specifically mentioned in these instructions.

All pipework must be adequately supported.

All joints other than push-on or plastic compression connectors must be made and sealed with solvent cement suitable for muPVC pipes and conforming to BS 6209: 1982.

External wall faces and any internal faces of cavity walls must be made good.

## 2.9 AIR SUPPLY

The Keston is a room sealed appliance and therefore does not require purpose provided ventilation for combustion air.

## 2.10 COMPARTMENT INSTALLATION

The casing temperature of the Keston 170 is very low. Due to this fact, no compartment ventilation is required for cooling purposes.

## 2.11 CONDENSATE DRAINAGE

Being a condensing boiler, the Keston is fitted with a condensate trap at the base of the heat exchanger and flue assembly, with facility to connect to a drain point underneath the appliance.

**Use only plastic piping** and do not reduce below 15mm internal diameter within the dwelling. Condensate should preferably be drained into the sanitary waste system or, alternatively, the rainwater system of the property.

Termination of the pipe must be either at a branch or stack internal to the house, or externally at an open gully. Alternatively, discharge into a purpose made condensate soakaway can be considered. Existing or purpose built drains must use suitable corrosion resistant material as condensate is mildly acidic.

A minimum slope downwards towards the drain of 1 in 20 is essential. Freezing of the termination and pipework must be prevented. Any drainage pipes outside the property must be at least 32 mm inside diameter.

## 2.12 RADIANT FLOOR HEATING

The low operating temperatures of this type of system lead to very good operating efficiencies. In fact, under floor heating can produce in excess of 95% operating efficiency from a Keston condensing boiler.

Water temperatures in radiant floor heating systems must be kept relatively low, generally under 48°C, so that surfaces do not become uncomfortably warm to the touch. If radiant heating is only one application for a multi-zone system which also requires higher delivery water temperatures for other zones (i.e. water heating, skirting heaters etc.) then the radiant floor zone temperature will need to be controlled separately from the boiler.

If radiant floor heating is the only application of the boiler, the boiler's maximum operating temperature can be lowered accordingly by introducing a supplementary control thermostat within the control system of the installation.

Mixing valves are also available which will mix return water from the system with boiler output water to dilute the temperature of water transmitted to the distribution system. Mixing valves may create problems with low flow and high temperatures through the boiler, unless care is taken to design a system which will provide proper flows and will fully load the boiler. Keeping the boiler's temperature high will prevent the boiler from operating at peak efficiencies. Systems which maintain boiler temperatures in this way should be avoided.

If only a portion of the boiler's available output is to be used for radiant floor heating a thermal storage tank will improve the boiler's operation and give adequate control of temperature for the distribution system. By heating water to be distributed to the radiant floor zone to the proper temperature in an indirect-fired water heater, full load conditions will be available to the boiler because the heat exchanger in the tank can be sized to match the boiler's output. The tank's thermostat can be set at the optimum operating temperature needed by the distribution system and short-cycling of the boiler will be prevented. An insulated thermal storage tank without the heat exchanger may also be used.

## 2.13 LOW WATER VOLUME BOILER VS. CAST IRON BOILER

Because of their high water content and mass of metal, cast iron and steel boilers are less responsive but somewhat more forgiving of design errors. Short-cycling of the burner on the temperature limit control is less pronounced, though no less detrimental to operation, because the boiler itself will absorb and radiate a significant amount of heat. Low water volume boilers respond more quickly to a call for heat, can be made more compact and lightweight, but must have adequate heat delivery systems to avoid short-cycling of the burner on the temperature limit control. The heat delivery system's output must be equal to or greater than the boiler's output to fully load the boiler or short-cycling will occur.

Likewise, pumping rates of water through low water volume boilers must be maintained so that water is moved through the boiler fast enough so as not to reach boiling temperatures. The slower the water moves through the boiler the more heat it will absorb and the higher the temperatures will rise. Consequently, the pump selected must be adequate to maintain the critical flow of water.

## 2.14 DETERMINE RADIATION NEEDED ROOM-BY-ROOM

A radiator or convector's ability to deliver heat is related to the water temperature and the rate of delivery to the unit. Most systems in the past have been rated at about 80°C. Higher efficiencies can be gained from a condensing boiler if ratings published at lower temperatures are used. However, this is not imperative. With normal 80°C ratings used a condensing boiler will still deliver significantly higher efficiencies than a non-condensing boiler. Lower water temperatures in the system tend to increase the efficiency of the boiler and will help assure that the boiler is subjected to a sufficient load to avoid short-cycling.

The Keston boilers are capable of temperatures of up to 80°C but the higher the temperature of the return water, the lower the efficiency of the system. This is true of all boilers, though all non-condensing boiler *must* be kept at higher temperatures to avoid condensation in the boiler which destroys such boilers quickly. Materials used in the Keston are made to withstand the condensates corrosive nature.

# 3. INSTALLATION OF THE BOILER

Read [Chapter 2](#) - Boiler Location and decide upon the position of the boiler.

Installation of the boiler is straightforward but consideration must be given to access to allow flue and air pipes to be pushed through walls and ceilings. The order in which the components are installed will depend upon particular site conditions, but in general it will be easiest and most accurate to install the boiler and then build up the flue outlet and air inlet pipes to the terminal - this is the sequence described.

## 3.1 WALL MOUNTING BRACKET

- a. Place the bracket on the wall horizontally with the pre-drilled holes at the bottom.
- b. Drill through the centre hole of the bracket, plug the hole and fix in position.
- c. Using a spirit level make sure the bracket is completely level and mark the position of the other screw holes.
- d. Remove the bracket and drill the holes in the positions marked. Plug these holes.
- e. Screw the bracket to the wall using screws of an appropriate size for the wall type (No. 12 × 2 inch wood screws normally suffice).
- f. Mark the bottom fixing hole and drill for a No 8 × 1 inch wood screw. Insert plug.

Figure 3.1 Wall Mounting Fixing Locations

All dimensions in mm.

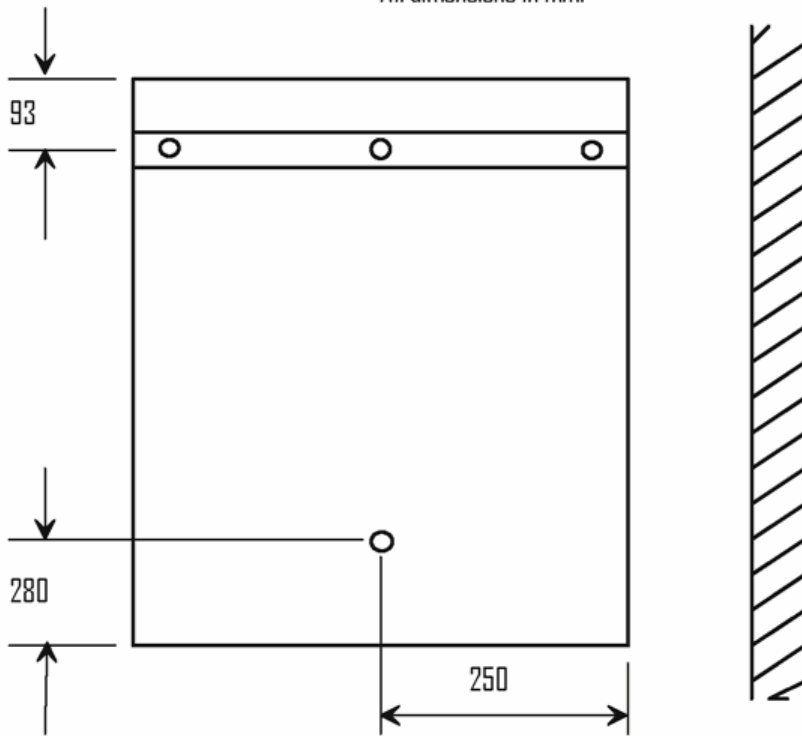


Figure 3.1 Wall Mounting Fixing Locations

### 3.2 MOUNTING THE BOILER

- a. Lift and locate the upper rear lip on the boiler to the boiler wall bracket.
- b. Move the boiler sideways to centralise the boiler on the bracket.
- c. Screw in the lower fixing screw.

### 3.3 ASSEMBLY PRACTICE

Remove all plastic debris and burrs when installing air intake piping. Plastic filings caused by cutting muPVC pipe must not be allowed to be drawn into the filter or combustion air blower. Prevent dust entering the air intake when cutting on building sites. Blower failure which is determined to be caused by plastic filings or other debris will not be covered by guarantee.

Combustion air filters are fitted to the Keston condensing boilers as standard. This filter must be examined at least once every year, and more often in particularly dusty and dirty areas.

The combustion air filter will prevent plugging of the burner caused by dirt being trapped in the burners outer mesh. The filter element supplied with the boiler is obtainable from Keston Boilers or its distributors.

### 3.4 INSTALLING FLUE AND AIR PIPES

Remember the flue pipe must slope downwards back towards the boiler and this is best achieved using 92.5° bends.

- a. From the two connections on the boiler, mark the positions of the two holes for the flue and air pipes on the wall(s) or ceiling. To allow access to drill the holes it may be necessary to temporarily remove the boiler. If the boiler stays put then it is imperative that the front panel and top access plate are replaced and the two plastic pipes capped off whilst drilling. Under no circumstances must debris from the wall or cut pipes be allowed to enter the appliance or the plastic pipework.
- b. Drill the two holes in the wall/ceiling, preferably using a core drill.


#### 3.4.1 Diameter of holes.

i) Allowance must be made for socketed lengths if these are to be passed through the holes :

|    |   |                     |
|----|---|---------------------|
| du | = | unsocketed diameter |
|    | = | 56 mm               |
| ds | = | socketed diameter   |
|    | = | 65 mm               |

ii) For 'horizontal' runs of flue pipe the holes must either be oversized or cut at a 5° slope (the latter may be difficult on long holes).



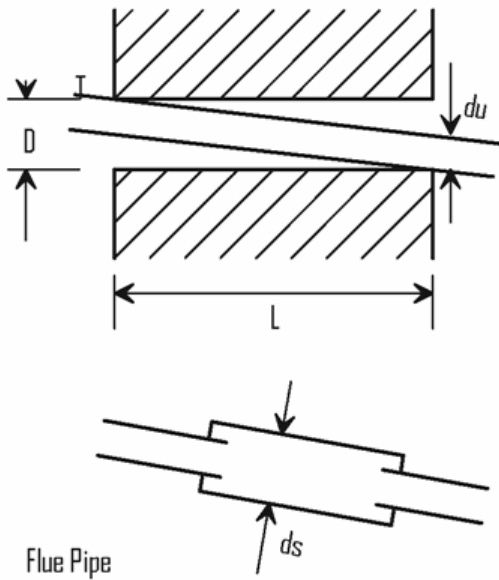

### 3.4.2 Oversizing

For every 1m length of run, L, the minimum diameter of the horizontal hole, D, must be  $du + 10$  mm or  $ds + 10$  mm respectively, assuming the pipe touches the wall at points T otherwise D will have to be increased by clearance from T. See [Section 3.4.3 - Examples](#).

### 3.4.3 Examples

|    |                  |    |   |                                 |
|----|------------------|----|---|---------------------------------|
| a. | Wall Depth       | L  | = | 750 mm                          |
|    | Unsocketted pipe | du | = | 56 mm                           |
|    | Diameter hole    | D  | = | $56 + \{(750/1000) \times 10\}$ |
|    |                  |    | = | 56+7.5                          |
|    |                  |    | = | 63.5 mm                         |
| b. | Wall depth       | L  | = | 2.3 m                           |
|    | Socketed Pipe    | ds | = | 65 mm                           |
|    | Diameter Hole    | D  | = | $65 + \{2.3 \times 10\}$        |
|    |                  |    | = | 65+23                           |
|    |                  |    | = | 88 mm                           |

c. Measure, cut and check the air and flue pipes to pass to the exit from the wall(s) or ceiling.


Always thoroughly deburr all pipes and, most important, remove shavings from within the pipe.

d. Assemble, using adhesive, the pipework from the boiler connections to the exit from the first wall/ceiling (remount the boiler if removed). When pushing pipe through walls, ensure grit and dust is not allowed to enter the pipe.

Ensure pipes are fully engaged into sockets.

Connect the condensate drainage system and fill the condensate trap by pouring water down the boiler flue spigot (See [Section 3.5 Condensate Drainage](#)).

Make the final connection of flue and air pipe to the boiler using push on, or plastic compression couplings. Ensure that the connectors are set vertically otherwise leakage of condensate may occur which will corrode the casing. Do not use adhesive on the 'push on' end of the connecting couplings.

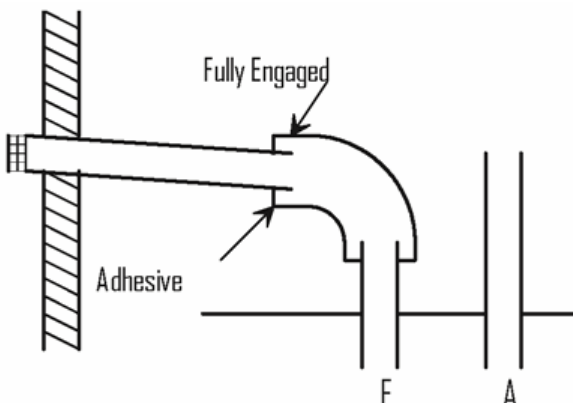

- e. Using the same methods drill any further holes (always covering existing pipework), cut and assemble the pipework.
- f. From outside, complete the two terminations - See [Section 2.8 Flue System](#) and make good all holes.
- g. Support any pipes whose route could be displaced either of its own accord or by accident. Any horizontal run over 1m or vertical runs of any length must always be supported. Brackets should be placed at intervals of approximately 1m.
- h. Check all connections for security and re-seal any joints using solvent cement where soundness may be in doubt.

**NOTE:**

*It is equally important to seal the air inlet with solvent cement as the flue outlet pipe joints.*

### 3.5 CONDENSATE DRAINAGE

Connect the condensate drainage system to the boiler. It is advisable to use a detachable fitting at connection to the boiler to enable easy removal for servicing.

Fill the condensate trap by pouring water into the boiler flue spigot until water is seen to flow freely from the condensate drainage system. Make the final connection of flue pipe to the boiler using the push on coupling supplied.

Details are provided in [Chapter 2 - Section 2.11 Condensate Drainage](#)

Connection : 22 mm plastic pipe.

### 3.6 WATER SYSTEM

Connect the flow and return pipework to the boiler. Ensure a detachable coupling is used at connection to the boiler (ie compression fitting) to enable heat exchanger removal if required. Details of system requirements are given in [Chapter 2 - Section 2.7 Water Systems](#).

Connections: 35 mm compression X 35 mm compression.

### 3.7 GAS SUPPLY

Connect the gas supply to the appliance. Details of gas supply requirements are given in [Chapter 2 - Section 2.6 Gas Supply](#). Supply of adequate gas pressure (with the boiler running) is critical to ensure reliable operation of the boiler.

Connections: 0.75 inch BSP male.

### 3.8 ELECTRICAL SUPPLY

The entry point for the electrical supply cable is in the base of the appliance (see [Section 2.2 Service Connections fig. 2.1.2](#)) via a cordgrip bush. Feed the cable through this bush and route inside the cabinet to the connection strip located to the front bottom right of the cabinet.

1. The electrical supply must be as specified in [Chapter 2 - Section 2.4 Electrical Supply](#).

**WARNING:**

***THIS APPLIANCE MUST BE EARTHED.***

2. All external controls and wiring must be suitable for mains voltage. Wiring should be in 3 core PVC insulated cable not less than 24/0.2 mm (0.75mm) to BS 6500 Table 16.

3. The supply connection may be via a 10 amp fused double pole switch, serving only the boiler and system controls. (Refer to [Chapter 2 - Section 2.4 Electrical Supply](#)).

4. Securely tighten the terminal screws and route the cable through the re-openable cable clips. Ensure all cables are secured and that the cord grip bush is tightened to securely grip the main cable at entry to the cabinet.

The mains cable must be connected to the terminals as follows:-

|   |   |                           |
|---|---|---------------------------|
| N | - | Blue wire (Neutral)       |
| L | - | Brown wire (Live)         |
|   | - | Yellow/Green Wire (Earth) |

Ensure connection is made such that if the cable slips in its anchorage the current carrying conductors become taut before the earthing conductor.

### 3.9 EXCHANGING A BOILER

Before removing an existing boiler add Fernox Supafloc, or equivalent cleaning agent, in accordance with the manufacturers instructions. Open all radiator valves and fire the boiler. When the system is fully heated, shut off the gas supply and drain down the central heating system.

**IMPORTANT:**

**The Keston condensing boiler contains components which could be damaged or blocked by grease, dirt or solder etc. It is essential that sludge or scale is removed from an existing system.**

**As a safety precaution it is advisable to fit an 'in line' strainer before the boiler. The guarantee provided with the Keston 170 does not cover damage caused by system debris or sludge.**

Connect the new boiler as instructed in this manual and fit in accordance with [Sections 3.1](#) to [3.8](#)

For sealed systems, fill to a pressure of about 2.7 bar. Check the complete system for water soundness. If leaks need to be rectified using flux or solder the system must be flushed cold again before proceeding.

Reduce the pressure to the Initial System Design Pressure for sealed systems, if applicable. Vent the system.

### Gas Supply

The complete gas installation up to the boiler service cock must be checked for soundness. BS 6891.

### Electrical Installation

Carry out preliminary electrical safety checks, i.e. Earth continuity, Polarity, Resistance to Earth, Short Circuit using a suitable test meter.


### Initial Firing

**The gas pressure setting is factory adjusted to within the required range and should not normally need re-adjustment.**

If the reading is incorrect then such factors as soundness of the air and flue pipe joints, pressure sensible joints and the gas inlet pressure (20 mbar required). If all joints are sound and the gas inlet pressure is satisfactory set the gas pressure to the required pressure. Full details of this procedure are given in [Section 4.7](#). This will ensure that combustion is good enough to allow combustion fine tuning to take place.

### Combustion Fine Tuning

It is advisable on all installations that the combustion quality is checked by measuring the carbon dioxide (CO<sub>2</sub>), or oxygen (O<sub>2</sub>), level. This procedure is detailed in [Section 4.9 Combustion Fine Tuning](#). Badly tuned combustion will lead to reduce the life of the boiler and invalidate the warranty.

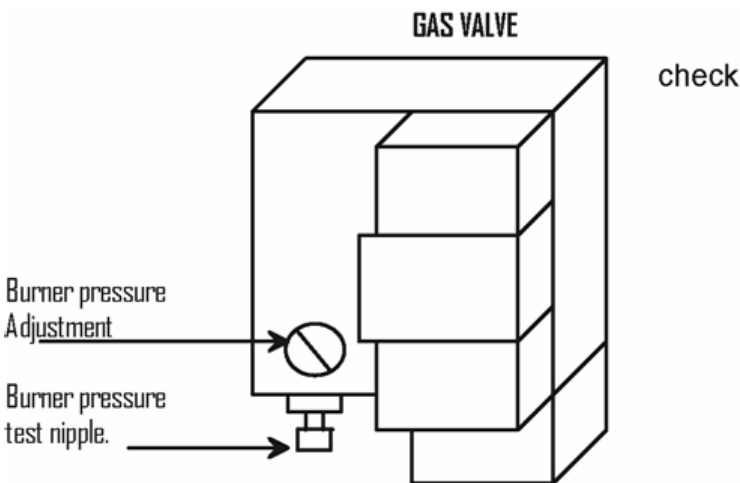

## 4. COMMISSIONING OF THE BOILER

### IMPORTANT:

**This condensing boiler contains components which could be damaged or blocked by grease, dirt, solder etc., from the water system. The following commissioning procedures must be followed precisely.**

### 4.1 INITIAL FLUSHING

All waterways within the Keston are either copper or high alloy stainless steel. As a result standard water treatment chemicals for conventional central heating boilers are suitable. In any event reference must be made to BS 7593 : Treatment Of Water In Hot Water Central Heating Systems.

- Disconnect the boiler from the system at the flow and return connections and temporarily link the flow and return pipes on the system.
- Flush the entire system until clean water is discharged, free from dirt, flux, solder etc. The use of a flushing chemical is recommended, e.g. Fernox Supafloc.

Sludge and scale must be removed from an existing system. Boiler failure due to system debris or sludge shall invalidate the guarantee.

- c. Connect the system to the boiler and fill in accordance with [Section 2.7 - Water Systems](#). At this stage, for sealed systems, fill to a pressure of about 2.7 bar.
- d. Check the complete system for water soundness. If leaks need to be rectified using flux and solder, the system must be flushed cold again before proceeding.
- e. Reduce the pressure to the Initial System Design Pressure for sealed systems, if applicable. Vent the system

## 4.2 GAS SUPPLY

The complete gas installation up to the boiler service cock must be checked for soundness. BS 6891.

## 4.3 ELECTRICAL INSTALLATION

Carry out preliminary electrical safety checks, i.e. Earth continuity, Polarity, Resistance to Earth, Short Circuit using a suitable test meter.

## 4.4 LP GAS CONVERSION

All Keston condensing boilers are built and shipped as natural gas fired units. Field conversion kits are available to convert Keston condensing boilers to use LPG. Suitable instructions are supplied with the LPG field conversion kits.

## 4.5 INITIAL FIRING

### **IMPORTANT:**

***Checking the gas pressure to the pre-mix burner requires a special procedure, outlined below, which must be carried out.***

- a. Purge the gas supply in accordance with BS 6891.
- b. Turn the gas service cock OFF.
- c. Loosen the screw in the burner pressure test point on the gas valve and attach a suitable gauge.
- d. Turn on the electrical supply, setting any external controls to call for heat.
- e. ON/OFF switch - select 'ON'. The amber light will illuminate on the ON/OFF switch, the red 'lockout' light will illuminate, the blower and pump will start and, after about 15 seconds, a spark will attempt to light gas at the burner for approximately 10 seconds. With the gas service cock off, the boiler will go to lockout - red light still illuminated, but the blower and pump will continue to run. At intervals of approximately 1 minute the boiler will make two further attempts to fire. After the final attempt the blower will run for a further 20 seconds before shutting down.
- f. Vent the water system.

### **IMPORTANT:**

***The Keston heat exchanger consists of a single coil which can trap an air pocket. Great care must be taken to ensure that water flow has been established through the heat exchanger and thus ensuring no air pockets remain in the heat exchanger and pipe work. Firing the boiler while an air pocket exists in the heat exchanger could damage it.***

g. Note the reading on the pressure gauge caused by the suction of the blower. This should be approximately minus 30 mbar. If it is not, check the system as follows:

*If the negative pressure exceeds 30 mbar, then it suggests that there is a possible restriction in the air inlet pipework.*

*If the negative pressure is less than 30 mbar, then it suggests that there is a possible restriction in the flue outlet pipework. Note the exact reading.*

- h. Turn the gas service cock to ON.
- i. Turn off the electricity supply, wait 10 seconds and turn back on. The boiler will again go through its ignition sequence but this time the main burner will light, provided all air has been purged from the gas supply to the boiler. When the burner is lit and the boiler is operating normally the green (run) lamp, the upper lamp adjacent to the flame symbol, will also be illuminated indicating successful ignition (If it does not and the green lamp is extinguished after 10 seconds, air is indicated - turn off and repeat the procedure).

If ignition does not occur, the green (run) lamp, the upper lamp adjacent to the flame symbol, will be extinguished and, at approximately 1 minute intervals, the electronic ignition system will make two further attempts to light the burner.

If the ignition is successful and the boiler is operating normally, the green (run) lamp, the upper lamp adjacent to the flame symbol, and the red (lockout) lamp will be illuminated simultaneously.

If after three automatic attempts the boiler still fails to ignite, the green (run) lamp, the upper lamp adjacent to the flame symbol, will be extinguished and the red (lockout) lamp will remain illuminated.

If, after five manual attempts (to allow for purging of any air in the gas line), the boiler still fails to ignite (indicated by the red (lockout) lamp) refer to [Section 5.2 - Fault Finding Flow Chart](#).

- j. Check for gas soundness between the gas service cock and connection to the burner manifold.

## 4.6 HOT FLUSHING


- Allow the system to heat up, checking for water soundness.
- Follow instructions provided with the cleaning agent, ie Fernox Supafloc. Turn off the boiler and flush the water system while still hot. Thoroughly flush the system with clear water.
- Refill the system using a quality water treatment such as Fernox CP3. For sealed systems, fill to the required Initial Design Pressure.

## 4.7 CHECKING THE GAS PRESSURE

With the boiler running measure the burner pressure at the burner pressure test nipple.

The gas setting is factory adjusted to within the required range and should not normally need re-adjustment unless the unit has also been converted to LPG as part of the installation. If the reading is incorrect then check such factors as soundness of the air and flue pipe joints and the gas inlet pressure (20 mbar required). If all joints are sound and the gas inlet pressure is satisfactory remove the brass dust cap covering the burner pressure adjustment screw on the gas valve (See [fig. 4.7](#)). Set the gas pressure to the required value as stated in table 4.7 by turning the exposed burner pressure adjustment screw (clockwise will increase burner pressure, anti-clockwise will decrease burner pressure).. This will ensure that combustion is good enough to allow combustion fine tuning to take place. Replace the brass dust cap to cover the burner pressure adjustment screw.

Fig 4.7 GAS VALVE

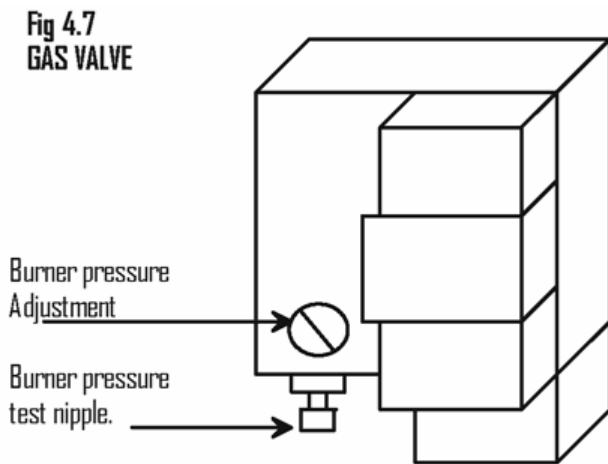

## 4.8 TIMING THE GAS METER - NATURAL GAS

After the boiler has been started, and with no other appliances using gas, time the gas meter to be certain that the unit is running at the proper gas input. Determine the cubic feet of gas passing through the meter and determine the input in Btu per hour. Input must be within plus or minus 3% of the rated input.

Time, in seconds, the time taken to pass 2 cubic feet of gas through the meter (ie one revolution of a 2 cu ft dial) or 0.1 cubic metres if the meter is of the new metric digital type. The Keston 170, when correctly set, should take 39.8 seconds for 2 cubic feet of natural gas and 70.3 seconds for 0.1 cubic metres of natural gas (assuming 1038 btu/h per cubic foot). Adjust the gas valve screw clockwise to increase the input (speed up the meter) or anticlockwise to decrease the input (slow down the meter) accordingly.

## 4.9 COMBUSTION FINE TUNING

Although the gas pressure is preset at the factory differing flue arrangements may require fine tuning of the gas pressures to produce the best combustion and ensure long burner life. It is advisable to check proper combustion by measuring gas input and the level of carbon dioxide, or oxygen, in the flue outlet from the boiler. Overfiring or underfiring the burner will reduce the longevity of the appliance.

Carbon dioxide is a colourless, odourless gas produced by all combustion processes. When the Keston condensing boiler is operating properly carbon dioxide (CO<sup>2</sup>) levels will be between 8.2 and 8.9% CO<sup>2</sup> for natural gas.

To measure CO<sub>2</sub> levels in the Keston boiler remove the 1/8" plug from the flue outlet pipe inside the boiler. Insert the probe of a combustion analysis meter and sample the gases as instructed in the test equipment's instructions.

If the CO<sup>2</sup> levels need raising increase the gas output by turning the brass screw, under the metal cap in the front of the gas valve, clockwise. Reduce CO<sup>2</sup> levels by turning this screw anti-clockwise.

If CO<sup>2</sup> levels do not respond to adjustments the burner is probably running with too much gas pressure. If, for instance, a clockwise adjustment to the brass screw in the gas valve produces a decrease in CO<sub>2</sub> the burner is too fuel-rich and not enough oxygen is present for proper and complete combustion.

## 4.10 HANDING OVER TO THE USER

It is important to fully explain the following :

a. Procedure to light and turn off the boiler, including isolation of the electrical supply if necessary.

b. The function of the lockout feature must be explained :

If the red light only is illuminated for more than four minutes, this means that the boiler has failed to light. Turn off the electrical supply and wait 20 seconds. Turn ON again and wait.

i. If lockout recurs immediately then the gas supply should be checked as ON, otherwise consult a Service Engineer.

ii. If it is not possible to relight, the boiler must be isolated and a Service Engineer called in to rectify the fault.

c. Advise that a reduction in the water pressure reading on the gauge, for sealed systems, indicates a leak which should be rectified before further use.

d. Advise that the appliance should be serviced by a competent person at least once a year.

e. Advise on frost precautions.

f. Hand over User Instructions.

## **5. FAULT FINDING**

### **5.1 ELECTRICAL CONTROL SEQUENCE**

When the external controls are calling for heat, power will be fed to the boiler connection strip at terminals L (Live) and N (Neutral). If the ON/OFF switch is also in the ON position the boiler ON lamp (amber) will be illuminated. Provided all temperature thermostats and pressure switches are closed, power will be fed to pins 1 & 2 on the control box, initiating the following sequence.


1. The boiler lockout lamp (red) will be illuminated
2. The fan will start.
3. When the fan reaches running speed, the Air Pressure switch, normally open, will close which will start the ignition sequence.
4. After a pre-purge period of about 15 seconds, the gas valve will open to allow gas to mix with the air at the suction side of the fan and the ignition spark will occur at the main burner.
5. When the burner ignites, the flame is detected by the control box through the combined flame sensor/ignitor and the ignition spark is stopped. Both the lockout lamp (red) and the boiler run lamp (green), the upper lamp adjacent to the flame symbol, will be illuminated. The boiler is now in its normal run condition.
6. The burner will continue to operate until the gas valve interrupts the gas supply. The gas valve will be closed by the control box if power is interrupted to the boiler by any external control or the boiler thermostat. If an interruption to the gas supply causes loss of the flame, the control box will pause for approximately 10 seconds and then attempt to re-ignite the unit. If this attempt fails, i.e. due to continued lack of gas supply, the boiler will make two further attempts to ignite at intervals of approximately 1 minute and will then go to a lockout state (red lamp illuminated only). Once the gas supply has been resumed the boiler can be reset by turning the boiler off and then on again on the boiler control panel.
7. The boiler can also be shut down by any of the flow limit, flow overheat and the flue overheat thermostats, gas low pressure switch and by the low water pressure switch.

In such an event the green (run) lamp, the upper lamp adjacent to the flame symbol, will be extinguished and only the red (lockout) lamp will be illuminated.

Any failure of the boiler to sequence in the above manner should be investigated using the following trouble shooting flow diagram.


Before attempting any electrical fault finding, always carry out preliminary electrical system checks. On completion of any service/fault finding task which has required the breaking and remaking of electrical connections, the checks, earth continuity, polarity, short circuit, resistance to earth must be repeated.

### **5.2 FAULT FINDING FLOW CHART**

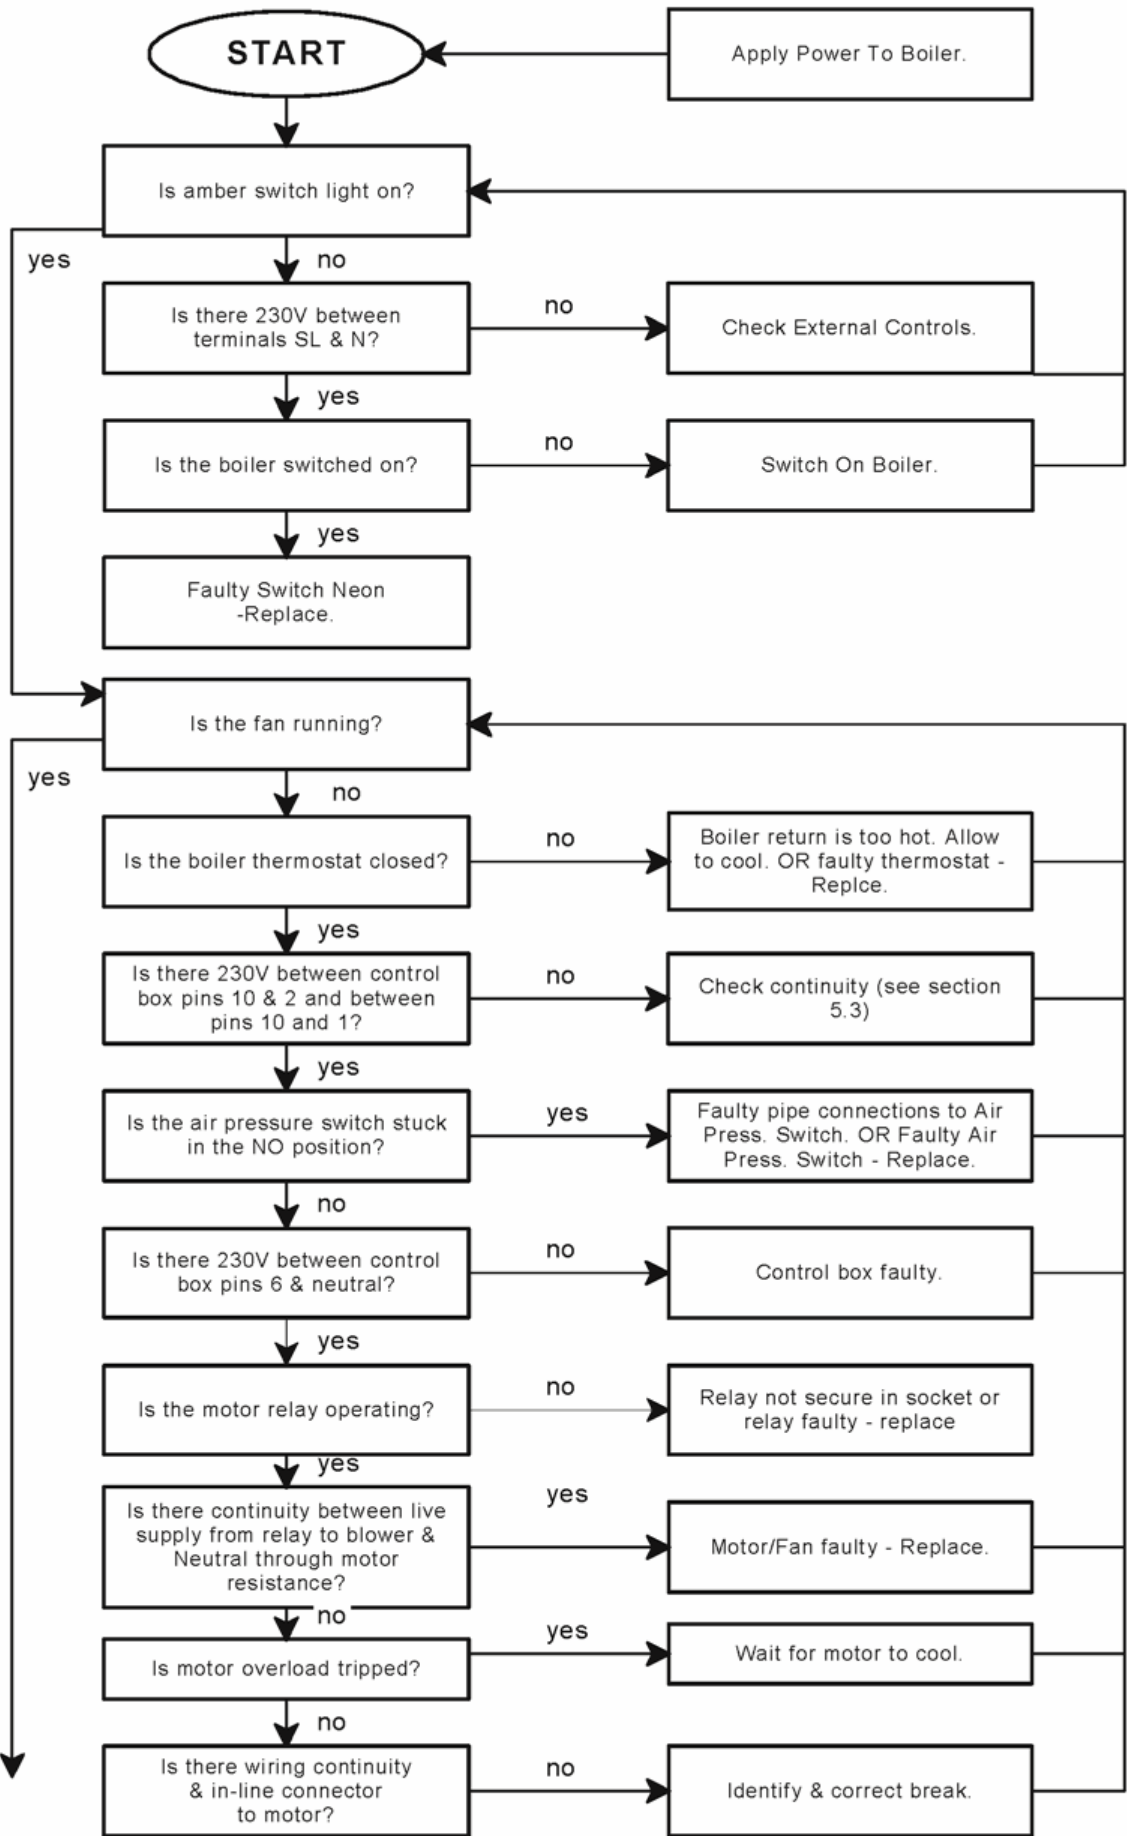

Continued on sheet 2


Continued from sheet 1

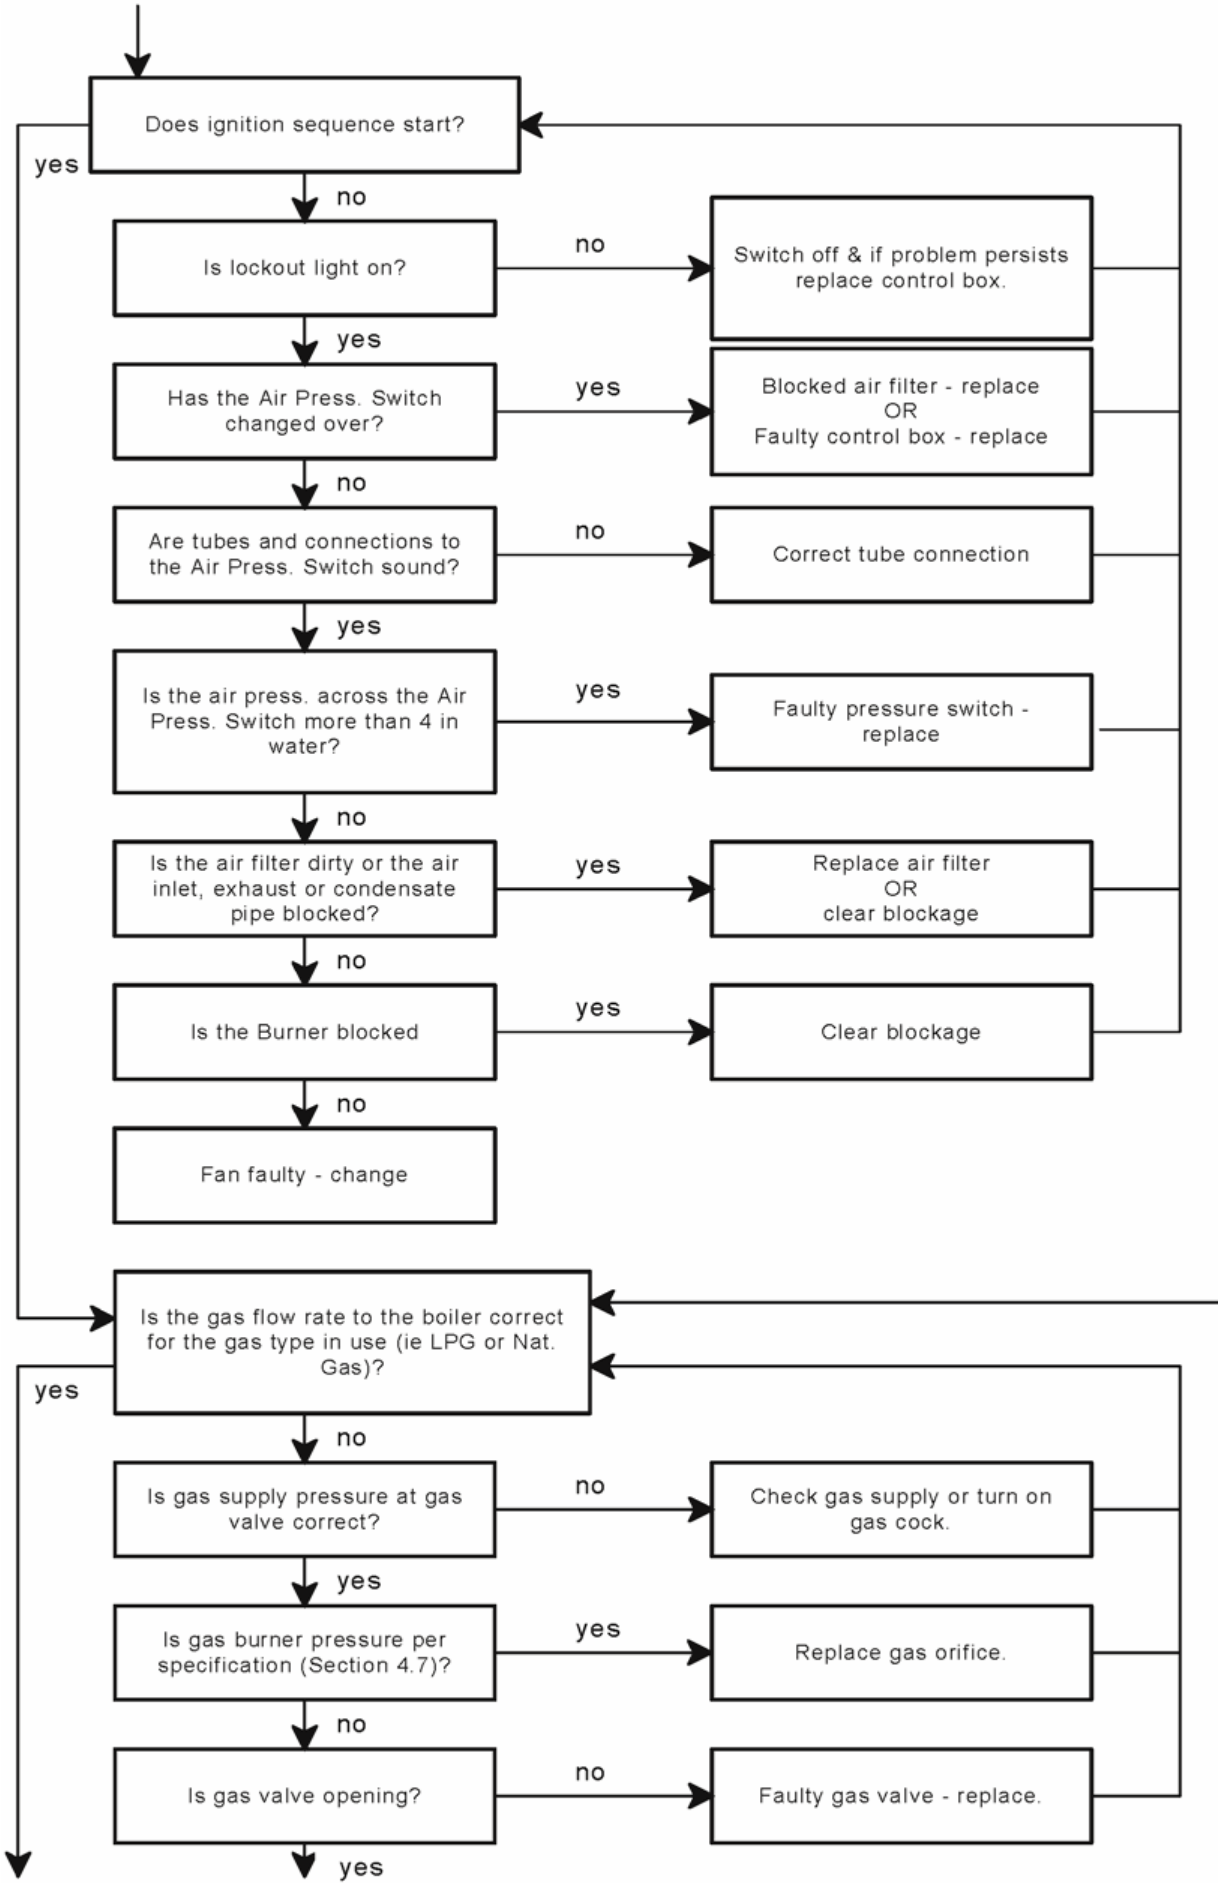

Continued on sheet 3


From sheet 3



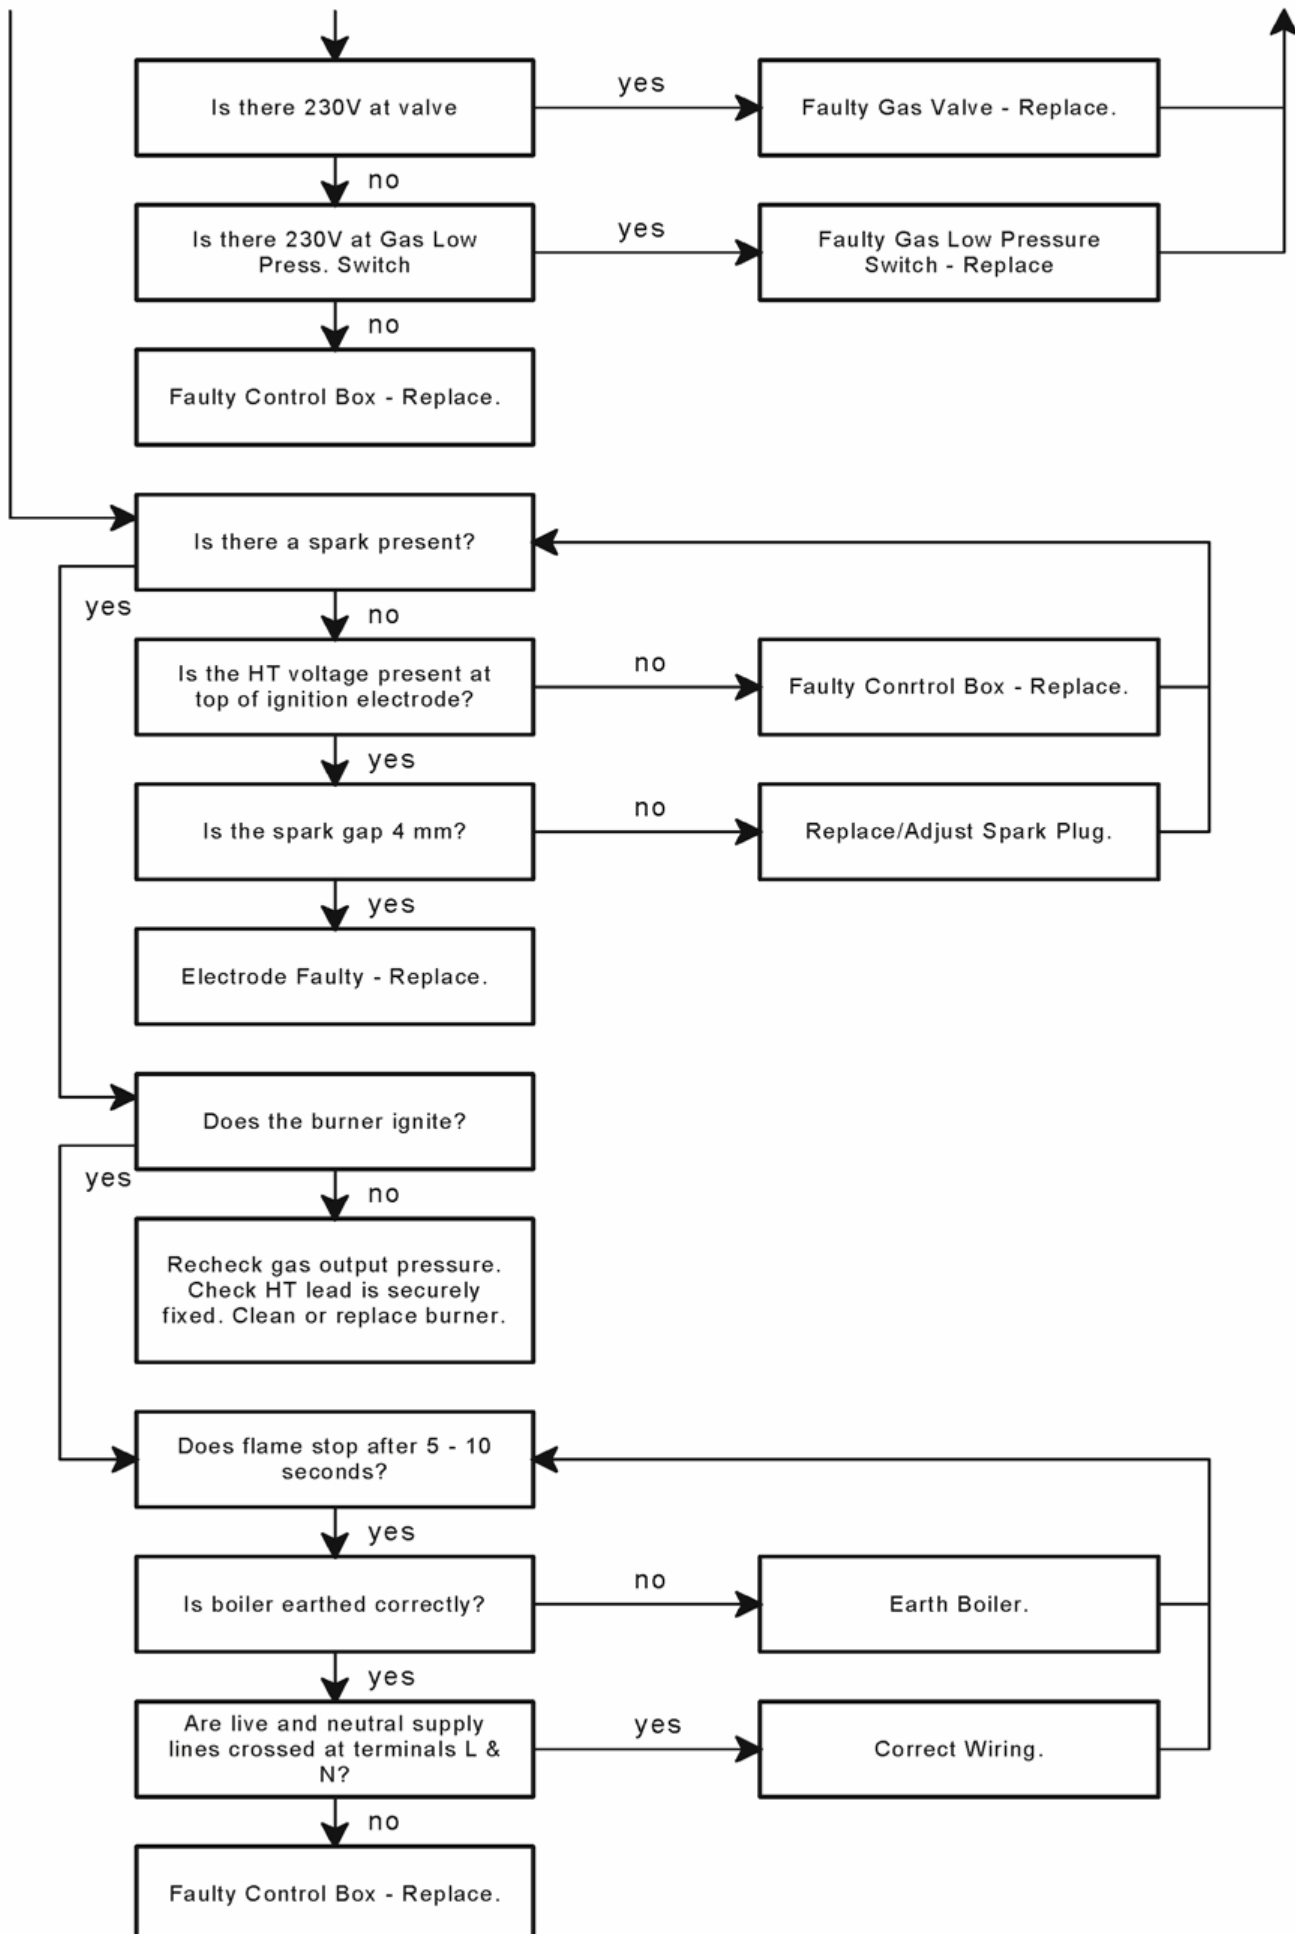


### 5.3 CONTINUITY CHECKING

To check continuity connect one probe to a neutral and use the other probe to check for 230V.

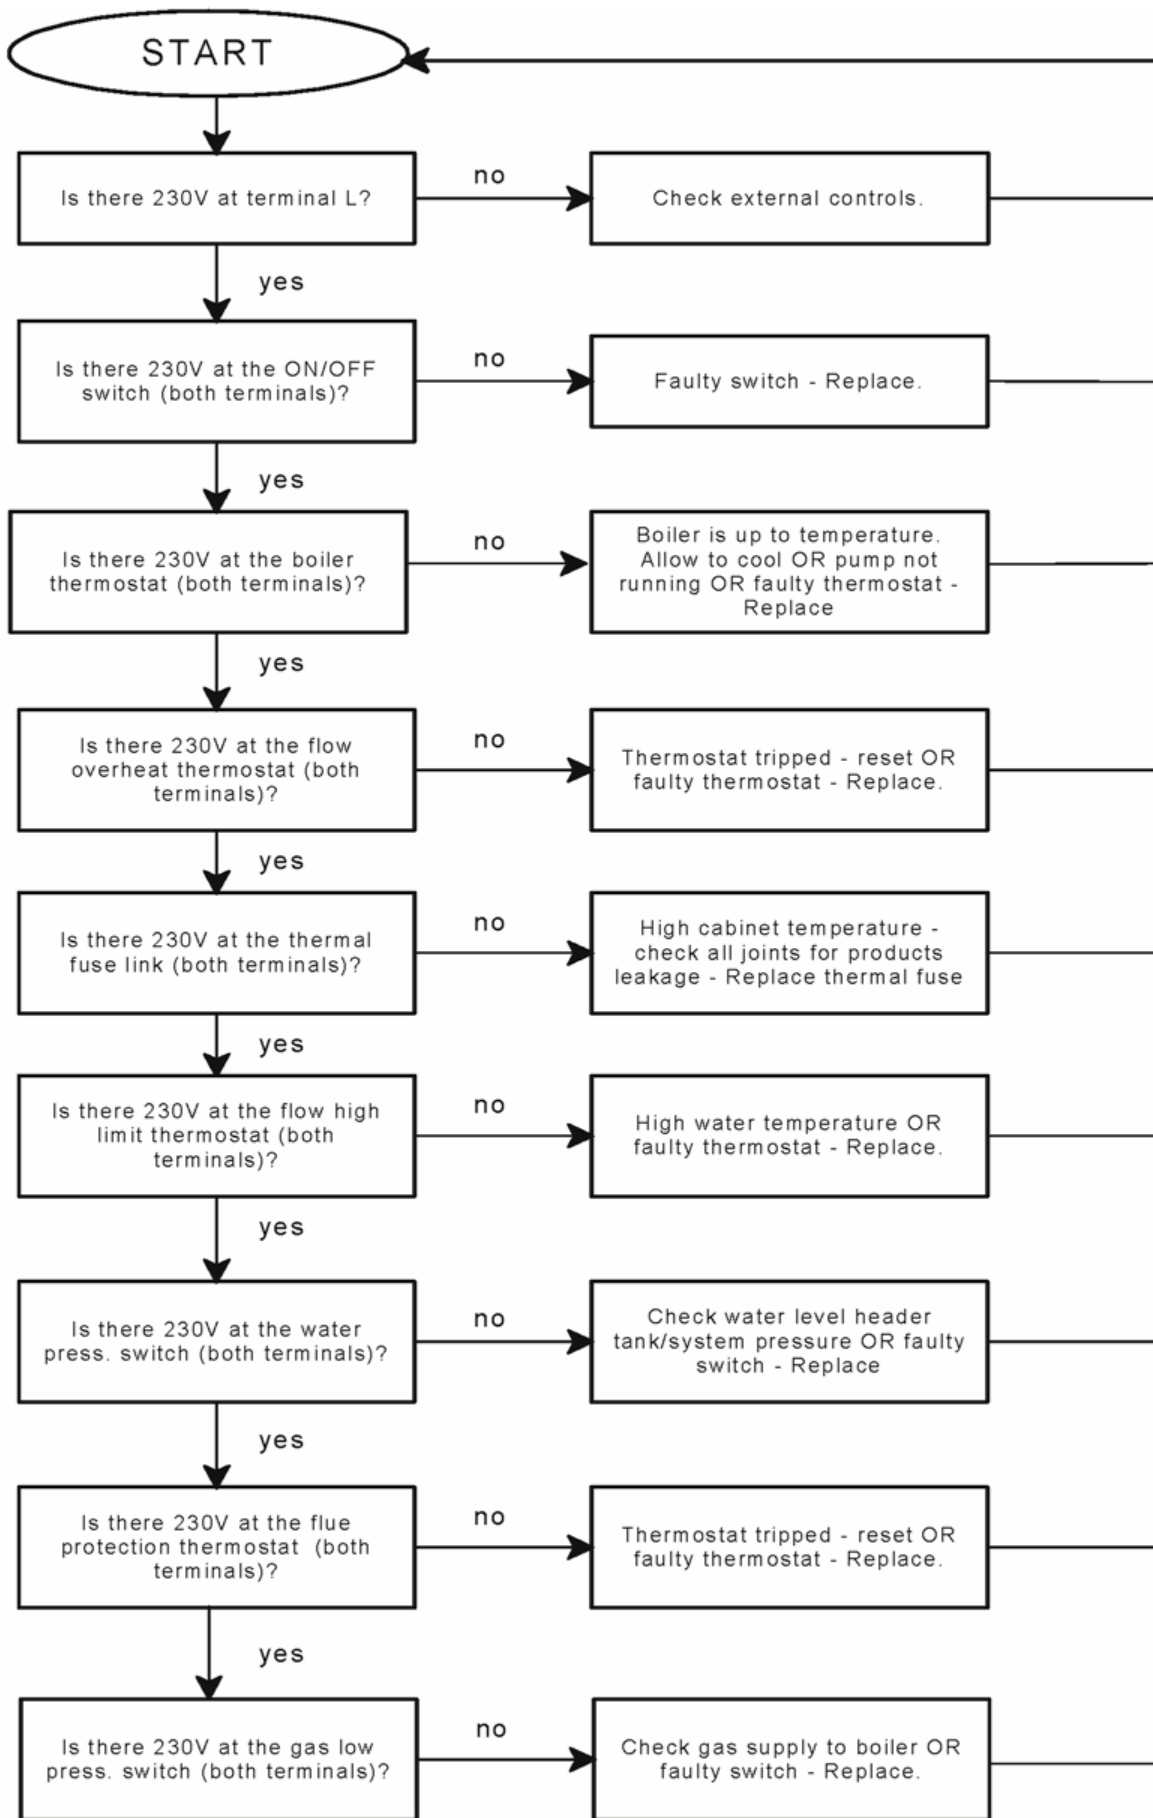

**5.4 FUNCTIONAL FLOW WIRING DIAGRAM**

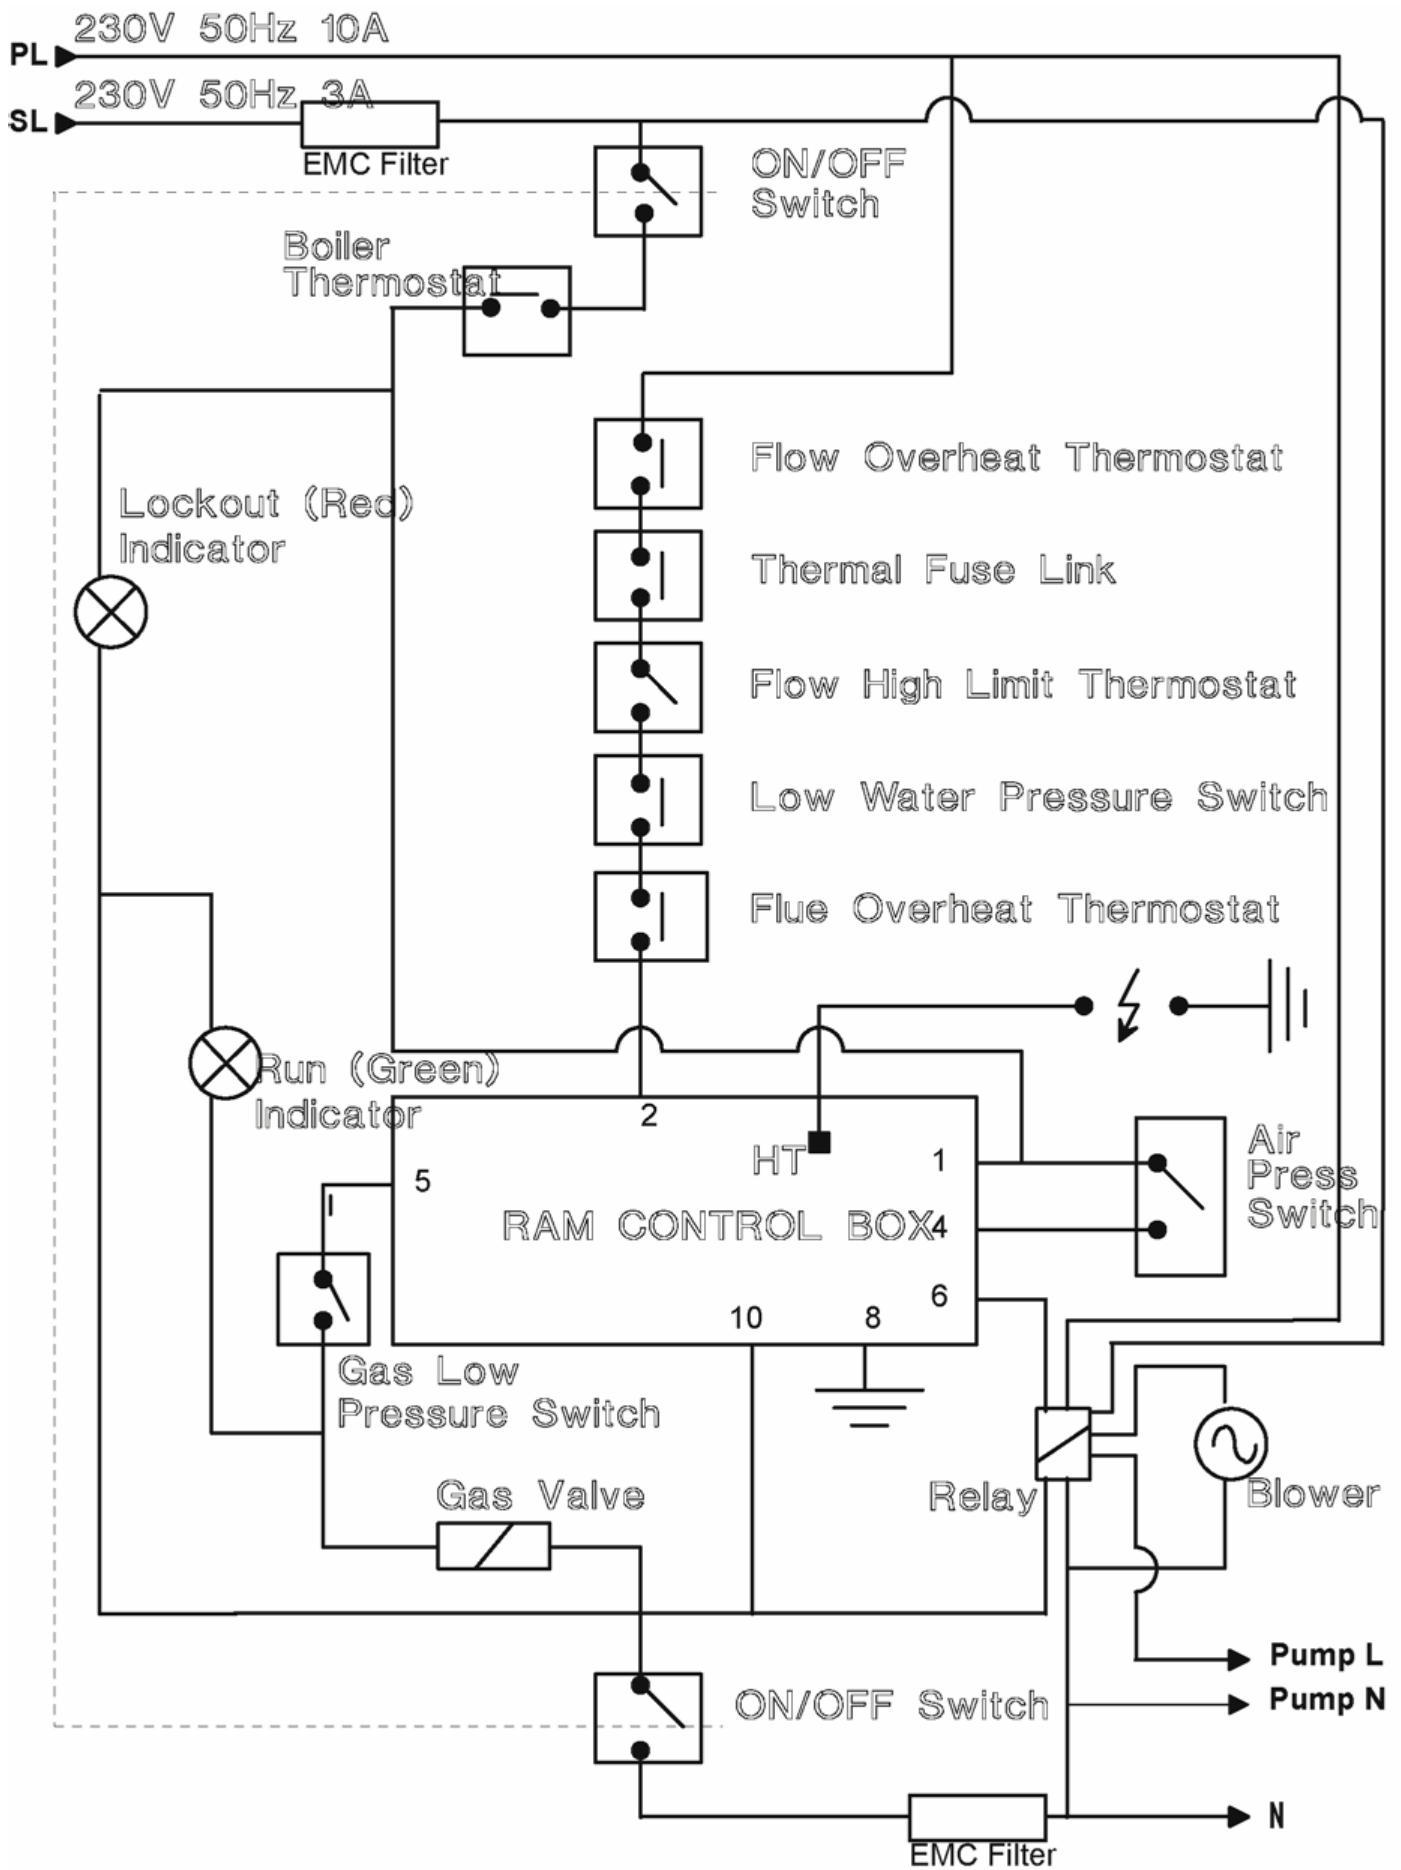

5.5 ELECTRICAL WIRING DIAGRAM

**LEGEND**


- B - BLUE
- BK - BLACK
- OR - ORANGE
- R - RED
- PK - PINK
- W - WHITE
- G - GREEN
- BR - BROWN
- V - VIOLET
- Y/G - GREEN - YELLOW

APS - AIR PRESSURE SWITCH

L - INCOMING LIVE

N - INCOMING NEUTRAL

⏏ - INCOMING EARTH

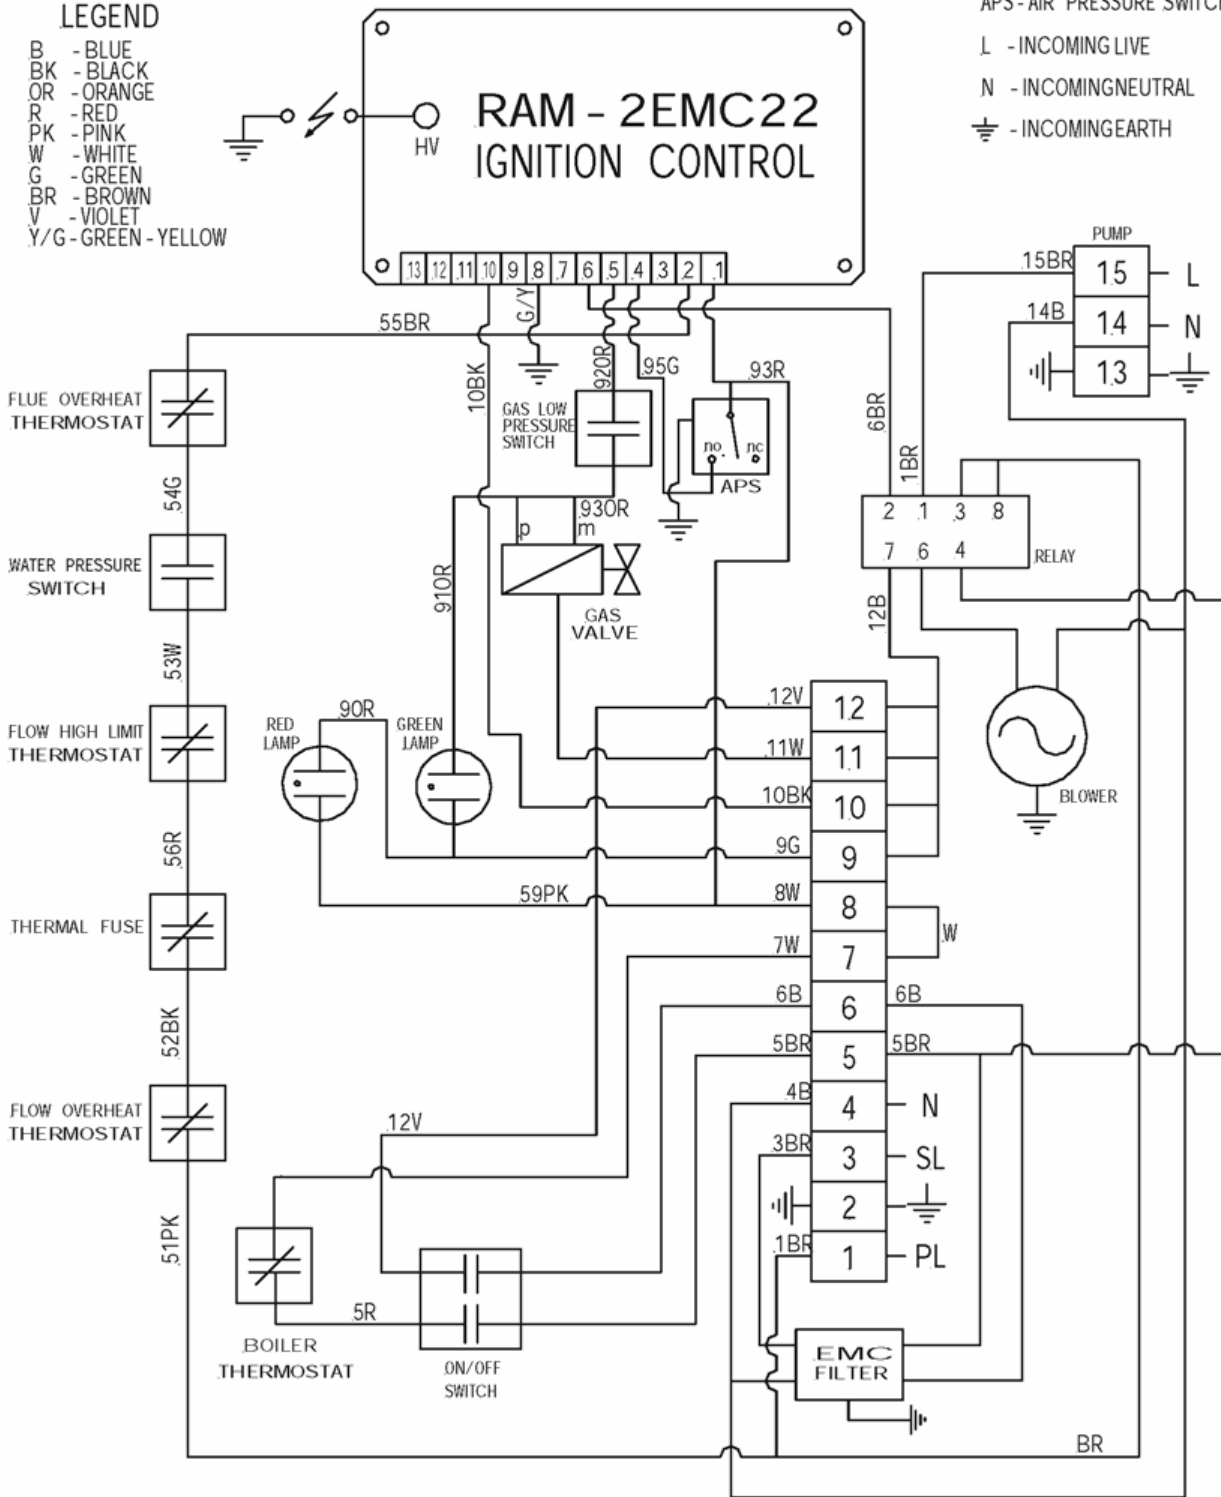

**5.6 ILLUSTRATED WIRING DIAGRAM**



The appliance has an integral air filter, mounted at the top right hand side of the boiler, to which the air intake pipe is connected. This filter should be examined every time the boiler is serviced. It may need more frequent inspection according to the condition of the atmosphere in which the air intake terminates.

**NOTE:**

*The air filter can be easily blocked if the boiler is running on or near a building site having an excess of airborne dust. It is essential, with a premix gas burner, that the air is clean and free of dust.*

*It is the law that any service work must be carried out by competent qualified persons.*

## 6.1 Pre-Service Checks

It is recommended that an inspection should be carried out prior to shutting down the unit for servicing. Remove the front cover by removing the screws retaining the top of the door and lifting the cover from the base (Front cover located by two pegs). The following items should be observed:

- a. Smooth starting and running of the blower.
- b. Smooth lighting of the burner.
- c. Check for leakage of gas, gas/air or combustion products.
- d. Check for condensate leaks.
- e. Check the colour and appearance of the flame. A sky blue flame slightly off the burner gauze is normal. The burner itself should appear dark. Any glow on the burner indicates gauze blockage requiring cleaning, an incorrect gas flow or an air intake blockage.
- f. Check that the temperature differential between the flow and return pipes is less than 15°C. The temperature difference should be between 10°C and 15°C.
- g. Check for water soundness.
- h. Inspect the flue vent and air intake pipework. Joints must be sound and all pipework well bracketed.
- i. Check that there is a steady fall back to the boiler from the flue pipe to allow condensate to run back into the boiler (See [Section 2.8.3](#) Slope).
- j. With the boiler operating at a low return temperature (i.e. less than 50°C) check that the condensate flows freely from the condensate line.

### 6.1.1 Burner & Heat Exchanger Blockage Checks

- i) Turn off the boiler & shut off the gas supply to the boiler.
- ii) Remove the pressure point screws from points A & B. Attach a differential gauge.
- iii) Turn on the boiler and wait for the fan to reach full speed. Obviously the burner will not light.
- iv) The pressure difference should be below 14 mbar. If not, clean the burner.
- v) Turn off the electrical supply to the boiler.
- vi) Remove the pressure point screw from point C and transfer the tube from point A to C, replacing the screw on point A.

Fig 6.1.1 Pressure Test Point Locations

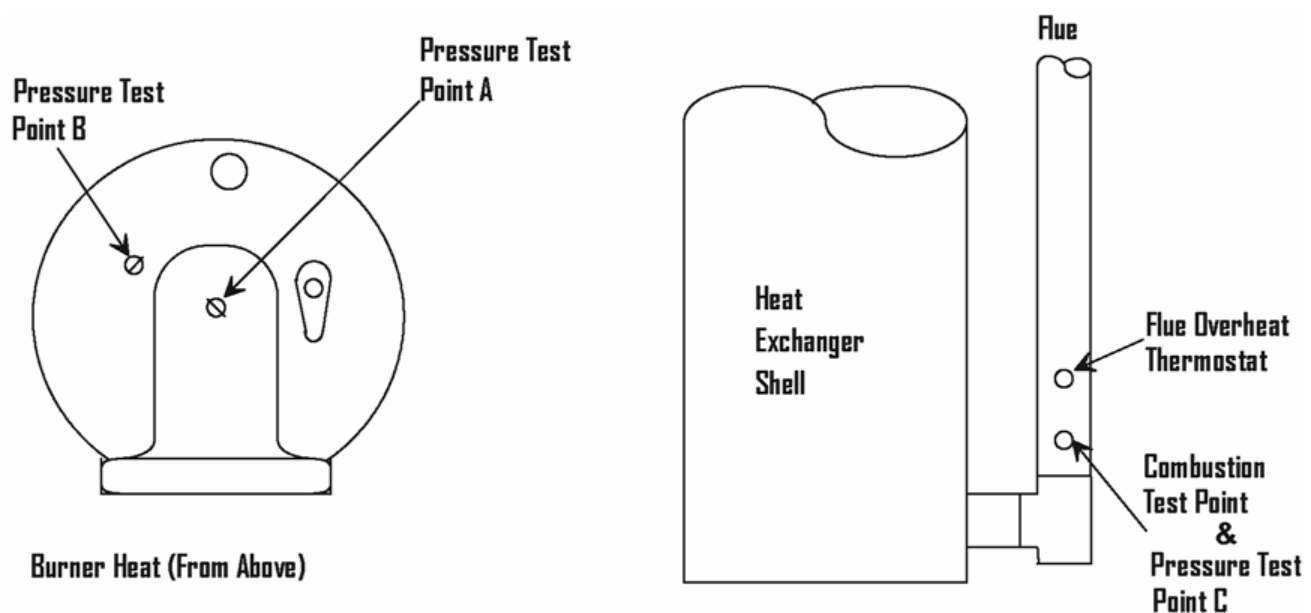


Fig 6.1.1 Pressure Test Point Locations

- vii) Turn on the electrical supply to the boiler (gas still off), wait for the fan to reach full speed.
- viii) The pressure difference should be below 17 mbar. If not, clean heat exchanger.

- ix) Disconnect the gauge from point B. Refit the screw.
- x) Read pressure of point C.
- xi) The maximum pressure should be 3.5 mbar. If the pressure is greater than this, check the flue for blockage.
- xii) Turn off the electrical supply to the boiler.
- xiii) Remove the pressure gauge tube and refit the screw.
- xiv) Open the gas service cock.

## 6.2 Recommended Routine Service

a. Inspect the air filter located at the top right hand side of the boiler. Release the toggle catch on the filter tray and remove the filter. If the filter looks dirty remove the dirt with a vacuum cleaner or by other means. If in any doubt renew the filter element.

b. Remove the burner head ([Section 7.7](#)) and inspect the burner appearance. Black markings or other discolourations on the gauze indicate too much gas or a lack of air possibly due to a blocked air filter. Any breakages or damage to the burner mesh indicate the burner must be replaced.

c. If necessary, either due to discolouration or a high pressure differential between points A & B in the pre-service checks, clean the burner with a mild household detergent and rinse under a hot running tap.

d. If necessary, either from visual inspection or a high pressure differential between points B & C in the pre-service checks, clean the heat exchanger using a suitable stiff plastic bristle brush, vacuum out any large particles and flush the heat exchanger with fresh water until the water flowing from the condensate drain is clear. When brushing the heat exchanger take care not to damage the condensing plug in the lower half of the heat exchanger.

e. Remove the condensate trap ([Section 7.10](#)) and clean by flushing through with clean running water.

f. Check the electrode mounted on the burner head. If the point is damaged or burnt replace it.

Check that the spark gap measures 4 mm.

g. Replace the burner head, renewing the gasket if necessary, and reconnect the gas/air supply and the ignition lead. Ensure the flanged gas/air supply joint is air tight.

h. Turn on the electrical supply to the boiler and allow the boiler to reach operating temperature levels.

i. Visually inspect the burner through the glass spy hole at the burner head (a small mirror will prove useful).

j. Recheck the burner pressure by following the procedure detailed in [Section 4.7](#)

k. Remove the combustion test point plug from the flue pipe. This is situated around 150mm (6ins) from the bottom of the flue elbow at its connection to the heat exchanger.

l. Using an approved combustion tester sample the flue products via the combustion test point. CO<sub>2</sub> levels of between 8.2% and 8.9%, for natural gas, should be observed. If such levels are not observed tune the combustion as described in [Chapter 4 - Commissioning](#). Also check the gas flow as detailed in [Sections 4.8](#) and [4.9](#)

m. Replace the combustion test point plug.

n. Check all joints for soundness up to the gas burner.

## 7. REPLACEMENT OF PARTS

### INDEX

|                        |   |
|------------------------|---|
| <a href="#">7.0</a>    | GENERAL   |
| <a href="#">7.1</a>    | PRECAUTIONS   |
| <a href="#">7.2</a>    | ACCESS  |
| <a href="#">7.3</a>    | PROCEDURES - GENERAL  |
| <a href="#">7.4</a>    | ELECTRICAL  |
| <a href="#">7.4.1</a>  | ON/OFF SWITCH   |
| <a href="#">7.4.2</a>  | BOILER THERMOSTAT   |
| <a href="#">7.4.3</a>  | NEONS   |
| <a href="#">7.4.4</a>  | FLOW OVERHEAT, FLOW HIGH LIMIT & FLUE PROTECTION THERMOMSTATS |
| <a href="#">7.4.5</a>  | WATER PRESSURE SWITCH   |
| <a href="#">7.4.6</a>  | IGNITION CONTROL BOX  |
| <a href="#">7.4.7</a>  | AIR PRESSURE SWITCH   |
| <a href="#">7.4.8</a>  | COMBUSTION BLOWER   |
| <a href="#">7.4.9</a>  | GAS CONTROL VALVE   |
| <a href="#">7.4.10</a> | GAS LOW PRESSURE SWITCH                                       |

|                      |  |
|----------------------|--|
| <a href="#">7.5</a>  | GAS ORIFICE                              |
| <a href="#">7.6</a>  | SPARK IGNITION/FLAME DETECTION ELECTRODE |
| <a href="#">7.7</a>  | BURNER HEAD & BURNER                     |
| <a href="#">7.8</a>  | HEAT EXCHANGER                           |
| <a href="#">7.9</a>  | AIR FILTER                               |
| <a href="#">7.10</a> | CONDENSATE TRAP                          |
| <a href="#">7.11</a> | PRESSURE GAUGE                           |
| <a href="#">7.12</a> | SIGHT GLASS                              |
| <a href="#">7.13</a> | HT IGNITION LEAD                         |
| <a href="#">7.14</a> | AIR ORIFICE                              |

## 7.0 GENERAL

The following must always be carried out by a competent/qualified person.

### 7.1 PRECAUTIONS

- i. Always switch off the mains electricity supply and disconnect the plug at the isolating switch and socket. (If a switch only is used then remove the fuse.)
- ii. Gain access to the appliance ([Section 7.2](#)) and turn off the gas supply at the appliance service cock.

### 7.2 ACCESS

- i. Remove the front door by removing the three screws to the front of the top panel. The front panel may then be removed by tilting forward and lifting vertically to disengage the two locating studs in the base of the front panel.
- ii. Access to the burner head can be gained by removing the access plate in the top panel of the appliance.
- iii. Access to the rear of the control panel and base of the unit can be gained by removing the control panel at the bottom of the boiler. Remove the two screws to the control panel then gently pull the control panel free of the boiler casing. This is secured by three press studs on either side and a central press stud at the bottom of the control panel.

### 7.3 REPLACEMENT PROCEDURES

- i. Always replace in the reverse order unless otherwise stated.
- ii. Electrical connections must be remade in accordance with the Wiring Diagram ([Section 5.5](#)).
- iii. Test the soundness of any gas carrying or water carrying joint broken during the service procedures.

## 7.4 ELECTRICAL COMPONENTS

### 7.4.1 On/Off Switch

- i) Isolate the appliance ([Section 7.1](#))
- i) Gain access ([Section 7.2](#))
- iii) Remove the push on connectors from the switch taking note of the correct positions.
- iv) Press in the catches and push the switch forwards through the control panel.
- v) Reassemble ([Section 7.3](#))
- v) Check for correct operation of the switch.

### 7.4.2 Boiler Thermostat

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Remove the push on connectors from the thermostat taking note of the correct positions.
- iv) Unscrew the two retaining screws and remove the thermostat.
- v) Reassemble ([Section 7.3](#))

NB: When fitting the new thermostat it is an advantage to smear a thin film of heat sink compound between the thermostat and plate. This, combined with fitting the new thermostat tightly to the plate, ensures a good contact.

### 7.4.3 Neons

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Remove the push on connectors from the neon taking note of the correct positions.
- iv. Press in the catches and push the neon forward through the control panel.
- v. Pull the centre core of the neon from its housing to expose the bayonet fitting bulb.



- vi. Reassemble ([Section 7.3](#))
- vii. Check for correct operation of the neons.

#### 7.4.4 Flow Overheat, Flow High Limit & Flue Protection Thermostats

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Remove the push on connectors from the thermostat taking note of the correct positions.
- iv) Unscrew the two retaining screws and remove the thermostat.
- v) *Flue protection thermostat only*

The thermostat seal is maintained via a small 'O' ring between thermostat and flue pipe. If this is damaged on removal it must be replaced.

- vi) Reassemble ([Section 7.3](#))

NB: When fitting the new thermostat it is an advantage to smear a thin film of heat sink compound between the thermostat and plate. This, combined with fitting the new thermostat tightly to the plate, ensures a good contact.

#### 7.4.5 Water Pressure Switch

- i) Isolate the appliance ([Section 7.1](#))
- ii) Shut off the water supply to the appliance.
- iii) Gain access ([Section 7.2](#))
- iv) Drain the system to below the level of the appliance using the drain off tap at the base of the heat exchanger.
- v) Remove the push on connectors from the water pressure switch taking note of the correct positions.
- vi) Unscrew the pressure switch.
- vii) Reassemble ([Section 7.3](#)).

NB: Use a little jointing compound or PTFE tape on the thread.

- viii) Refill the system (See [Section 4 - Commissioning](#)).

#### 7.4.6 Ignition Control Box

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Remove the HT ignition lead.
- iv) Pull off the multi-pin connector away from the box.
- v) Unscrew the two screws securing the control box to the casing and remove the box.
- vi) Reassemble ([Section 7.3](#))

#### 7.4.7 Air Pressure Switch

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Remove the push on connectors from the air pressure switch taking note of the correct positions.
- iv. Disconnect the union to one plastic tube connection and pull off the second plastic tube from the air pressure switch.
- v. Unscrew the two screws mounting the air pressure switch body to the boiler casing.
- vi. Reassemble ([Section 7.3](#))

NB: Ensure the yellow/green earth connection tag is securely fixed behind the lower mounting screw.

#### 7.4.8 Combustion Blower

NB: This unit is heavy and must therefore be handled carefully when replacing.

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Disconnect the wires connecting the blower to the relay (relay terminals number 6 and 3)

- vi) Remove the allen screws fixing the air intake pipe flange and the gas/air mixture pipe flange to the blower.
- v) Unscrew the three bolts fixing anti-vibration mounts to the combustion blower through the base of the cabinet.
- vi) Reassemble ([Section 7.3](#))

NB: When reassembling inspect any gaskets for damage and replace if necessary.

- vii) Reset the gas rate (See [Section 4 - Commissioning](#))

#### **7.4.9 Gas Control Valve**

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Remove the cover concealing the electrical connections on the front of the gas valve.
- iv. Remove the push on connectors exposed taking note of the correct positions.
- v. Remove the push on connectors to the gas low pressure switch taking note of the correct positions.
- vi. Remove the earth connection to the side of the gas valve.
- vii. Remove the plastic air tube to the base of the gas valve.
- viii. Remove the four allen screws securing the gas inlet flanged connections to the gas control valve.
- ix. Undo the four bolts fixing the base of the gas control valve to the gas outlet block.
- x. Remove the gas valve.
- xi. Unscrew the gas low pressure switch at its connection to the gas control valve body.
- xii. Reassemble ([Section 7.3](#))
- xiii. Reset the gas rate (See [Section 4 - Commissioning](#))

#### **7.4.10 Gas Low Pressure Switch**

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Remove the push on connectors to the gas low pressure switch taking note of the correct positions.
- iv) Unscrew the gas low pressure switch from the brass holder.
- v) Reassemble ([Section 7.3](#))

#### **7.5 GAS ORIFICE**

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Unscrew and remove the brass plug from the gas outlet block.
- iv) Remove the rubber seal from the injector housing.
- v) Insert a flat blade screwdriver into the exposed hole and unscrew the gas injector.
- vi) Check the injector is the correct size for the boiler size and fuel type.
- vii) Reassemble ([Section 7.3](#))

NB: Ensure that the injector is screwed fully home

- viii) Reset the gas pressure (See [Section 4 - Commissioning](#))

#### **7.6 SPARK IGNITION/FLAME DETECTION ELECTRODE**

- i) Isolate the appliance ([Section 7.1](#))
- ii) Gain access ([Section 7.2](#))
- iii) Remove the pull off HT lead to the spark ignition electrode.
- iv) Remove the burner head ([Section 7.7](#) steps iv to vi).
- v) Undo the screws to the spark ignition electrode flange located on the burner head and withdraw the spark ignition electrode.
- vi) Reassemble ([Section 7.3](#))

NB: When reassembling inspect the gasket for damage and replace if necessary. With the new spark ignition electrode in place it is essential to ensure the gap between the tip of the electrode and the burner surface is 4 mm. Distance above or below 4 mm will affect the ignition performance. If necessary gently bend the electrode, taking care not to damage the ceramic insulator.

#### **7.7 BURNER HEAD & BURNER**

- i) Isolate the appliance ([Section 7.1](#))
  - ii) Gain access ([Section 7.2](#))
  - iii) Remove the pull off HT lead to the spark ignition/flame detection electrode head.
  - iv) Remove the four screws retaining the access panel and remove the access panel from the top of the cabinet.
  - iv) Remove the two allen screws fixing the flange gas/air mixture pipe connection to the burner head.
  - v) Remove the five allen screws fixing the burner head to the top of the heat exchanger.
  - vi) Withdraw the burner & burner head from the top of the heat exchanger through the access panel opening in the top of the cabinet.
  - vii) Unscrew the burner from the burner head taking care not to damage the burner mesh.
  - vi) Reassemble ([Section 7.3](#))
- NB: When reassembling inspect any gaskets for damage and replace if necessary. Set the spark gas as detailed in [Section 7.6](#)
- vii) Reset the gas rate (see [Section 4 - Commissioning](#))

## 7.8 HEAT EXCHANGER

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Shut of the water supply to the appliance.
- iv. Remove the burner head ([Section 7.7](#))
- v. Drain the system to below the level of the appliance using the drain off tap at the base of the heat exchanger.
- vi. Remove the front control panel ([Section 7.2](#) (iii))
- vii. Remove the boiler thermostat ([Section 7.4.2](#))
- viii. Remove the push on connectors to the water pressure switch, flow overheat thermostat, flow high limit thermostat and flue protection thermostat taking note of the correct positions.
- ix. Remove the condensate trap ([Section 7.10](#))
- x. Remove the pressure gauge phial located next to the drain off tap.
- xi. Remove the air filter ([Section 7.9](#))
- xii. Remove the two springs connecting the bottom tray of the air filter with the cabinet top cover.
- xiii. Disconnect the flow and return connections to the boiler.
- xiv. Remove the push on flue and air connections to the flue and air pipes exiting the top of the boiler.
- xv. Remove the four screws fixing the cabinet top cover to the cabinet body and remove the top cover.
- xvi. Remove the nut fixing the strap retaining the base of the heat exchanger and pull out the strap by unhooking it from its fixing behind the heat exchanger.
- xvii. Remove the allen screw securing the top of the heat exchanger to its mounting bracket.
- xviii. Remove the heat exchanger, with pipework attached.
- xix. Remove the flow, return and flue pipework from the heat exchanger (Replacement heat exchangers are supplied with return pipework attached).
- xx. Reassemble ([Section 7.3](#))
- xxi. Recommission ([Section 4 - Commissioning](#))

## 7.9 AIR FILTER

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Drop the lower section of the air filter housing by releasing the toggle clip.
- iv. Open the lower section as far as possible and pull out the combined paper filter element with rubber seal.
- v. Reassemble ([Section 7.3](#))

NB: When fitting the new air filter take care to ensure that the new filter is placed to cover completely the air intake into the boiler cabinet.

## 7.10 CONDENSATE TRAP

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Disconnect the condensate line from the base of the heat exchanger.
- iv. Disconnect the condensate line from the base of the flue assembly.
- v. Disconnect the condensate lines from the projection of the condensate trap from the base of the cabinet.
- vi. Withdraw the condensate trap.
- vii. Mop up any spilled condensate.
- viii. Reassemble ([Section 7.3](#))

NB: When re-fitting the condensate trap pour water onto the condensate hose from the base of the heat exchanger until nearly full. Then reconnect the condensate hose to the base of the heat exchanger.

## 7.11 PRESSURE GAUGE

- i. Isolate the appliance ([Section 7.1](#))

- ii. Gain access ([Section 7.2](#))
- iii. Shut off the pressure measurement point at the return drain valve located at the base of the heat exchanger.
- iv. Remove the phial from its mounting at the return pipe entry to the base of the heat exchanger.
- v. Press in the catches and push the pressure gauge forward through the control panel.
- vi. Reassemble ([Section 7.3](#))
- vii. Refill the system (See [Section 4 - Commissioning](#))

## 7.12 SIGHT GLASS

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Unscrew the sight glass fitting from the burner head.
- iv. Reassemble ([Section 7.3](#))

## 7.13 HT IGNITION LEAD

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Remove the lead from the electrode and the ignition control box.
- iv. Reassemble ([Section 7.3](#))

## 7.14 Air Orifice

- i. Isolate the appliance ([Section 7.1](#))
- ii. Gain access ([Section 7.2](#))
- iii. Disconnect the flexible air intake hose from the air inlet manifold
- iv. Unscrew the air orifice grub screw to release the air orifice.
- v. Lift the air orifice from its seat in the air inlet manifold.
- vi. Reassemble ([Section 7.3](#))

NB: When replacing the air orifice ensure that the new orifice is seated with the chamfer facing upwards.

**WD 93/0/1997**

## KESTON CONDENSING BOILERS

### IMPORTANT

#### KESTON 170

### INSTALLATION KEY POINTS

†Read Installation Manual Carefully.

†Ensure that there is at least 9 feet head of water pressure at the top of the boiler.

†DO NOT remove the dust caps from the air and exhaust pipes until ready to connect.

†Ensure that ALL dust particles, filings, plastic chips etc. are removed from the inlet pipe.

†If the installation is a replacement the system must be flushed clean. System should be drained hot, then refilled, then drained again until the water is clean.

†Ensure that there is a proper electrical supply ie 230V fused at 10A.

†Take great care with pipe connections to ensure that no damage is done to the internal pipework.

†Ensure that the 22mm condensate pipe is not exposed to freezing conditions.

†Make sure that the exhaust pipe terminates away from windows or vents and is out of reach.

†Make sure that the air inlet and exhaust pipe outlets are at least 500mm apart.

†Check tightness of all connections in the boiler before firing.

†Ensure that the terminals supplied are fitted to both the exhaust and air inlet pipes.

†The system must be free from air before firing.

†The pump must always run when the boiler is firing.

†Gravity circuits are not allowed.

†If TRV's are installed on radiators ensure that a bypass is installed to maintain required flow.