

# Installation and Servicing Instructions **GREENSTAR HE system**



Wall mounted condensing boiler for central heating



6 720 610 577-00.10

**ZB 7-28 HE system** GC-Number: 41 311 58



## Contents

---

### Safety precautions 3

---

### Symbols 3

---

### 1 Details of the appliance 4

1.1	EC Declaration of Conformity	4
1.2	Standard package	4
1.3	Description of appliance	4
1.4	Accessories	5
1.5	Casing dimensions	5
1.6	Layout of appliance	6
1.7	Function	7
1.8	Electrical wiring diagram	8
1.9	Technical data	9

---

### 2 Installation regulations 10

---

### 3 Installation 11

3.1	Important remarks	11
3.2	Sealed systems	11
3.3	Siting the appliance	13
3.4	Wall mounting frame assembly	14
3.5	Pre-piping the system	14
3.6	Fitting the appliance	15
3.7	Checking the connections	16
3.8	Flue Systems	16
3.8.1	Siting the Flue Terminal	17
3.8.2	Installation of the flue	18
3.8.3	Flue duct preparation and assembly	20

---

### 4 Electrical connections 21

4.1	Connecting the appliance	21
4.2	Mains Voltage external controls connections	22
4.3	Wiring to your system	22
4.3.1	Pre-wired Remote S Plan	22

---

### 5 Commissioning 23

5.1	Commissioning	23
5.2	Switching the appliance on/off	24
5.3	Switching on the central heating	24
5.4	System controls	24
5.5	Appliances with optional plug-in diverter valve: Setting hot water temperature	25
5.6	Frost protection	25
5.7	Pump anti-seize function	25
5.8	Fault Condition	25

---

### 6 Individual settings 26

6.1	Mechanical settings	26
6.1.1	Checking the size of the expansion vessel	26
6.1.2	Setting the central heating flow temperature	26
6.1.3	Changing the heating pump characteristic	26
6.2	Settings on the Bosch Heatronic	27
6.2.1	Operating the Bosch Heatronic	27
6.2.2	Selecting the pump control mode for central heating mode (Service Function 2.2)	27
6.2.3	Setting the anti-cycle time (Service Function 2.4)	27
6.2.4	Setting the maxim CH flow temperature (Service Function 2.5)	28
6.2.5	Setting the switching difference (Service Function 2.6)	28
6.2.6	Setting the heating output (Service Function 5.0)	28
6.3	Setting the gas/air ratio	28

---

### 7 Converting the appliance to different gas types 29

7.1	Setting the gas/air ratio	29
7.2	Testing combustion air/flue gas at set heat output	31
7.2.1	Testing the O <sub>2</sub> or CO <sub>2</sub> level in the combustion air	31
7.2.2	Testing CO and CO <sub>2</sub>	31

---

### 8 Maintenance 32

8.1	Pre-Service Check List	33
8.2	Description of servicing operations	34
8.3	Replacement of Parts	37
8.3.1	PCB control board and transformer	37
8.3.2	Fan Assembly	38
8.3.3	Pump	38
8.3.4	3-way diverter valve	38
8.3.5	3-way diverter valve motor	39
8.3.6	Sensors	39
8.3.7	Gas Valve	39
8.3.8	Electrode assembly	39
8.3.9	Pressure gauge	40
8.3.10	Expansion vessel	40
8.3.11	Pressure Relief Valve	40
8.3.12	Burner	40
8.3.13	Primary Heat Exchanger	40

---

### 9 Appendix 41

9.1	Fault Codes	41
9.2	Short parts list	42
9.3	Heating/hot water output settings (N.G.)	42
9.4	Heating/hot water output settings (L.P.G.)	42
9.5	Operational Flow diagrams	43
9.5.1	Central heating function	43

---

## Safety precautions

### If you smell gas

- ▶ Turn off gas service cock at the meter.
- ▶ Open windows and doors.
- ▶ Do not operate any electrical switches.
- ▶ Extinguish any naked flames.
- ▶ Telephone your gas company.

### If you smell fumes from the appliance

- ▶ Switch off appliance (see page 24).
- ▶ Open windows and doors.

### Fitting and modifications

- ▶ Fitting of the appliance or any controls to the appliance may only be carried out by a competent engineer in accordance with the Gas Safety (Installation and Use) Regulations 1998.
- ▶ Flue systems must not be modified in any ways other than as described in the fitting instructions.
- ▶ This appliance is for use on sealed primary systems only.

### Maintenance

- ▶ **The user is recommended:** to have the system regularly serviced in order to ensure that it functions reliably and safely.
- ▶ Use only original spare parts!

### Combustible materials

- ▶ Do not store or use any combustible materials (paper, thinners, paints etc.) in the vicinity of the appliance.

### Health and safety

- ▶ This appliance contains no asbestos products.
- ▶ There is no potential hazard due to the appliance being electrically unsafe.
- ▶ There are no substances used in the construction that are a potential hazard in relation to the COSHH Regulations (Control of Substances Hazardous to Health Regulations 1988).

### Combustion air/Ambient atmosphere

- ▶ The combustion air/ambient atmosphere should be kept free of chemically aggressive substances (e.g. halogenated hydrocarbons which contain chlorine or fluorine compounds). This will prevent corrosion.

### Instructions to the customer

- ▶ Explain to the customer how the appliance works and how to operate it.
- ▶ Advise the user that he/she must not make any modifications to the appliance or carry out any repairs on it.
- ▶ These instructions are to be left with the user or at the Gas meter.
- ▶ Important: These instructions apply in the UK only.

## Symbols



**Safety instructions** in this document are identified by a warning-triangle symbol and are printed on a grey background.



**Notes** containing important information are identified by the symbol shown on the left. They are bordered by horizontal lines above and below the text.

## 1 Details of the appliance

### 1.1 EC Declaration of Conformity

This appliance is in accordance with the applicable requirements of the Gas Appliance Directive, Boiler Efficiency Directive, Electromagnetic Compatibility Directive and the Low Voltage Directive.

<b>PIN</b>	CE-0085 BL 0507
<b>Category UK</b>	II <sub>2H</sub> 3P
<b>Appliance Type</b>	C <sub>13</sub> , C <sub>33</sub>

Table 1

### 1.2 Standard package

- Gas condensing boiler for central heating
- Wall mounting frame
- Clamp for securing flue duct kit
- Fixings (screws etc.)
- Set of documentation for appliance
- Pre-plumbing manifold
- Condensate drain pipe.


### 1.3 Description of appliance

- Wall-mounted appliance, siting not dependent on room size
- Natural gas models are low-emission appliances
- Multifunction display
- Bosch Heatronic control system
- Automatic ignition
- Modulating control
- Full safety systems incorporating Bosch Heatronic with flame ionisation monitoring, solenoid valves and temperature sensors
- Concentric flue/air duct with testing point for CO<sub>2</sub>/CO
- Regulated speed fan
- Pre-mix burner
- Temperature control for central heating
- Safety temperature limiter in 24 V electrical circuit
- Three-speed central heating pump with automatic vent
- Relief valve, pressure gauge, expansion vessel
- Flue gas temperature limiter (105 °C)
- Condensate Trap
- Connecting possibility for S-Plan System.

## 1.4 Accessories

- Standard horizontal flue kit at 100 mm outside diameter for flues upto 4 m in length.
- Flue duct kits for horizontal (125 mm outside diameter) for flue lengths upto 13 m and vertical flue systems for flue lengths upto 15 m. Fitting instructions are sent with these kits.
- Heating programmer
- Timer
- Security kit
- Motorised valve is available as an optional extra. If this option is used then the DT2, TR2 Optimising Room Thermostat and the Night Set Back Module will be required.

## 1.5 Casing dimensions

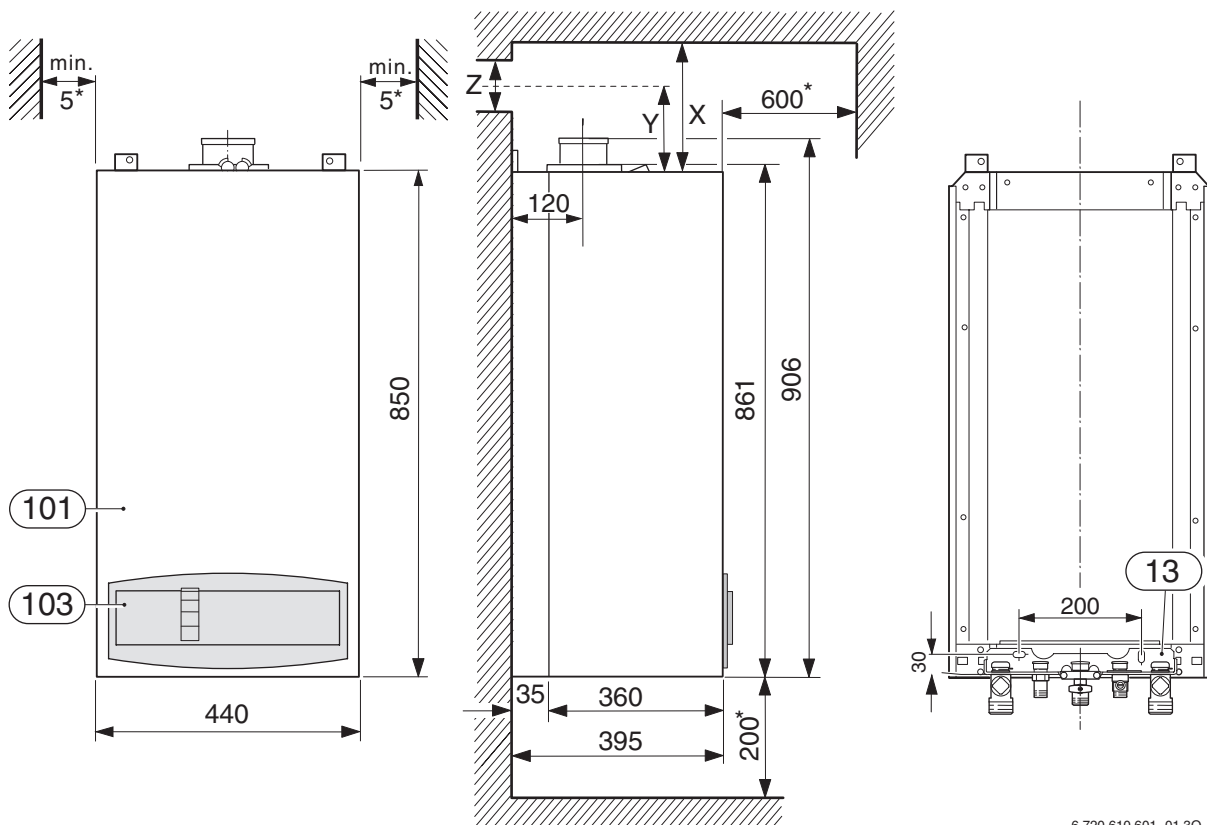


6 720 610 601- 01.30

Fig. 1

- 13** Manifold assembly  
**101** Outer case  
**103** Facia cover  
**X** Standard Concentric Horizontal Flue System: min. 310 mm  
Alternative Concentric Flue System: min. 250 mm  
**Y** Standard Concentric Horizontal Flue System: 158 mm  
Alternative Concentric Flue System: 121 mm  
**Z** Standard Concentric Horizontal Flue System: 105 mm  
Alternative Concentric Flue System: 130 mm  
**\*** For servicing the appliance

## 1.6 Layout of appliance

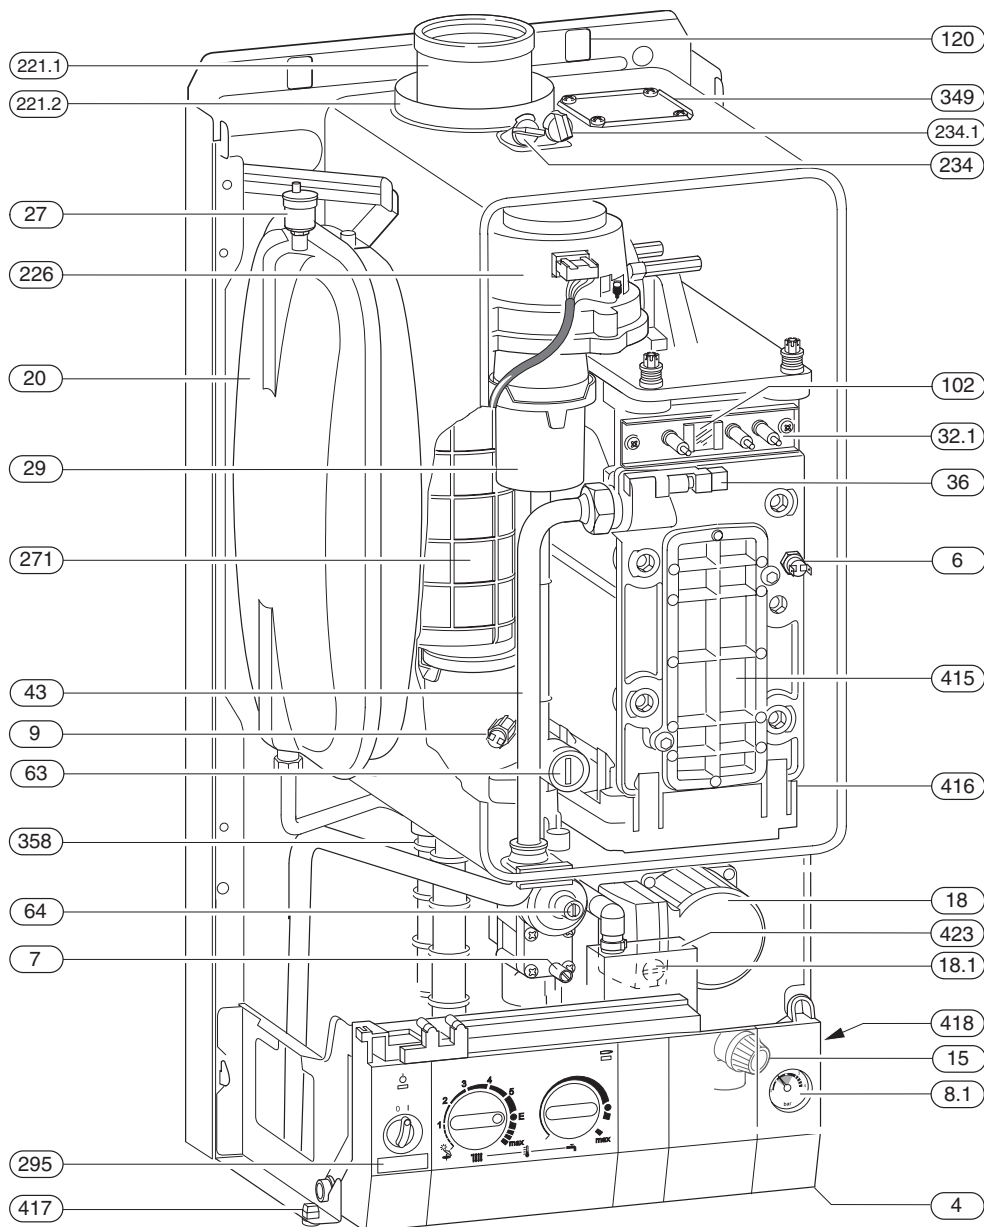


6 720 610 596-01.20

Fig. 2

- |              |   |              |   |
|--------------|---|--------------|---|
| <b>4</b>     | Heatronic control                         | <b>221.2</b> | Combustion air intake                     |
| <b>6</b>     | Heat exchanger safety temperature limiter | <b>226</b>   | Fan assembly                              |
| <b>7</b>     | Testing point for gas supply pressure     | <b>295</b>   | Appliance type sticker                    |
| <b>8.1</b>   | Pressure gauge                            | <b>234</b>   | Testing point for combustion products     |
| <b>9</b>     | Flue gas temperature limiter              | <b>234.1</b> | Testing point for combustion air          |
| <b>15</b>    | Relief valve                              | <b>271</b>   | Flue duct                                 |
| <b>18</b>    | Pump                                      | <b>349</b>   | Cover plate for twin flue duct connection |
| <b>18.1</b>  | Pump speed selector switch                | <b>358</b>   | Condensate trap                           |
| <b>20</b>    | Expansion vessel                          | <b>415</b>   | Cover plate for cleaning access           |
| <b>27</b>    | Automatic air vent                        | <b>416</b>   | Condensate collector                      |
| <b>29</b>    | Air gas Mixer unit                        | <b>417</b>   | Clip for fixing outer case                |
| <b>32.1</b>  | Electrode assembly                        | <b>418</b>   | Data plate                                |
| <b>36</b>    | Temperature sensor in CH flow             | <b>423</b>   | Siphon                                    |
| <b>43</b>    | CH flow                                   |              |   |
| <b>63</b>    | Adjustable gas flow restrictor            |              |   |
| <b>64</b>    | Adjusting screw for min. gas flow volume  |              |   |
| <b>102</b>   | Inspection window                         |              |   |
| <b>120</b>   | Fixing points                             |              |   |
| <b>221.1</b> | Flue duct                                 |              |   |

## 1.7 Function

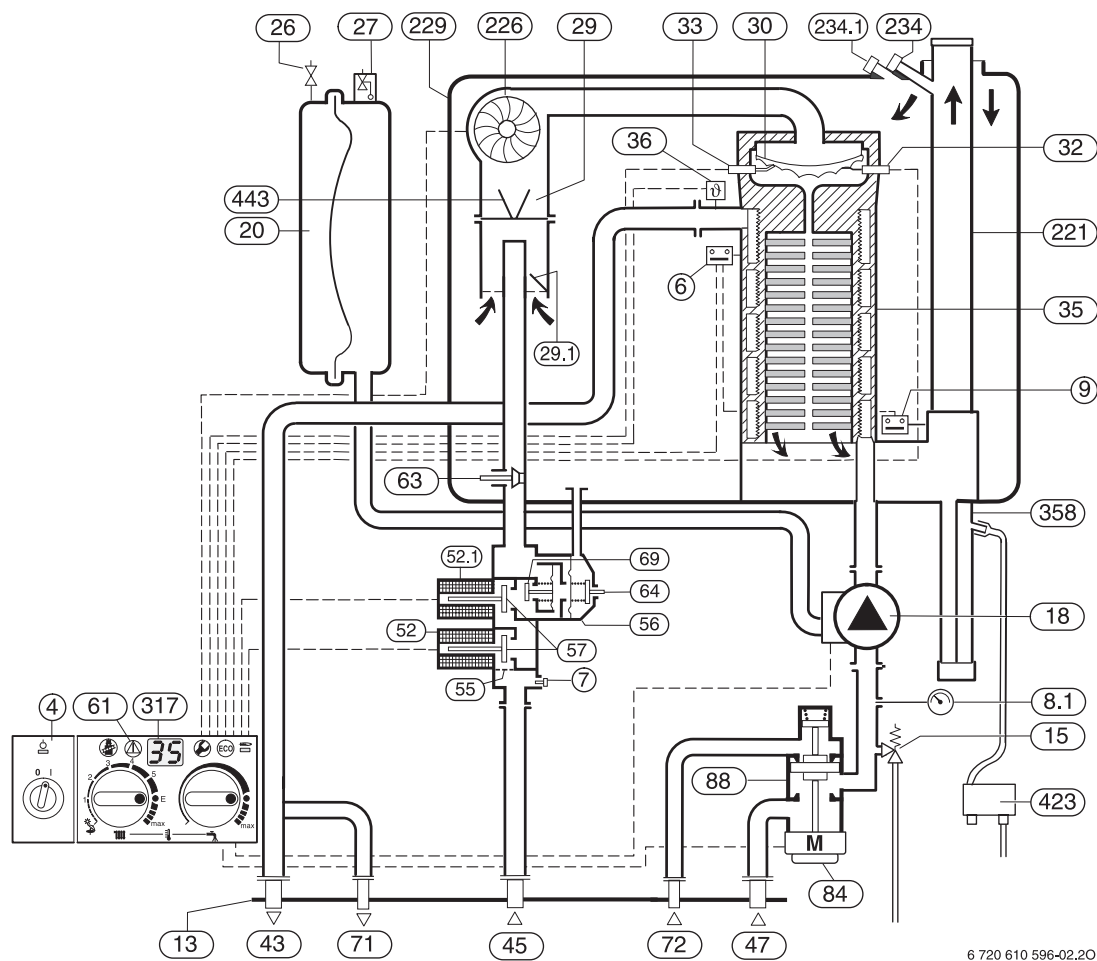

6 720 610 596-02.20

Fig. 3

- |             |  |              |  |
|-------------|--|--------------|--|
| <b>4</b>    | Bosch Heatronic control                                | <b>71</b>    | Storage water heater outflow (only with motorised valve) |
| <b>6</b>    | Temperature limiter, heat exchanger                    | <b>72</b>    | Storage water heater return (only with motorised valve)  |
| <b>7</b>    | Testing point for gas supply pressure                  | <b>84</b>    | Motor (optional extra)                                   |
| <b>8.1</b>  | Pressure gauge   | <b>88</b>    | 3-way valve (optional extra)                             |
| <b>9</b>    | Flue gas temperature limiter                           | <b>221</b>   | Flue duct  |
| <b>13</b>   | Manifold   | <b>226</b>   | Fan  |
| <b>15</b>   | Safety valve   | <b>229</b>   | Inner casing   |
| <b>18</b>   | Central heating pump                                   | <b>234</b>   | Testing point for flue gas                               |
| <b>20</b>   | Expansion vessel                                       | <b>234.1</b> | Testing point for combustion air                         |
| <b>26</b>   | Charging valve   | <b>317</b>   | Display  |
| <b>27</b>   | Automatic vent   | <b>358</b>   | Condensate trap  |
| <b>29</b>   | Mixer unit   | <b>423</b>   | Siphon   |
| <b>29.1</b> | Bi-metallic thermostat for combustion air compensation | <b>443</b>   | Diaphragm  |
| <b>30</b>   | Burner   |              |  |
| <b>32</b>   | Flame sensing electrode                                |              |  |
| <b>33</b>   | Igniter electrode                                      |              |  |
| <b>35</b>   | Heat exchanger with cooled combustion chamber          |              |  |
| <b>36</b>   | Temperature sensor in CH flow                          |              |  |
| <b>43</b>   | CH flow  |              |  |
| <b>45</b>   | Gas inlet  |              |  |
| <b>47</b>   | CH return  |              |  |
| <b>52</b>   | Solenoid valve 1                                       |              |  |
| <b>52.1</b> | Solenoid valve 2                                       |              |  |
| <b>55</b>   | Filter   |              |  |
| <b>56</b>   | Gas valve CE 427                                       |              |  |
| <b>57</b>   | Main valve disc  |              |  |
| <b>61</b>   | Reset button   |              |  |
| <b>63</b>   | Adjustable gas flow restrictor                         |              |  |
| <b>64</b>   | Adjusting screw for min. gas inlet flow volume         |              |  |
| <b>69</b>   | Control valve  |              |  |

## 1.8 Electrical wiring diagram

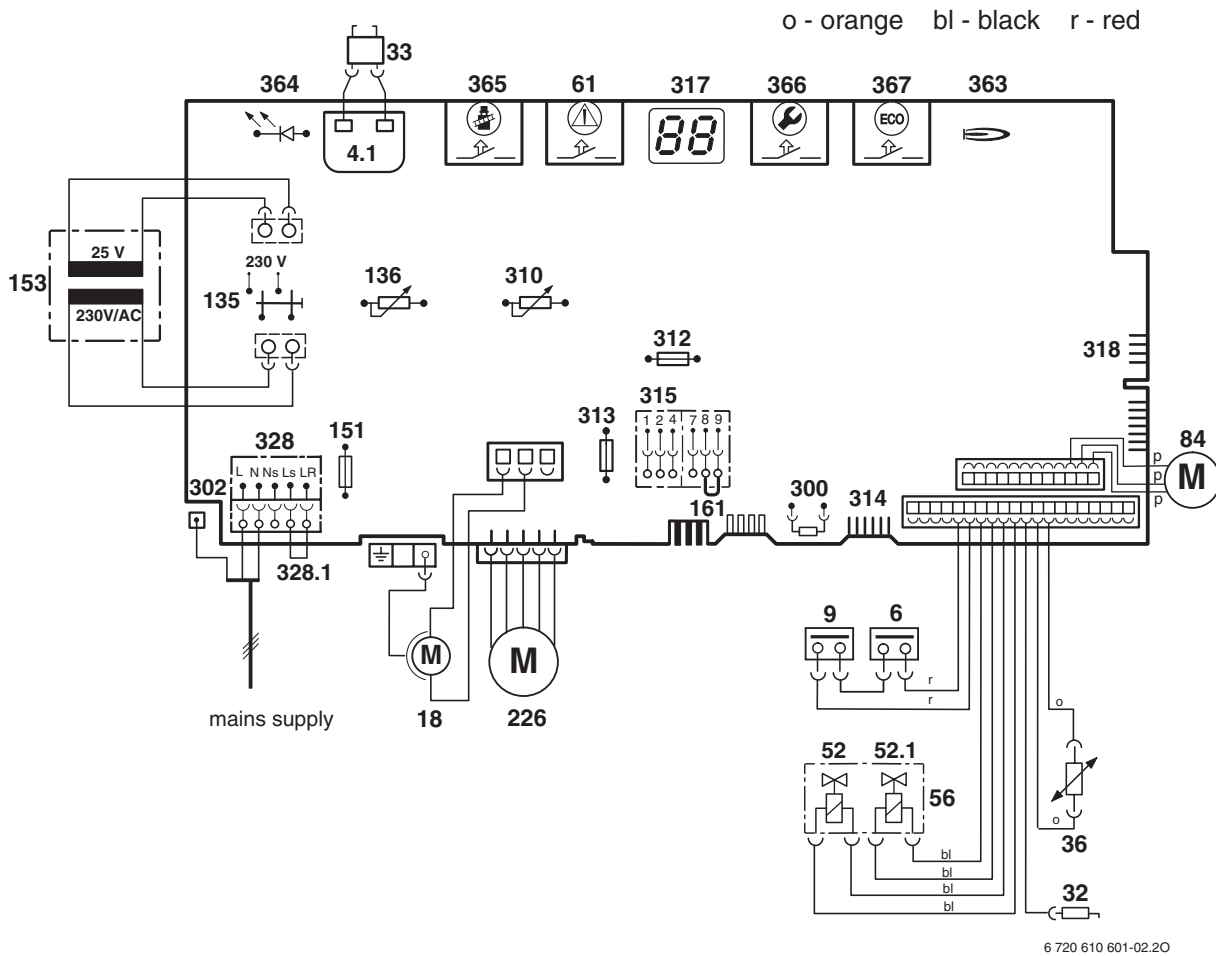


Fig. 4

<b>4.1</b>	Ignition transformer	<b>161</b>	Link
<b>6</b>	Temperature limiter, heat exchanger	<b>226</b>	Fan
<b>9</b>	Flue gas temperature limiter	<b>300</b>	Code plug
<b>18</b>	Pump	<b>302</b>	Earth connection
<b>32</b>	Flame sensing electrode	<b>310</b>	Temperature control for hot water
<b>33</b>	Ignition electrode	<b>312</b>	Fuse, slow T 1,6 A
<b>36</b>	Temperature sensor in CH flow	<b>313</b>	Fuse, slow T 0,5 A
<b>52</b>	Solenoid valve 1	<b>314</b>	Connector for programmer TA212E
<b>52.1</b>	Solenoid valve 2	<b>315</b>	Terminal block for programmer
<b>56</b>	Gas valve CE 427	<b>317</b>	Digital display
<b>61</b>	Reset button	<b>318</b>	Connector for timer
<b>84</b>	Motor (optional extra)	<b>328</b>	Terminal block for AC 230 V Mains supply
<b>135</b>	Master switch	<b>328.1</b>	Link
<b>136</b>	Temperature control for CH flow	<b>363</b>	Indicator lamp for burner
<b>151</b>	Fuse, slow 2.5 A, AC 230 V	<b>364</b>	Indicator lamp for power supply
<b>153</b>	Transformer	<b>365</b>	"Chimney sweep" button
		<b>366</b>	Service button
		<b>367</b>	ECO button



## 1.9 Technical data

	Units	Natural gas	Propane
Max. rated heat output net 40/30°C central heating	kW	29.1	29.1
Max. rated heat output net 50/30°C central heating	kW	28.8	28.8
Max. rated heat output net 80/60°C central heating	kW	27.2	27.2
Max. rated heat input net	kW	27.5	27.5
Min. rated heat output net 40/30°C	kW	8.4	11.6
Min. rated heat output net 50/30°C	kW	8.3	11.4
Min. rated heat output net 80/60°C	kW	7.4	10.5
Min. rated heat input net	kW	7.6	10.8
<b>Maximum gas flow rate - After 10 minutes from lighting</b>			
Natural gas G20 (CVnet 34.02 MJ/m <sup>3</sup> )	m <sup>3</sup> /h	2.9	-
LPG (CVnet 88 MJ/m <sup>3</sup> )	kg/h	-	2.1
<b>Gas supply pressure</b>			
Natural gas G20 (CVnet 34.02 MJ/m <sup>3</sup> )	mbar	20	-
LPG (CVnet 88 MJ/m <sup>3</sup> )	mbar	-	37
<b>Expansion vessel</b>			
Charge pressure	bar	0.75	0.75
Total capacity	l	10	10
<b>Flue</b>			
Flue gas temp. 80/60°C, rated/min. load	°C	67/55	67/55
Flue gas temp. 40/30°C, rated/min. load	°C	43/32	43/32
Residual delivery pressure (inc. pressure drop in air intake duct)	Pa	80	80
CO <sub>2</sub> level at max. rated heat output	%	9.2	10.8
CO <sub>2</sub> level at min. rated heat output	%	8.8	10.5
NO <sub>x</sub> -class		5	5
SEDBUK figure, Band A	%	90.7	90.7
<b>Condensate</b>			
Max. condensation rate (t <sub>R</sub> = 30°C)	l/h	2.3	2.3
pH-value, approx.		4.8	4.8
<b>General Data</b>			
Electrical power supply voltage	AC ... V	230	230
Frequency	Hz	50	50
Max. power consumption	W	101	101
Noise output level	dB(A)	36	36
Appliance protection rating	IP	X4D	X4D
Max. CH flow temperature	°C	nom. 90	nom. 90
Max. permissible operating pressure (CH)	bar	2.5	2.5
Permissible ambient temperatures	°C	0 - 50	0 - 50
Nominal capacity of appliance	l	3.75	3.75
Weight (excluding packing)	kg	46	46

Table 2

### Condensate analysis, mg/l

Ammonium	1.2	Nickel	0.15
Lead	≤ 0.01	Mercury	≤ 0.0001
Cadmium	≤ 0.001	Sulphate	1
Chromium	≤ 0.005	Zinc	≤ 0.015
Halogenated hydrocarbons	≤ 0.002	Tin	≤ 0.01
Hydrocarbons	0.015	Vanadium	≤ 0.001
Copper	0.028	pH-value	4.8

Table 3

### Flue system

HORIZONTAL 100 mm – Standard			
Overall Diameter of Duct	mm	100	Max. 4 m
Flue Terminal / Duct Assembly Length	mm	600	
Extension Duct Length	mm	1000	

Table 4

ALTERNATIVE HORIZONTAL 125 mm FLUE SYSTEM			
Overall Diameter of Duct	mm	125	Max. 13 m (including turret)
Flue Terminal / Duct Assembly	mm	1030	

Table 5

VERTICAL 125 mm FLUE SYSTEM			
Overall Diameter of Duct	mm	125	Max. 15 m
Flue Terminal / Duct Assembly	mm	1360	

Table 6

Elbow - 90 ° Equivalent length 2 m

Bend - 45 ° Equivalent length 1 m

### Gas supply

Total length of gas supply pipe (metres)			Pipe diameter (mm)
3	6	9	
Gas discharge rate (m <sup>3</sup> /h)			
8.7	5.8	4.6	22
18.0	12.0	9.4	28

Table 7

## 2 Installation regulations

Gas Safety (Installation & Use) Regulations 1998: All gas appliances must be installed by a competent person. Failure to install correctly could lead to prosecution.

The manufacturers notes must not be taken, in any way, as overriding statutory obligations.

The appliance must be installed in accordance with the current IEE Wiring Regulations, local Building Regulations, Building Standards (Scotland) (Consolidation), bye-laws of the local Water Company, Health and Safety Document 635 (Electricity at Work Regulations 1989) and any other local requirements.

Product Liability regulations indicate that, in certain circumstances, the installer can be held responsible, not only for mistakes on his part but also for damage resulting from the use of faulty materials. We advise the installer to avoid any risk by using only quality approved branded fittings.

The relevant British Standards should be followed i.e.

- BS 6798: Specification for the installation of gas fired hot water boilers of rated input not exceeding 60kW
- BS 5449: Central Heating for Domestic Premises
- BS 5546: Installation of gas hot water supplies for domestic purposes
- BS 5440:1: Flues and ventilation for gas appliances of rated input not exceeding 70 kW (net): Flues
- BS 5440:2: Flues and ventilation for gas appliances of rated input not exceeding 70 kW (net): Air Supply
- BS 6891: Installation of low pressure gas pipework installations up to 28mm (R1).
- BS 7074:1: Code of practice for domestic heating and hot water supply
- BS 7671: Requirements for Electrical Installation.

**These instructions must be followed.**

### 3 Installation



- Always turn off the gas cock before carrying out any work on components which carry gas.



Fixing of the appliance, gas and flue connections, commissioning of the system and electrical connections may only be carried out by competent persons authorised by CORGI.

#### 3.1 Important remarks

- Appliance should only be installed in sealed central heating systems.
- To avoid gas formation in the system, galvanised radiators or pipes must not be used.
- If a room thermostat is used: do not fit a thermostatic radiator valve on the radiator in the primary room.
- Add a suitable anti-freeze fluid compatible with aluminium to the water in the central heating system. Suitable products are available from Betz-Dearborn Tel.: 0151 4209563 and Fernox Tel.: 01799 550811.
- In our experience, the addition of sealing agents to the water in the central heating system can cause problems (deposits in the heat exchanger). For that reason we advise against their use.

#### 3.2 Sealed systems

The appliance must not be operated without the system being full of water, properly vented and pressurised.

The expansion vessel has a volume of 10 litres and is charged to a pressure of 0.75 bar.

The water capacity of the system is shown in table 10, page 26. If a greater capacity is required then an additional expansion vessel must be fitted into the system return as close to the appliance as possible. The system pressure can be set up to a maximum of 1.5 bar with 1 bar being the normal setting.

If the system pressure is greater than 2.5 bar when the appliance is operating at maximum temperature then an additional expansion vessel must be fitted into the system return as close to the appliance as possible.

The filling point must be at low level and arranged as shown in figs. 5 and 8.

The pressure relief valve is set to operate at 3 bar.

There must be no connection to the mains without the approval of the local water company. All connections in the system must be capable of withstanding a pressure of up to 3 bar and the radiator valves conform to the requirements of BS 2767:10.

If Thermostatic Radiator Valves are fitted then it is recommended that primary radiator is left open.

Repeated venting probably indicates a leak and this must be rectified to ensure the proper operation of the appliance.

**No galvanised radiators or pipes must be used.**

**If any system water treatment is required then only products suitable for use with Aluminium shall be used i.e Fernox- Copal or Superconcentrate or Sentinal X100, in accordance with the manufacturers instructions. The use of any other substances will invalidate the guarantee. The pH value of the system water must be less than 8 or the appliance guarantee will be invalidated.**

A drain cock to BS2879 must be fitted to the lowest point of the system.

**IMPORTANT: Check that no dirt is left in the water pipework as this could damage the appliance. Thoroughly flush the heating system and the mains water supply before fitting the appliance to the wall in accordance with the recommendations of BS7593:1992.**

**Note:**

A drain cock should be fitted at the lowest point of the heating circuit and beneath the appliance

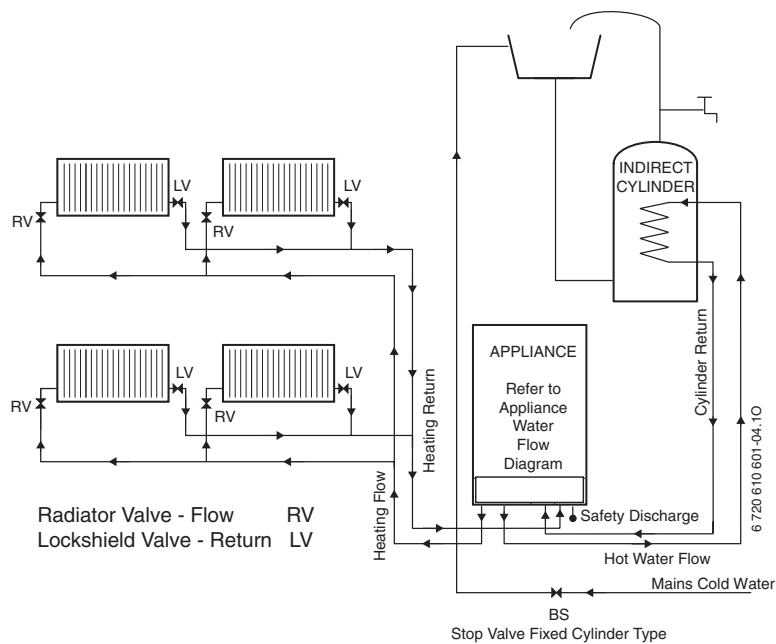


Fig. 5 System layout if using built-in diverter valve

**Note:**

A drain cock should be fitted at the lowest point of the heating circuit and beneath the appliance

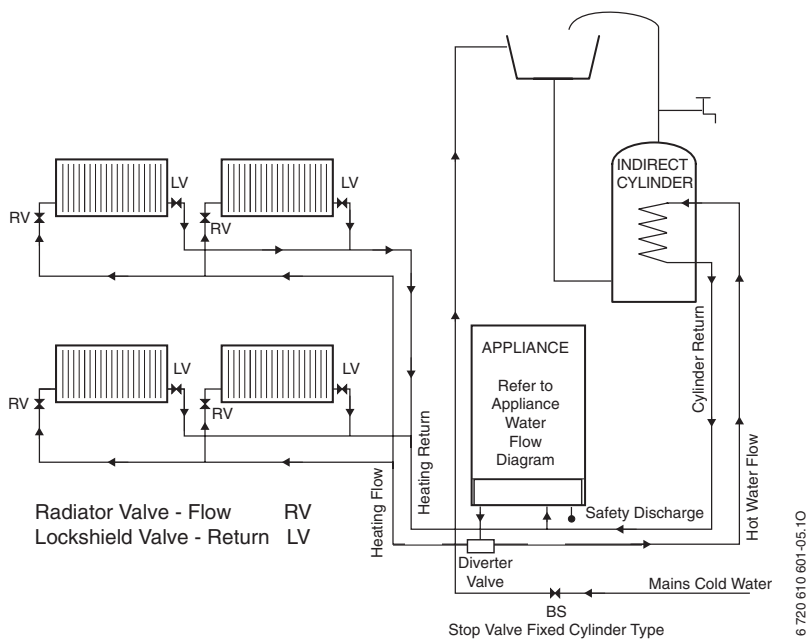


Fig. 6 System layout if using external diverter valve

**Note:**  
A drain cock should be fitted at the lowest point of the heating circuit and beneath the appliance

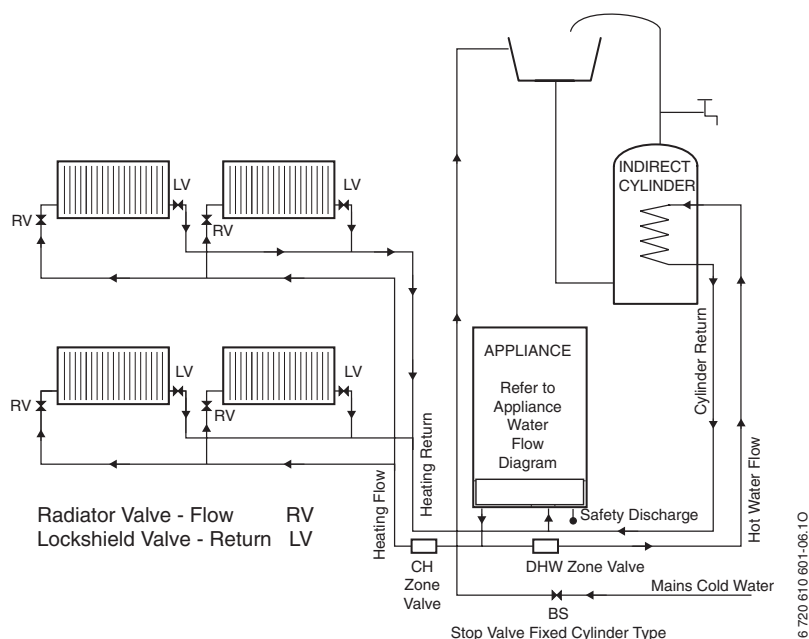


Fig. 7 System layout if using twin zone valves (S) plan

## Sealed system filling and make up

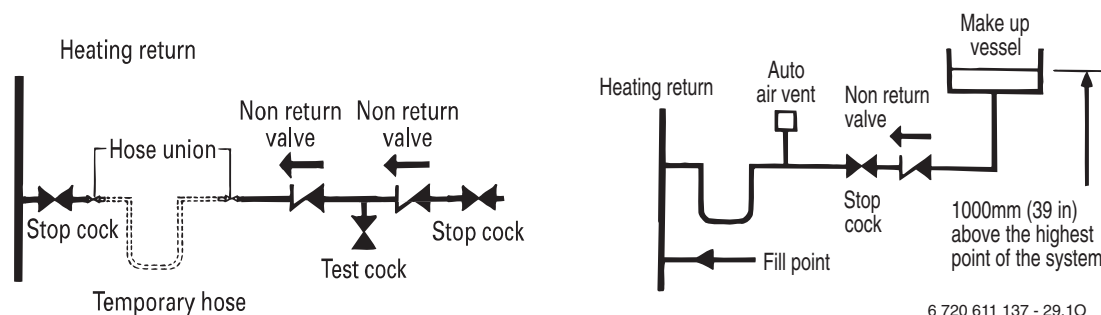


Fig. 8

## 3.3 Siting the appliance

### Regulations concerning the Installation Site

- Relevant national regulations must be complied with section 3.8.1.
- Consult the installation instructions for details of minimum clearances required.

### Combustion air

In order to prevent corrosion, the combustion air must not contain any corrosive substances.

Substances classed as corrosion-promoting include halogenated hydrocarbons which contain chlorine and fluorine compounds and are contained in some solvents, paints, adhesives, aerosol propellants and household cleaners, for example.

### Surface temperature

The max. surface temperature of the casing and the flue is less than 85 °C.


This means that, no special safety precautions are required with regard to flammable building materials and fitted furniture. The specified clearances must be maintained.

### Cupboard/Compartment

The appliance can be installed in a cupboard/compartment need for airing clothes providing that the requirements of BS6798 and BS5440:2 are followed. The low casing losses from the appliance eliminate the need for ventilation openings in the compartment.

### 3.4 Wall mounting frame assembly


- Take the wall mounting frame out of the package and screw together with 6 screws as shown in fig. 9. Use the inner lugs on the top and bottom horizontal sections for the appliances that are 440 mm wide.

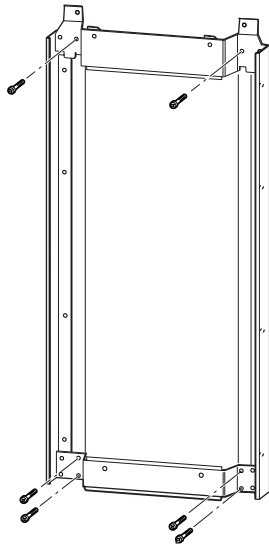

6 720 610 576-04.10

Fig. 9


- Hold the wall-mounting frame against the wall ensuring that it is vertical.
- Mark the position of the flue duct hole if a rear flue is to be used. Refer to fig. 1 and 18.
- Mark the holes for the wall mounting frame onto the wall, drill and plug the holes and screw the wall mounting frame to the wall with the screws provided.

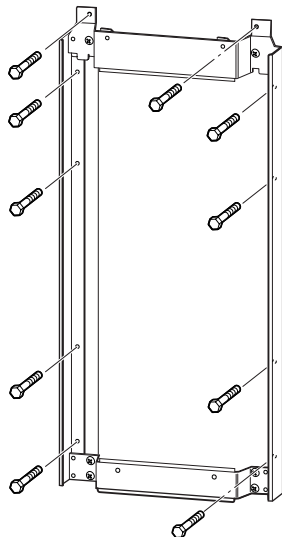

6 720 610 576-05.10

Fig. 10


- Screw the pre-plumbing manifold with two screws to the wall mounting frame.

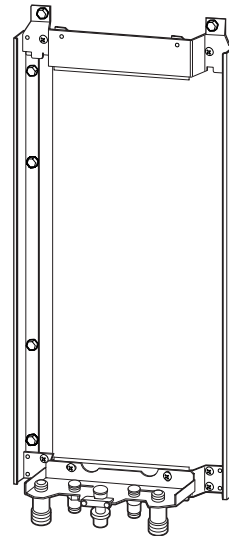

6 720 610 576-11.10

Fig. 11

### 3.5 Pre-piping the system

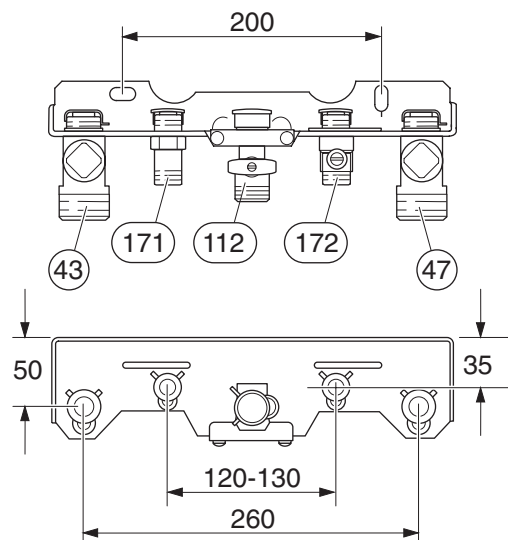

6 720 610 576-06.10

Fig. 12 Manifold


- 43** CH flow
- 47** CH return
- 112** Gas cock
- 171** Optional cylinder flow (used only with motorised valve)
- 172** Optional cylinder return (used only with motorised valve)

- A drain tap should be fitted at the lowest point of the central heating system.
- WRAS approved filling loop must be fitted.

## Condensate Termination and Route

The condensate connection on the Greenstar appliances is in 22 mm plastic. The pipe should be extended and run away from the appliance with a constant fall of 2.5 ° or 40 mm in every metre.


The condensate pipe can terminate into any of four areas:

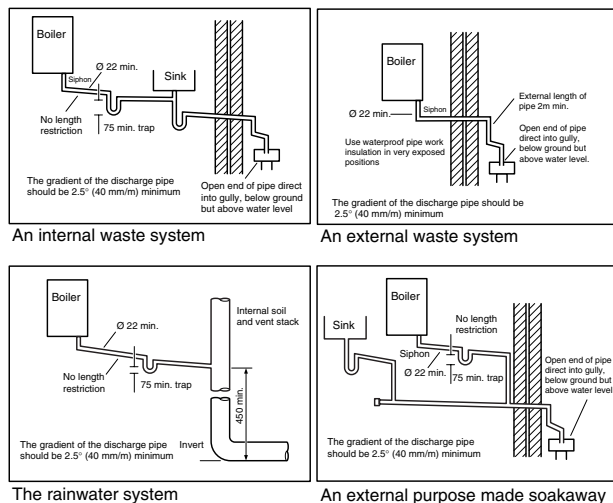

6 720 610 596 -03.10

Fig. 13

Whilst all of the above methods are acceptable it is always the best practice to terminate the condensate pipe via an internal waste system. This will eliminate the need for any external condensate pipe runs which can be susceptible to freezing in extreme weather.

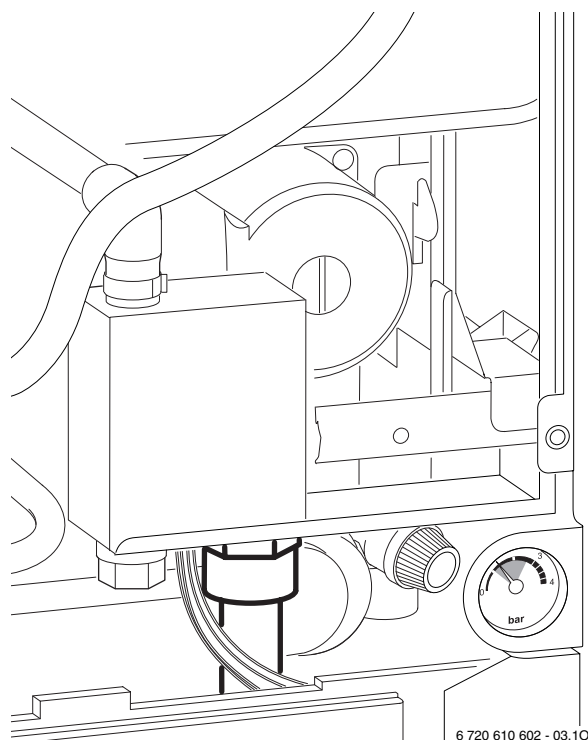

6 720 610 602 - 03.10

Fig. 14 Position of the condensate drain

## External condensate pipework

All Greenstar condensing boilers have within a syphonic condensate trap. Rather than the condensate constantly dripping into the discharge pipe, the condensate is collected into a trap which releases it in 100 ml quantities.

This will help prevent freezing occurring.

If there is no alternative and the condensate pipe has to be externally run, the following should be considered:

- The pipe run should take the shortest practical route.
- The pipework should be insulated with weather resistant insulation.
- The pipe should terminate as close as possible to the ground or drain, whilst still allowing the condensate to safely disperse. This would prevent wind blowing up the pipe.
- The pipework should be installed with the minimum of horizontal runs and with a downward slope of at least 2.5 °.

## 3.6 Fitting the appliance



**Benchmark:** For optimum performance after installation, this boiler and its associated central heating system must be flushed in accordance with the guidelines given in BS5793:1992 "Treatment of water in domestic hot water central heating systems".

- Remove packing, taking care to observe the instructions on the packing.
- Lie the boiler on its back.

### Removing the outer case



The outer case is secured against unauthorised removal by two clips (electrical safety).

Always secure the outer case with those clips again after refitting.

- Turn the clips with a screwdriver (1.).
- Slide the outer case upwards and then forwards to remove (2.).

- Remove the plastic caps from the boiler connections.

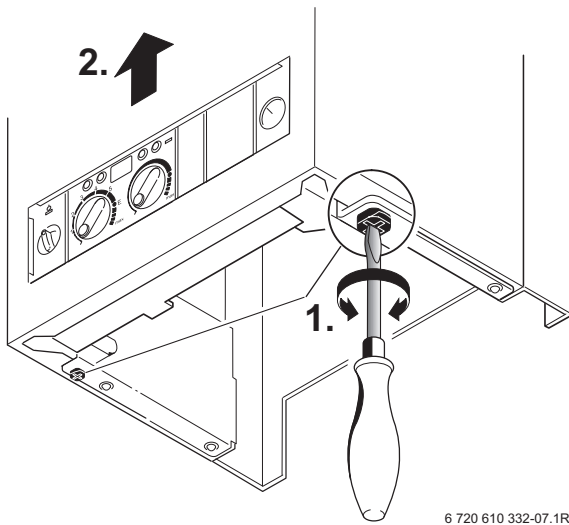


Fig. 15

### Fixing the appliance

- Fit the washers onto the gas and water connections.
- Lift the boiler onto the wall-mounting frame. The lugs pass through the rectangular holes in the boiler back panel.
- Take care not to disturb the washers on the connections.

### Connecting the flue duct

- Fit flue duct connector onto appliance flue spigot.
- Secure with the two screws supplied.

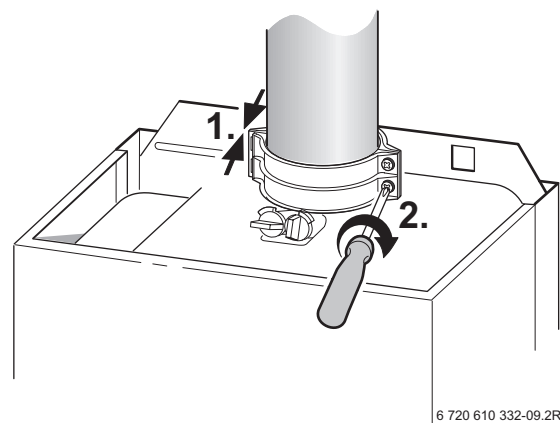


Fig. 16

- For remaining installation of flue assembly, refer to the relevant installation instructions.

## 3.7 Checking the connections

### Water connections

- Check that the O-rings or seals are in place before tightening the connection.
- Turn on the service valves for central heating flow and return and fill the heating system through a WRAS approved filling loop.
- Check all seals and unions for leaks (testing pressure max. 3.0 bar as indicated by pressure gauge).
- Check all connections for leaks.

### Gas supply pipe

- Check that the seal is in place before tightening the connection.
- Turn off gas cock to protect gas valve against damage from excessive pressure.
- Check gas supply pipe.
- Release the pressure on the gas supply pipe.

## 3.8 Flue Systems

The only flue systems that may be used are those supplied by Worcester Heat Systems. The flue system must be installed in accordance with the requirements of BS5440:1.

### Standard 100 mm flue system

The standard concentric flue system provides for a horizontal length of upto 4 m. Full instructions for fitting this flue are in Subsection 3.8.2 "Installation of the flue".

### Alternative 125 mm diameter flue systems

**Installation instructions for the alternative flue systems are sent with the appropriate flue kit.**

Systems are available to give a maximum horizontal length of 13 m.

A vertical flue system upto a height of 15 metres is available.

45° and 90° flue bends can be used with a corresponding reduction in flue length of 2m for each 90° bend and 1 m for each 45° bend used.

**IMPORTANT:** Any horizontal flue system fitted to a condensing boiler must incline towards the appliance at an angle of 3 % (30 mm per metre length) to prevent condensate dripping from the flue terminal. **This means that the clearance above the appliance must be increased to match the duct length.** Refer to fig. 1 on page 5.



### 3.8.1 Siting the Flue Terminal

The flue must be installed in accordance with BS 5440:1 and the Building Regulations. Flue terminals in carports and under balconies are to be avoided. The terminal must be positioned so that it does not cause an obstruction nor the combustion products a nuisance. See fig. 17 and table 8.

The terminal will, at times, give out a plume of water vapour and consideration must be given to this when choosing a terminal position. Keep clear of security

lighting, activated by passive infra-red sensing heads. If the terminal is less than 2 m above a surface to which people have access then a guard must be fitted. The guard must be evenly spaced about the terminal with a space of 50 mm in each direction and fixed with plated screws.

A guard Type K6 for the standard horizontal flue, can be obtained from Tower Flue Components, Vale Rise, Tonbridge TN9 1TB.

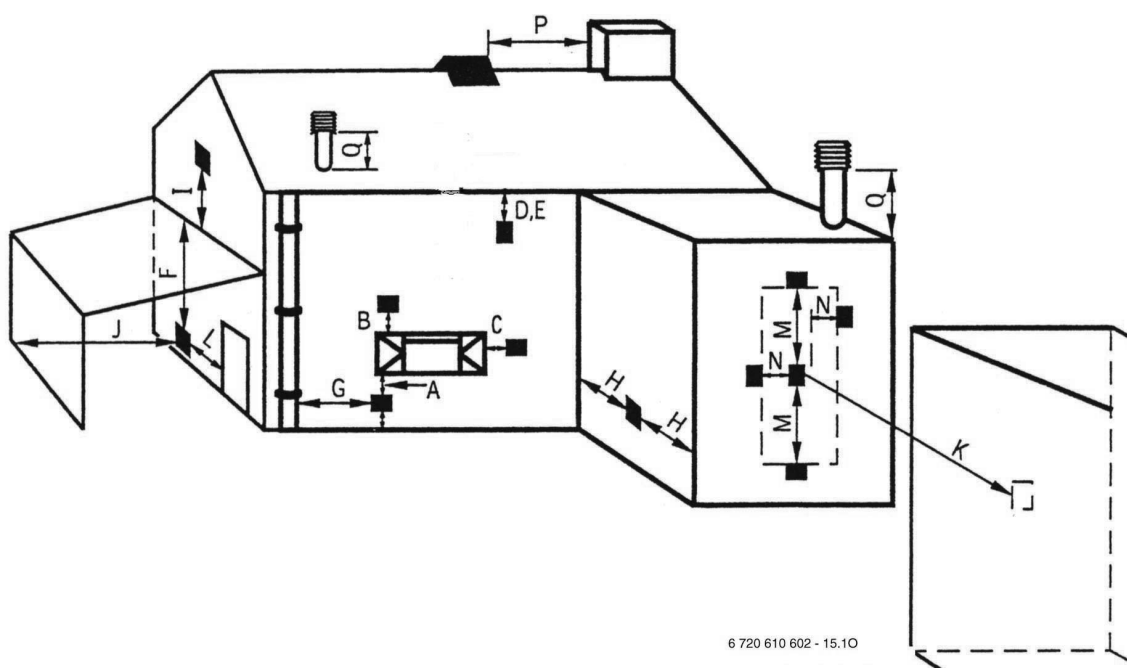


Fig. 17

Minimum dimensions of flue terminal positions (all types) (see fig. 17)

Dimension	Terminal Position (kW input expressed in net)	Balanced flues room sealed: Fanned draught
A <sup>1)</sup>	Directly below an opening, air brick, opening windows, etc.	300 mm
B <sup>1)</sup>	Above an opening, air brick, opening window, etc.	300 mm
C <sup>1)</sup>	Horizontally to an opening, air brick, opening window, etc.	300 mm
D	Below gutters, soil pipes or drain pipes	75 mm
E	Below eaves	200 mm
F <sup>2)</sup>	Below balconies or car port roof (lowest point)	200 mm
G	From a vertical drain pipe or soil pipe	150 mm
H	From an internal or external corner	300 mm
I	Above ground roof or balcony level	300 mm
J	From a surface facing the terminal	600 mm
K	From a terminal facing the terminal	1200 mm
L	From an opening in the car port (e. g. door, window) into the dwelling	1200 mm
M	Vertically from a terminal on the same wall	1500mm
N	Horizontally from a terminal on the same wall	300 mm
O	From the wall on which the terminal is mounted	Not applicable
P	From a vertical structure on the roof	Not applicable
Q	Above intersection with roof	Not applicable

Table 8

- 1) In addition, the terminal should not be nearer than 150 mm (fanned draught) to an opening in the building fabric formed for the purpose of accommodating a built-in element such as a window frame.  
2) Not recommended.

## 3.8.2 Installation of the flue

The standard 100 mm diameter horizontal flue system is suitable for lengths upto 4 m.

Flues upto 650 mm do not require an extension duct assembly.

Flues between 1600 mm and 4000 mm require extension duct assemblies.

NOTE: Flue lengths between 650 mm and 730 mm cannot be accommodated. Refer to fig. 19, 20, 21.

Standard system comprise: Flue turret - Flue turret clamp - Terminal assembly - Wall sealing - plates. Extension kit comprises: Air duct - Flue duct - Duct clamp. Refer to fig. 22.

Instructions for fitting other flue systems are packed with the relevant flue kit.

Check that the position chosen for the appliance is satisfactory. Refer to fig. 18.

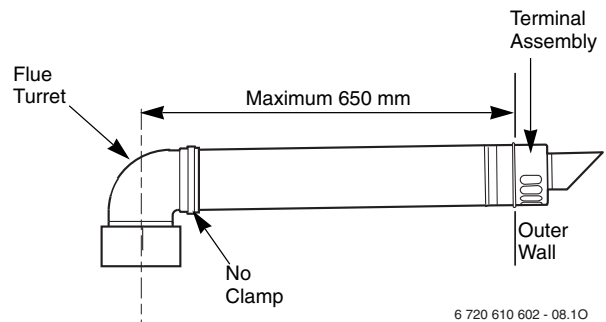


Fig. 19 Standard Flue



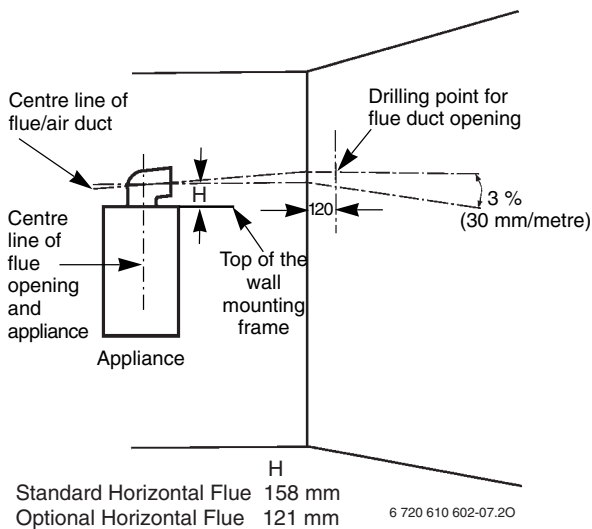


Fig. 18 Marking the position of the side flue opening

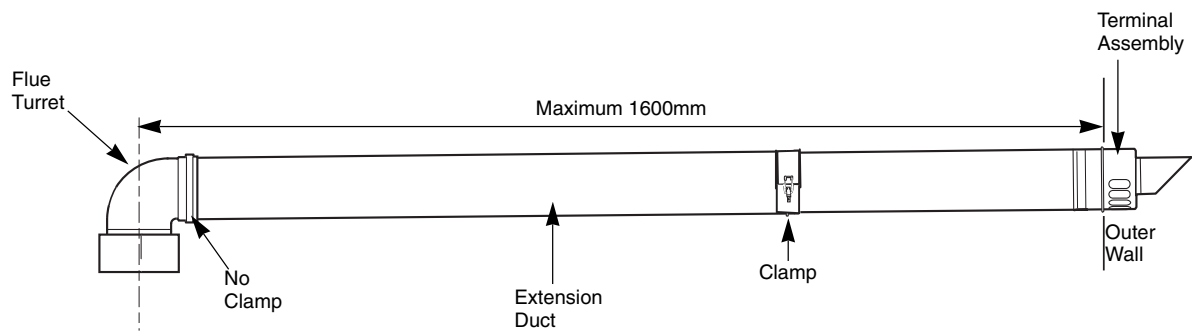


6 720 610 602 - 09.10

Fig. 20 Flue with one extension

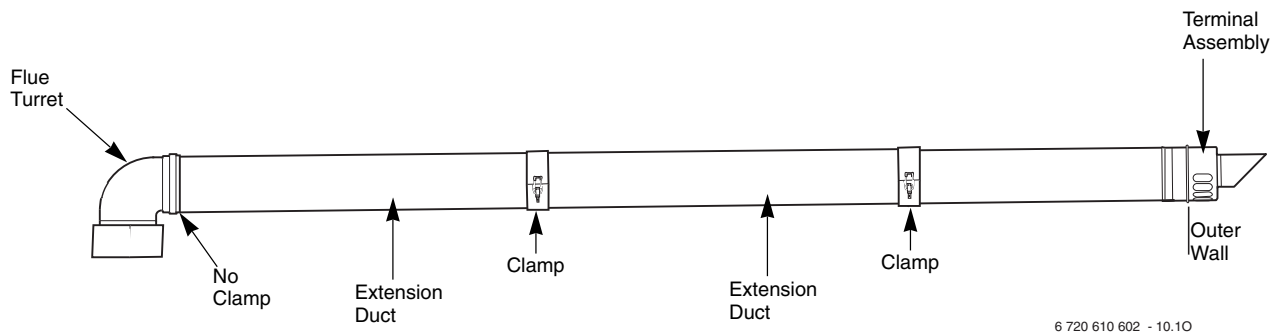

6 720 610 602 - 10.10

Fig. 21 Flue with extensions

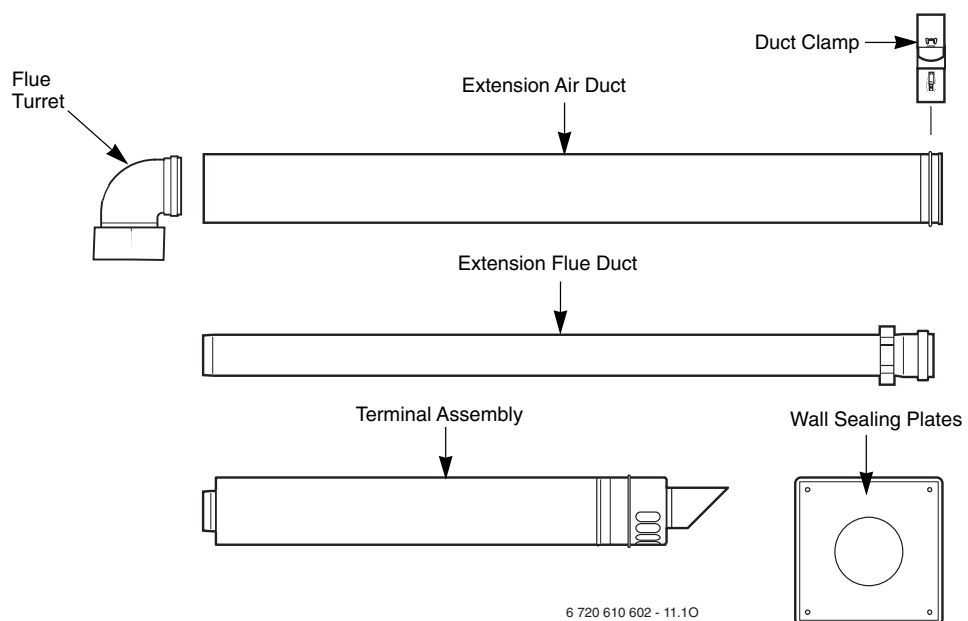

6 720 610 602 - 11.10

Fig. 22 Flue components

## 3.8.3 Flue duct preparation and assembly

Measure the flue length L. Refer to fig. 23, 24.

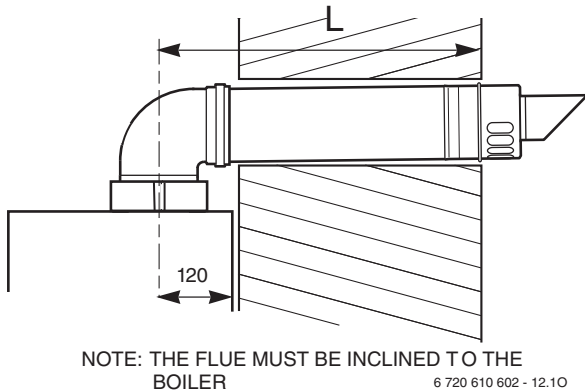


Fig. 23 Flue length - rear

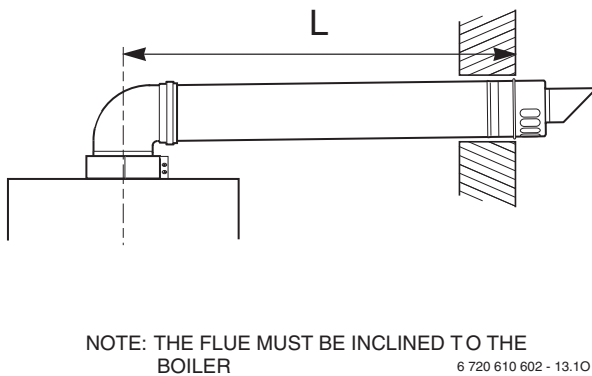


Fig. 24 Flue length - side

Mark off the lengths shown onto the ducts and cut to length. The cuts must be square and free from burrs. Terminal assembly outer (air) duct - L- 70 mm, inner (flue) duct - L- 50 mm. The measurement is made from the ridge at the terminal indicating the outer face of the wall. Refer to fig. 25.

Extension air duct - L- 70mm, flue duct - L- 50 mm. The measurement is from the formed end.

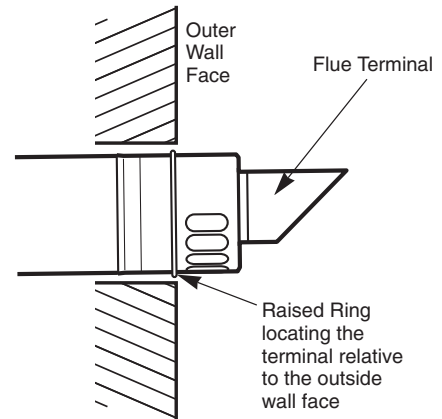


Fig. 25 Flue terminal position

Assemble flue system completely. Push the ducts fully together and clamp in the positions. The slope of the terminal outlet must face downwards.

The assembly will be made easier if a solvent free grease is lightly applied i.e Vaseline, to the male end of the ducts.

**NOTE: An inner wall sealing plate is provided which should be fitted to the ducts before assembly.**

Push the assembly through the wall and fix the turret to the appliance with the clamp. Refer to fig. 26.

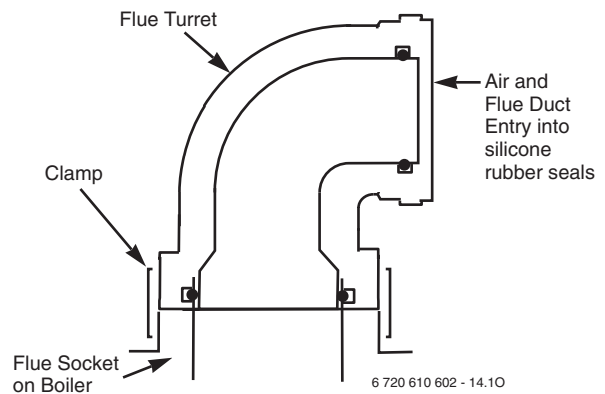


Fig. 26 Flue turret

Ensure that the turret is fully entered into the socket on the boiler. From the outside fix the outer wall plate to the terminal and, after ensuring the duct is properly inclined towards the boiler, fix the plate to the wall.

If the terminal is within 2 m of the ground where there is access then an approved terminal guard must be fitted. The guard must give a clearance of at least 50 mm around the terminal and be fixed with corrosion resistant screws.

## 4 Electrical connections



- ▶ Always disconnect the power supply to the appliance at the mains before carrying out any work on the electrical systems and components.

All control and safety systems are built into the appliance.

- ▶ Allow mains cable to protrude at least 50 cm from wall.
- ▶ To make splash-water proof (IP): cut the cable grommet hole size to match diameter of cable, see Fig. 29.

It must be possible to isolate the appliance. The appliance must be earthed.

The appliance must be connected to the mains through a 6 A double pole isolator with a contact separation 3 mm in all poles and supplying the appliance and controls only. The wiring must comply with the current requirements of the IEE Wiring Regulations and any local regulations which apply.

- Supply: 230 V ~ 50 Hz, 140 Watts
- Mains cable: PVC insulated 0.75 mm<sup>2</sup> (24 x 0.20 mm) to BS6500-Table 6. Temperature rated 100°C.
- Protection IPX4D
- External fuse 3 A.

### 4.1 Connecting the appliance

To gain access to the mains connection remove the drop down fascia cover. The drop down cover is removed by lowering it to the horizontal position and pushing firmly upwards at the rear of the supports to release the cover. Lift cover from the appliance.

After installation (or in the event of an electrical fault) the electrical system shall be checked for short circuits, fuse failure, incorrect polarity of connections, earth continuity and resistance to earth.

- ▶ Pull out cover panel at the bottom and remove. Refer to fig. 27.

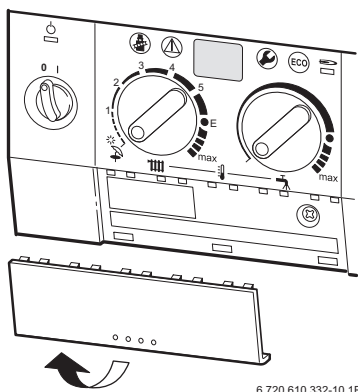


Fig. 27

- ▶ Remove screw and slide terminal cover forwards to remove. Refer to fig. 28.

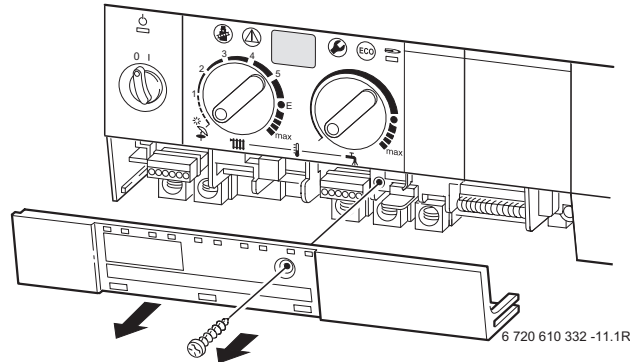


Fig. 28

- ▶ Cut cable grommet to diameter of cable.

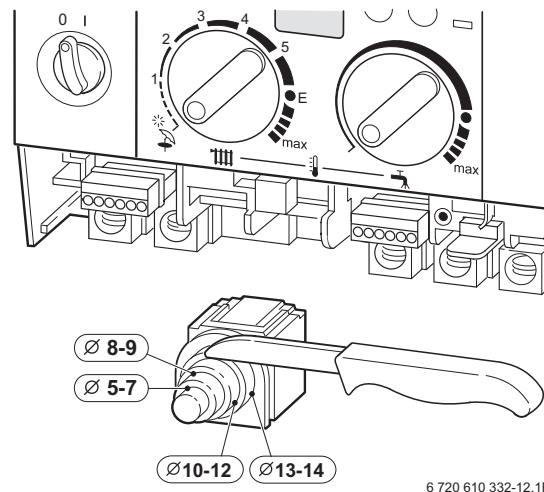


Fig. 29

- ▶ Feed cable through cable grommet and connect the mains supply cable, see Fig. 30.
- ▶ Secure cable in cable grommet by means of cable grip.

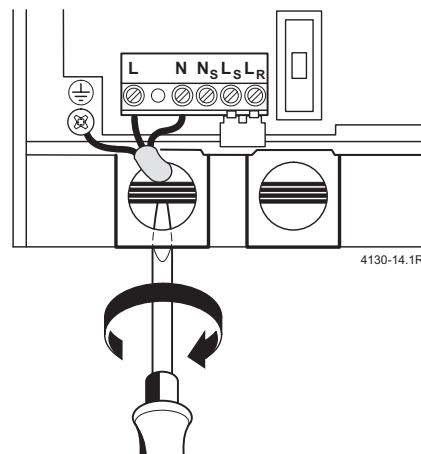


Fig. 30

## 4.2 Mains Voltage external controls connections

**NOTE:** Only double insulated controls not requiring an earth can be used

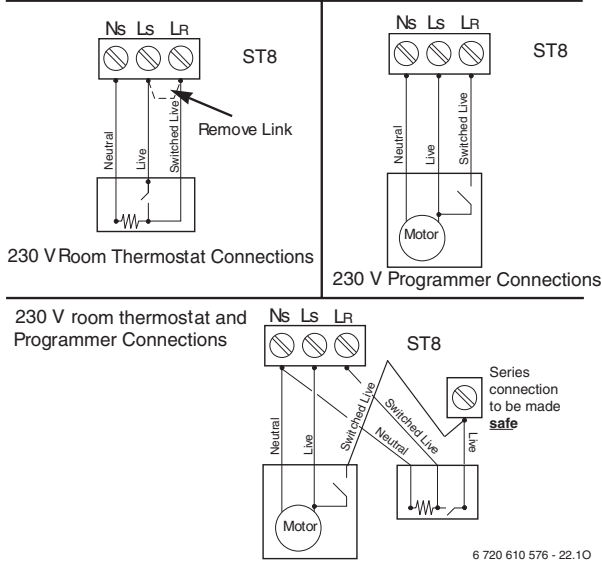


Fig. 31

## 4.3 Wiring to your system

The following diagrams show the wiring options for your system. Any other combinations of wiring are not recommended as it would increase complexity of the system. Please also follow wiring instructions of any proprietary system. Worcester Heat Systems cannot be held responsible for any incorrect wiring external from the boiler.

**Mains electrical supply:** The boiler should be connected to the mains supply as described in Section 4.1. This also provides the electrical supply to the system. **Note:** In all cases this must be the only electrical supply to the system. This ensures the safety of a single fused supply.

**Pump:** The boiler is fitted with an internal pump.

These diagrams show connection details of two popular proprietary systems (Honeywell and Siebe, formerly ACL), for systems from other manufacturers instructions or contact Worcester Technical Service 08705 266241 for assistance.

Upon completion of the electrical connections check for earth continuity, correct polarisation and resistance to earth.

### 4.3.1 Pre-wired Remote S Plan

If the system is fully pre-wired at a junction box remotely from the boiler, it can be easily connected back to the Worcester System Boiler.

Drop down the facia and gain access to the boiler wiring centre as described in section 4.1.

Connect the junction box as shown (see fig. 32)

#### Important notes:

- Observe wiring details given in Section.
- Remove the pre-fitted link from L<sub>S</sub> and L<sub>R</sub>.
- If a room thermostat is required, it can be wired to the remote junction box according to the proprietary instructions.
- If a frost thermostat is required, it can be wired to the remote junction box.


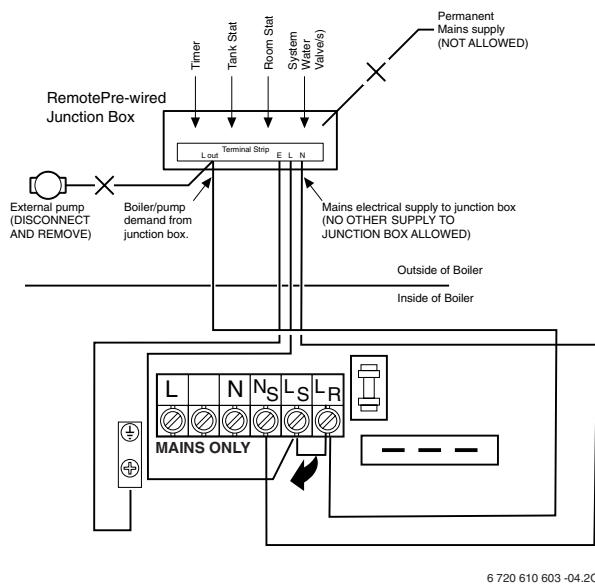


Fig. 32

## 5 Commissioning

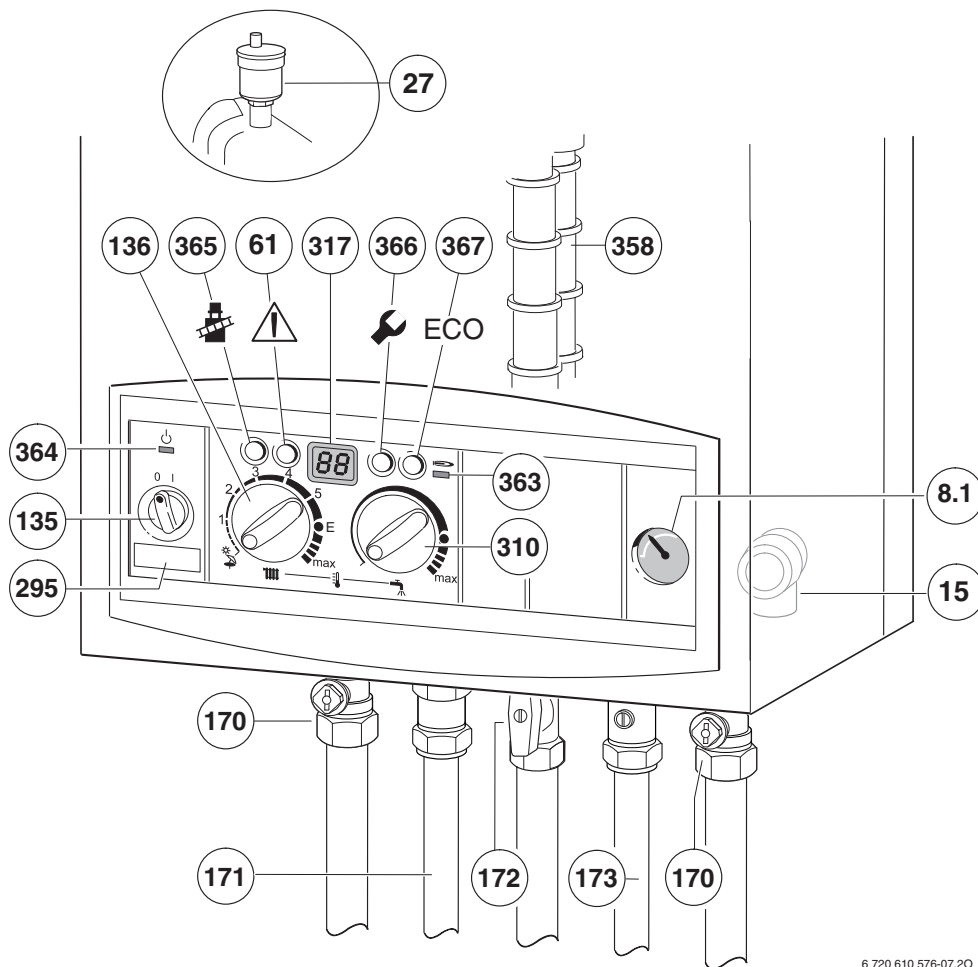

6 720 610 576-07.20

Fig. 33

- 8.1** Pressure gauge
- 15** Safety valve
- 27** Automatic vent
- 61** Reset button
- 135** Master switch
- 136** Temperature control for central heating
- 170** Service cocks on CH flow and return
- 171** Optional cylinder flow (used only with motorised valve)
- 172** Gas cock (shown in on position)
- 173** Optional cylinder return (used only with motorised valve)
- 295** Appliance type sticker
- 310** Temperature control for hot water
- 317** Multifunction display
- 358** Condensate trap
- 363** Indicator lamp for burner
- 364** Indicator lamp for power supply
- 365** "Chimney sweep" button
- 366** Service button
- 367** ECO button

### 5.1 Commissioning



**Never** run the appliance when empty or unpressurised.



The operational CO<sub>2</sub> level is set at the factory and no adjustment is necessary when installing a natural gas fired appliance.

**Benchmark Water Treatment:** For optimum performance after installation, this boiler and its associated central heating system should be flushed in accordance with the guidelines given in BS7593:1992 - Treatment of water in domestic hot water systems. Full instructions are supplied with proprietary cleansers sold for this purpose. If an inhibitor is to be used after flushing, it should be used in accordance with the inhibitor manufacturers instructions.

To drain the appliance shut the system valves and open the system drain point.

Suitable flushing agents and inhibitors are available from Betz/Dearborn Tel.: 0151 4209563 and Fernox Tel.: 01799 550811. Instructions for use are supplied with these products.

- ▶ **Before commissioning, the gas supply pressure must be checked at the gas supply pressure test point (see page 6, fig. 2, item 7). Natural gas appliances must not be operated if the gas supply pressure is below 18 mbar or above 24 mbar. LPG appliances must not be operated if the supply pressure is not 37 mbar at the inlet to the appliance.**
- ▶ Unscrew the condensation trap (358) and pull out, fill with approx. 1/4 l of water and refit. Refer to fig. 33.
- ▶ Adjust charge pressure of expansion vessel to static head of the central heating system (see page 26).
- ▶ Open all system radiator valves.
- ▶ Turn on service valves (170), fill central heating system to pressure of 1 - 2 bar through the WRAS approved filling loop. Refer to fig. 33.
- ▶ Vent radiators.
- ▶ Refill heating system and set the pressure to 1 bar.
- ▶ Turn on cold water service cock (173). Refer to fig. 33.
- ▶ Check that the gas type specified on the identification plate matches that of the gas supply.
- ▶ Turn on gas cock (172). Refer to fig. 33.

## 5.2 Switching the appliance on/off

### Switching on

- ▶ Switch on the appliance at the master switch (I). The indicator lamp shows green and the display will show the central heating flow temperature, when the appliance is operating in the central heating mode.

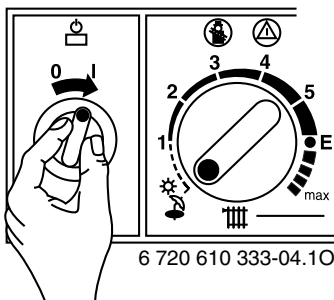


Fig. 34



If the display alternates between **-II-** and the central heating flow temperature, the trap filling programme is active.

The trap filling programme ensures that the condensation trap is filled after the appliance has been installed or after the appliance has been out of use for a long period or the mains supply has been interrupted. For that reason, the appliance remains at minimum heating output for 15 minutes.

### Switching off the appliance


- ▶ Set the master switch to (0).  
The green indicator lamp goes out.




- ▶ Always disconnect the appliance from the power supply (fuse, circuit breaker) before carrying out any work on the electrical systems or components.

## 5.3 Switching on the central heating

The central heating flow temperature is adjustable between 35°C and 88°C. Refer to table 11, page 26.

- ▶ Turn the temperature control  to set the flow temperature to a level appropriate to the type of central heating system:
  - Underfloor heating: e.g. setting “3” (approx. 50°C)
  - Low-temperature heating: setting “E” (approx. 75°C)
  - Central heating systems for flow temperatures up to 88°C: limited “max” setting for low-temperature operation (see page 26).

When the burner is alight, the **red** indicator lamp lights up.

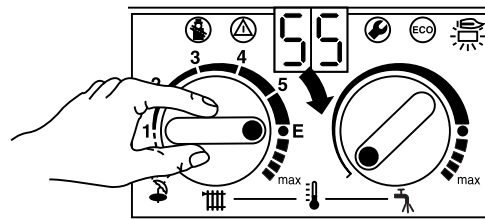

6 720 610 333-05.10

Fig. 35

## 5.4 System controls


- ▶ Set room thermostat to the desired room temperature.
- ▶ Set outside - temperature driven control unit, if fitted. Refer to the instructions with the control.
- ▶ Set the thermostatic radiator valves to the desired settings.



## 5.5 Appliances with optional plug-in diverter valve: Setting hot water temperature



- ▶ Do not set the temperature higher than 60°C for normal operation.
- ▶ Only use temperatures of up to 70°C temporarily for thermal disinfection purposes.

- ▶ Set the hot water temperature by means of the temperature control  on the appliance.

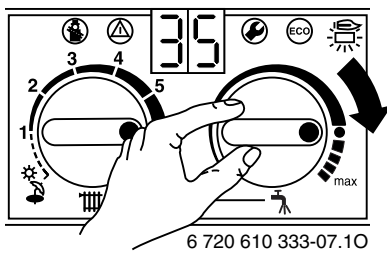


Fig. 36

Control Setting	Water Temperature
Anti-clockwise limit	approx. 10°C (frost protection)
●	approx. 60°C
Clockwise limit	approx. 70°C

Table 9

### ECO button

Pressing and holding the ECO button  switches from **Comfort mode** to **ECO-mode**.

### Comfort mode, ECO button is not lit (factory setting)

Comfort mode the hot water tank has priority. The hot water cylinder is first heated up to the set temperature. The appliance then switches to central heating mode.

### ECO mode, button is lit

In ECO mode the appliance switches between central heating mode and cylinder charging mode every 12 minutes.

## 5.6 Frost protection

Frost protection is only guaranteed from the external room temperature thermostat.

- ▶ Leave master switch switched on.

If the appliance is to be left for long periods switch the central heating off:

- ▶ Add a suitable anti-freeze fluid to the water in the central heating system.  
Suitable products are available from Betz-Dearborn Tel.: 0151 4209563 and Fernox Tel.: 01799 550811.

## 5.7 Pump anti-seize function



This function prevents the central heating pump seizing after long periods of inactivity.


Every time the pump is switched off, a timer is started. If after 24 hours the pump has not run again, it is switched on for a period of 5 minutes.


## 5.8 Fault Condition



A list of faults that may occur is given on page 41.

In the unlikely event of a fault occurring while the appliance is in operation:

The display then shows a fault code and the button  may also flash.

If the button  flashes:

- ▶ Press and hold the button  until the display shows “- -”.

The appliance will then start up again and the display will show the central heating flow temperature.

If the button  does not flash:

- ▶ Switch the appliance off and then on again at the master switch.  
The appliance will start up again and the central heating flow temperature will be displayed.

## 6 Individual settings

### 6.1 Mechanical settings

#### 6.1.1 Checking the size of the expansion vessel

Maximum pressure at maximum CH flow temperature is 2.5 bar. If the pressure is greater than this then fit an extra expansion vessel. Refer to table 10.

#### System Capacity – BS7074:1

Expansion Vessel Pressure and System Capacity			
Expansion Vessel	litres	10	
Expansion Vessel Charge Pressure	bar	0.75	
System pressure and capacity	1 bar	litres	82
	1.5 bar	litres	46

Table 10

#### 6.1.2 Setting the central heating flow temperature

The central heating flow temperature can be set to between 50°C and 88°C.



With underfloor heating systems, observe the maximum permissible flow temperatures.


#### Limited maximum setting for low-temperature operation

The temperature control is factory limited to setting **E**, giving a maximum flow temperature of 75°C.

Adjustment of the heating output to the calculated heat demand is not required by the heating systems regulations.

#### Removing the maximum setting limit

For heating systems which require higher flow temperatures, the maximum setting limit can be removed.

- Lift off the yellow button on the temperature control  with a screwdriver.

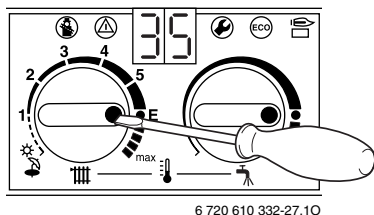


Fig. 37

- Rotate yellow button through 180° and replace (dot facing inwards).

The CH flow temperature is no longer limited.

Control setting	CH flow temperature
1	approx. 50°C
2	approx. 55°C
3	approx. 60°C
4	approx. 65°C
5	approx. 70°C
<b>E</b>	<b>approx. 75°C</b>
max	approx. 88°C


Table 11

#### 6.1.3 Changing the heating pump characteristic

The speed of the central heating pump can be altered on the pump terminal box.



At switch position 1, maximum output is not delivered if hot water mode is active. Position 1 must not be used on combi appliances.

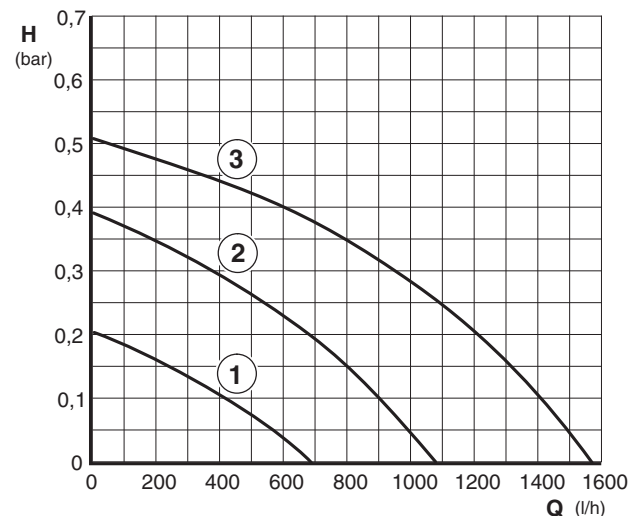

6 720 610 576-23.20

Fig. 38

- 1** Pump characteristic for switch position 1
- 2** Pump characteristic for switch position 2
- 3** Pump characteristic for switch position 3
- H** Residual delivery pressure
- Q** Water circulation rate

## 6.2 Settings on the Bosch Heatronic

### 6.2.1 Operating the Bosch Heatronic

The Bosch Heatronic enables easy setting and checking of a large number of appliance functions.

This description is limited to those functions required for commissioning.

For a full description of all available functions, please refer to the Service booklet for the Engineer, order no. 7 181 465 346.

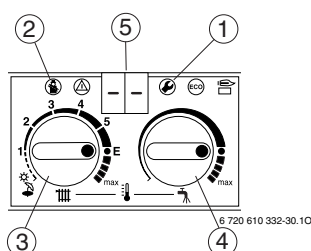


Fig. 39 Appliance controls

- 1 Service button
- 2 "Chimney sweep" button
- 3 Temperature control for central heating
- 4 Temperature control for hot water
- 5 Display

#### Selecting service function:



Note the positions of the temperature controls and . After completing the settings, return the temperature controls to their original positions.

The service functions are subdivided into two levels: **Level 1** comprises service functions up to function **4.9**, while **Level 2** consists of the service functions from **5.0** upwards.

- ▶ To select a service function on Level 1: press and hold the button until the display shows --.
- ▶ To select a service function on Level 2: press and hold the buttons and simultaneously until the display shows ==.
- ▶ Then turn the temperature control to select the required function.

Service function	Code no.	See page
Pump control mode	<b>2.2</b>	27
Anti-cycle time	<b>2.4</b>	27
Max. CH flow temperature	<b>2.5</b>	28
Switching difference	<b>2.6</b>	28
Max. heating output	<b>5.0</b>	28

Table 12

The service function **5.0** may be reset.

#### Entering a setting

- ▶ To enter the setting for a function, turn the temperature control .

#### Storing a setting

- ▶ Level 1: press and hold the button until the display shows [ ].
- ▶ Level 2: press and hold the and buttons simultaneously until the display shows [ ].

#### After completing the settings

- ▶ Reset the temperature controls and to their original positions.

### 6.2.2 Selecting the pump control mode for central heating mode (Service Function 2.2)



If an outside temperature driven control unit is connected, pump control mode 3 is automatically activated

The choice of settings is as follows:

- **Control Mode 1**  
**For heating equipment without a control unit.**  
The pump is controlled by the central heating flow temperature control.
- **Control Mode 2 (factory setting)**  
For heating systems with room thermostat.  
The central heating flow temperature control controls only the gas, the pump is not affected. The room thermostat controls both the gas and the pump.  
The pump and fan have an overrun time of between 15 s and 3 min.
- **Control Mode 3**  
The pump is controlled by the outside temperature driven control unit. In summer mode, the pump operates only for hot water mode.

### 6.2.3 Setting the anti-cycle time (Service Function 2.4)

This service function is only active if Service Function 2.7, automatic anti-cycle time, is deactivated.

The anti-cycle time can be set to between 0 and 15 minutes (is **factory set** to 3 minutes).

If the setting 0 is entered, the anti-cycle time is inactive.

The shortest possible anti-cycle time is 1 minute (recommended for single-pipe and hot-air heating systems).



If the appliance is connected to an outside-temperature controlled heating programmer, the anti-cycle time does not need to be set on the appliance and is optimised by the programmer instead.

### 6.2.4 Setting the maxim CH flow temperature (Service Function 2.5)

The maximum CH flow temperature can be set to between 35°C and 88°C (**factory setting**).

### 6.2.5 Setting the switching difference (Service Function 2.6)



If the appliance is connected to an outside-temperature controlled programmer, the programmer sets the switching difference.

It does not need to be set on the appliance.

The switching difference is the permissible divergence from the specified CH flow temperature. It can be set in increments of 1 K. The adjustment range is 1 to 30 K (is **factory set** to 0 K). The minimum CH flow temperature is 30°C.

### 6.2.6 Setting the heating output (Service Function 5.0)

The heating output can be set to any level between min. rated heat output and max rated heat output to limit it to the specific heat requirements.



The full rated heat output is still available for hot water or charging the hot water cylinder even if the heating output has been limited.

The factory setting is the max. rated heat output.

- ▶ Set the room thermostat and thermostatic radiator valves to max. temperature.
  - ▶ Press and hold the and buttons simultaneously until the display shows ==.
- The and buttons will light up.

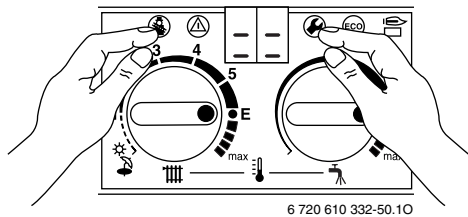


Fig. 40

- ▶ Turn the temperature control until the display shows **5.0**.  
After a short delay, the display then shows the set heating output in percent.

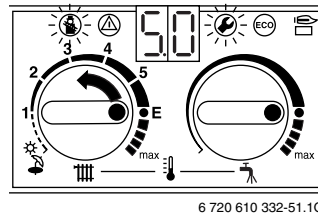


Fig. 41

- ▶ Refer to the settings tables for heating and cylinder charging output to obtain the relevant code for the desired heating output in kW (see page 42).
- ▶ Turn the temperature control until the display shows the desired code number.  
The display and the and buttons will flash.
- ▶ Measure the gas flow rate and compare with the figures specified for the code number displayed. If figures do not match, adjust the code number!
- ▶ Press and hold the and buttons simultaneously until the display shows [ ].  
The heating output is now stored.

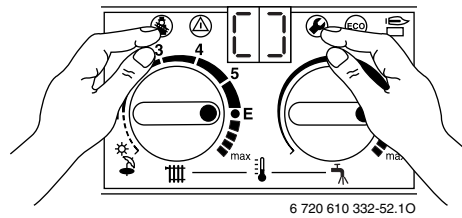


Fig. 42

- ▶ Return the temperature controls and to their original positions.  
The display will revert to the CH flow temperate.

## 6.3 Setting the gas/air ratio

The appliance is set at the factory and adjustment is not necessary.

## 7 Converting the appliance to different gas types

The setting is factory sealed at maximum. Adjustment to the rated heat input and min. heat input is not necessary.

### Checking the gas supply pressure

- Check the gas supply pressure at the gas supply pressure testing point.



Natural gas appliances must not be operated if the gas supply pressure is below 18 mbar or above 24 mbar.  
LPG appliances must not be operated if the supply pressure is below or above 37 mbar.

### Natural gas

- Appliances for **natural gas type G20** are factory set to Wobbe-Index  $15 \text{ kWh/m}^3$  and 20 mbar supply pressure and sealed.

### Conversion kits

Model	For conversion from ...	Order no.
ZB 7-28 HE	N.G to L.P.G	7 710 149 045
ZB 11-28 HE	L.P.G to N.G	7 710 239 081

Table 13

- Instructions are sent with each conversion kit.

### 7.1 Setting the gas/air ratio

**The gas/air ratio may only be adjusted on the basis of a  $\text{CO}_2$  measurement at max. heat output and min. heat output using an electronic tester.**

- Switch off the appliance at the master switch (O).
- Remove the outer case (see page 16, refer to fig. 15).
- Switch on the appliance at the master switch (I).
- Set room thermostat to maximum temperature.
- Open thermostatic radiator valves.
- Unscrew sealing plug from flue gas testing point (234). Refer to fig. 43.
- Insert testing probe about 135 mm into the flue gas testing point and seal testing point.

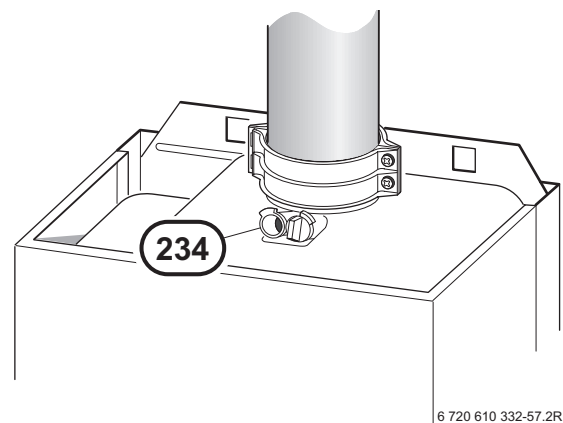


Fig. 43

- Press and hold button until the display shows --. The button will light up.

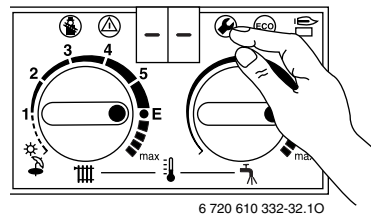


Fig. 44

- Turn the temperature control until the display shows 2.0. After a short delay, the current operating mode setting will be displayed 0. (= Normal mode).

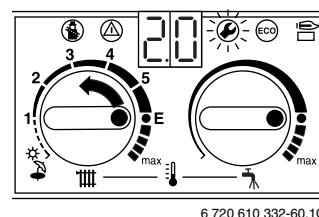




Fig. 45

- ▶ Turn the temperature control  until the display shows **2**. (= max. rated heat output).  
The display and the  button will flash.

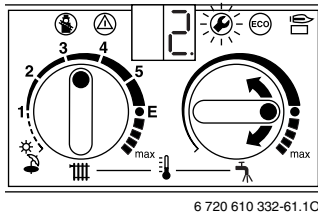


Fig. 46

- ▶ Measure the CO<sub>2</sub> level.
- ▶ Prise off the seal on the gas flow restrictor.
- ▶ Adjust the gas flow restrictor (63) to obtain the CO<sub>2</sub> level given in Table 14. Refer to fig. 47.

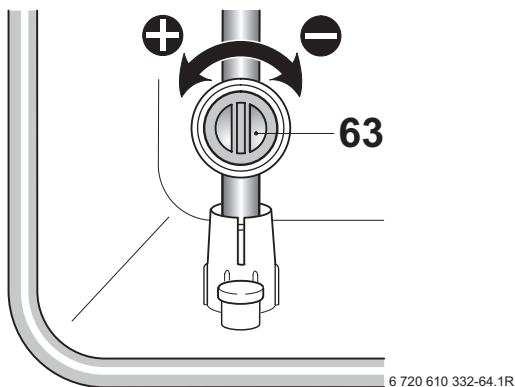




Fig. 47

Gas Type	CO <sub>2</sub> reading at max. rated heat output	CO <sub>2</sub> reading at min. rated heat output
Natural gas type G20	9.2 %	8.8 %
LPG G31 (propane)	10.8 %	10.5 %

Table 14

- ▶ Turn the temperature control  anti-clockwise until the display shows **1**. (= min. rated heat output).  
The display and the  button will flash.

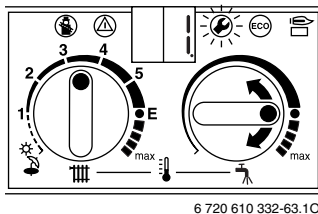


Fig. 48

- ▶ Measure the CO<sub>2</sub> level.

- ▶ Remove the seal from the gas valve adjusting screw (64) and adjust the CO<sub>2</sub> level to the figure given in Table 14 for min. rated heat output.

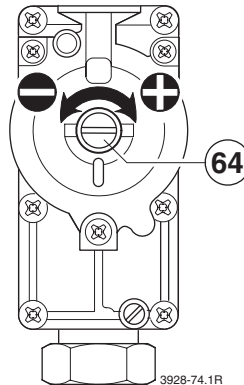







Fig. 49

- ▶ Recheck the levels at min. and max. rated heat output and re-adjust if necessary.
- ▶ Turn the temperature control  anti-clockwise as far as the stop so that the display shows **0**. (= Normal operating mode).  
The display and the  button will flash.
- ▶ Press and hold the  button until the display shows [ ].
- ▶ Reset the temperature controls  and  to their original positions.  
The display will revert to the CH flow temperature.
- ▶ Remove testing probe from the flue gas testing point (234) and refit sealing plug.
- ▶ Re-seal gas valve adjusting screw and gas flow restrictor.
- ▶ Replace outer case and secure.
- ▶ Set room thermostat and thermostatic radiator valves to the desired temperature.

## 7.2 Testing combustion air/flue gas at set heat output

### 7.2.1 Testing the O<sub>2</sub> or CO<sub>2</sub> level in the combustion air




By testing the O<sub>2</sub> or CO<sub>2</sub> level in the combustion air the gas tightness of a type C<sub>13</sub> or C<sub>33</sub> **flue system** can be checked. The O<sub>2</sub> level must not be less than 20,6 %. The CO<sub>2</sub> level must not exceed 0,2 %.

- ▶ Press and hold the button until the display shows --. "Chimney sweep" mode is now active. The button will light up and the display shows the CH flow temperature.



In "chimney sweep" mode, the appliance switches to max. rated heat output or the set heating output. You then have 15 minutes in which to measure the levels. After that, the appliance switches back from "chimney sweep" mode to normal mode.

- ▶ Remove sealing plug from combustion air testing point (234.1, fig. 50).
- ▶ Insert testing probe about 80 mm into the testing point and seal testing point.

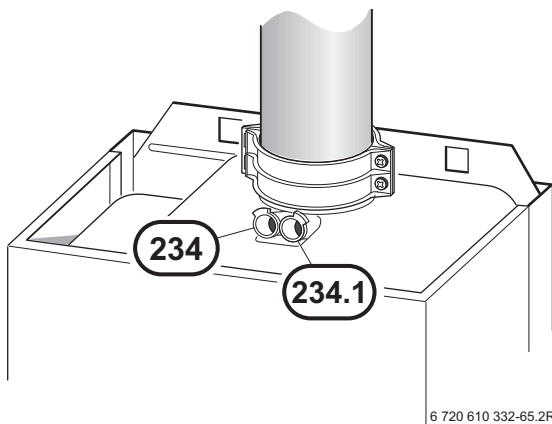

6 720 610 332-65.2R

Fig. 50

- ▶ Measure O<sub>2</sub> and CO<sub>2</sub> levels.
- ▶ Refit sealing plug.
- ▶ Press and hold button until the display shows --. The button will stop flashing and the display shows the CH flow temperature.

### 7.2.2 Testing CO and CO<sub>2</sub>

- ▶ Press and hold the button until the display shows --. "Chimney sweep" mode is now active. The button will light up and the display shows the CH flow temperature.



You have 15 minutes in which to measure the levels. After that, the appliance switches back from "chimney sweep" mode to normal mode.

- ▶ Remove sealing plug from flue gas testing point (234, fig. 50).
- ▶ Insert testing probe about 135 mm into the testing point and seal testing point.
- ▶ CO- and CO<sub>2</sub> levels.
- ▶ Refit sealing plug.
- ▶ Press and hold button until the display shows --. The button will stop flashing and the display shows the CH flow temperature.



### 8 Maintenance



- ▶ Always disconnect the appliance from the electrical power supply (fuse, circuit breaker) before carrying out any work on the electrical systems or components.



- ▶ Always turn off the gas cock before carrying out any work on components which carry gas.



---

There is a special Service booklet for the Engineer, order no. 7 181 465 346, available to competent persons.

---



---

All safety and control systems are monitored by the Bosch Heatronic. In the event of a component fault, the display shows a fault code.

---

- ▶ The User should be recommended to have the appliance serviced regularly by a competent person (see Maintenance Contract).
- ▶ Use only genuine spare parts
- ▶ Refer to the Spare Parts List when ordering spare parts.
- ▶ Always renew seals and O-rings removed during servicing or repair work.
- ▶ Use only the following types of grease:
  - Water valve: WRAS approved silicon based grease
  - Unions: approved sealant.
- ▶ To drain the appliance shut the system valves and open the pressure relief valve.
- ▶ Upon completion of any electrical work check for earth continuity, correct polarisation and resistance to earth.



## 8.1 Pre-Service Check List

		Date							
1	Call up the last fault stored by the Bosch Heatronic, Service Function <b>.0</b> , (see page 34).								
2	Check ionisation current, Service Function <b>3.3</b> , (see page 34).								
3	Perform visual check of air/flue duct. Visual check of diaphragm for soiling and splits (see page 36).								
4	Check gas supply pressure (see page 29).	mbar							
5	Test combustion air/flue gas (see page 31).								
6	Check CO <sub>2</sub> setting for min./max. (gas/air ratio) (see page 29).	min. % max. %							
7	Check gas and water systems for leaks (see page 16).								
8	Check heat exchanger (see page 34).	mbar							
9	Check burner (see page 35).								
10	Clean condensation trap (see page 35).								
11	Check charge pressure of expansion vessel matches static head of heating system.	mbar							
12	Check central heating system pressure.	mbar							
13	Check electrical wiring for damage.								
14	Check heating programmer settings.								
15	Check appliances that are part of the heating system.								

Table 15

## 8.2 Description of servicing operations



The combustion performance must be checked before and after any servicing work on the combustion and burner components. Refer to section 7.2.

### Check "Last fault stored":

- Select Service Function .0 (see page 27 "Selecting Service Function").

There is a list of the fault codes in the Appendix (see page 41).

To delete "Last fault stored":

- Turn temperature control  anti-clockwise as far as the stop.
- Press and hold the  button until the display shows [ ].  
The last fault stored has now been deleted.

### Checking the ionisation current, Service Function 3.3

- Select Service Function 3.3 (see page 27 "Selecting Service Function").

If the display shows 2 or 3, the ionisation current is OK.  
If the display shows 0 or 1, the electrode assembly (32.1, page 6) must be cleaned or replaced.

### Primary Heat exchanger

There is a special accessory kit (no. 840) for cleaning the heat exchanger, order no. 7 719 001 996.

- Check control pressure on the air - gas mixer unit at max. rated heat output using an electronic manometer.

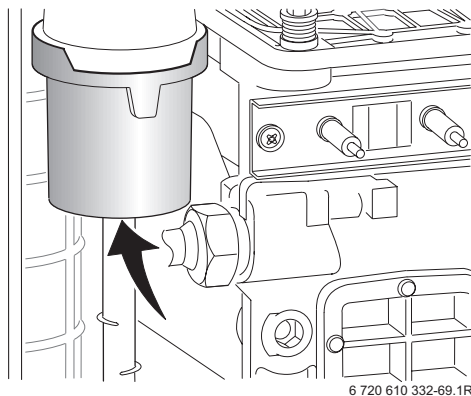


Fig. 51



The heat exchanger should only be cleaned if the control pressure is **2.2 mbar** (depression) or less.

- Remove cleaning access cover (415, page 6) and the metal plate below it, if present. Refer to fig. 2.
- Unscrew condensation trap and place suitable container underneath. Refer to fig. 52.

- Remove the fan and the burner as described in the text headed "Burner" (see page 35).

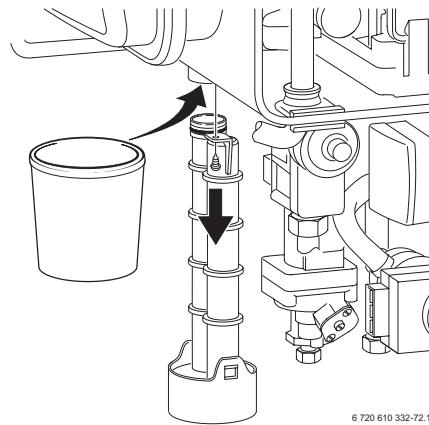


Fig. 52

- Loosen any deposits in the heat exchanger from top to bottom using the cleaning blade. Refer to fig. 53.

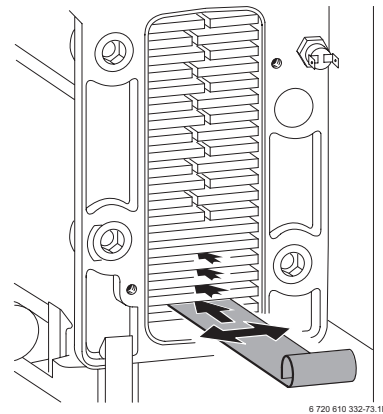


Fig. 53

- Clean the heat exchanger from top to bottom using the brush. Refer to fig. 54.

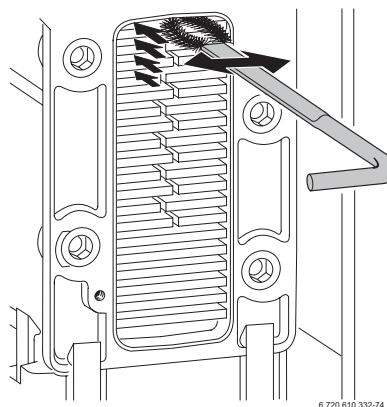


Fig. 54

- ▶ Flush the heat exchanger from the top. Refer to fig. 55.
- ▶ Clean out the condensate collector and trap connection (with other end of brush).

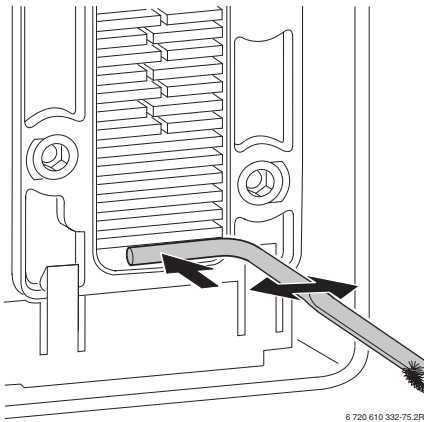


Fig. 55

- ▶ Refit the clean-out cover using a new seal and tighten screws to torque of approx. 5 Nm.

### Burner

- ▶ Check that the gas cock is turned off and the master switch is in the OFF position.
- ▶ Remove the clips (1) and unscrew the two bolts (2). Refer to fig. 56.
- ▶ Unscrew and remove the two hexagon screws securing the fan (3).
- ▶ Slacken fully the rear securing bolt (4).
- ▶ Remove the burner coverplate.

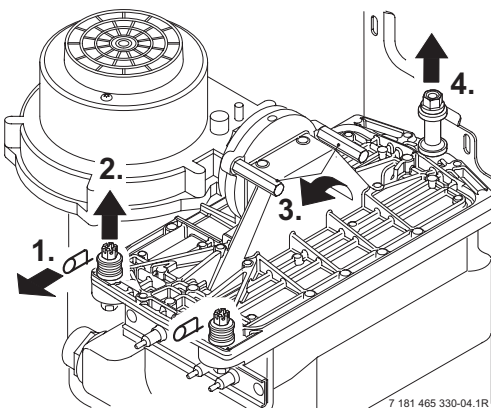


Fig. 56

- ▶ Remove the burner skin and clean components. Do not use a wire brush. Refer to fig. 57.

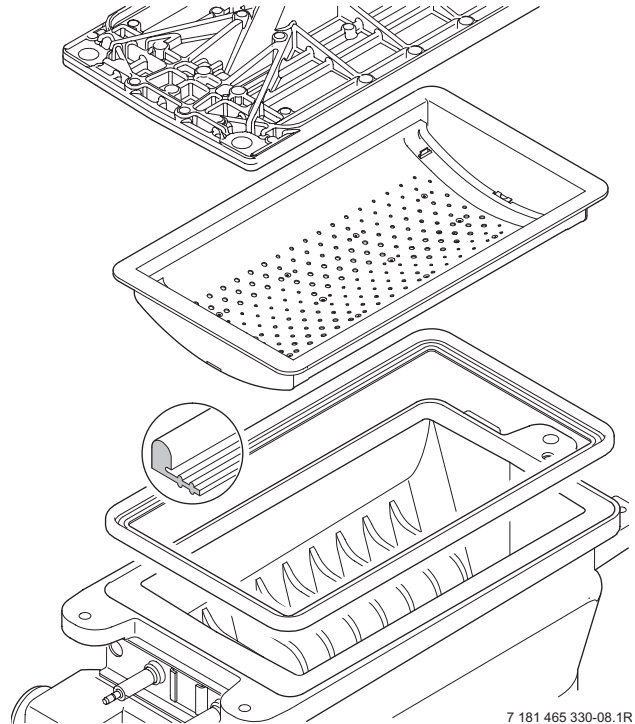


Fig. 57

- ▶ Re-assemble burner in reverse order using a new seal.
- ▶ Adjust gas/air ratio. Refer to section 7.2.

### Condensation trap

In order to prevent spillage of condensate, the condensation trap should be completely removed, (see page 34, fig. 52).

- ▶ Unscrew condensation trap and check connection to heat exchanger is clear.
- ▶ Remove condensation trap cover and clean.
- ▶ Fill condensation trap with approx. 1/4 l of water and refit.

### Electrode assembly


- ▶ Switch off the master switch.
- ▶ Pull off the leads from the electrodes. Refer to fig. 2.
- ▶ Unscrew the two fixing screws and carefully remove the electrode assembly. Refer to fig. 51.
- ▶ Clean the electrodes with a non-metallic brush. (The spark gap should be 4,5 mm  $\pm$  0,5 mm.)
- ▶ Replace and re-connect the assembly taking care not to mislay the inspection window.

## Diaphragm in mixer unit



- ▶ Take care not to damage diaphragm (443) when removing and refitting it.

- ▶ Open mixer unit (29).
- ▶ Carefully withdraw diaphragm (443) from fan intake tube and check for soiling and splits.

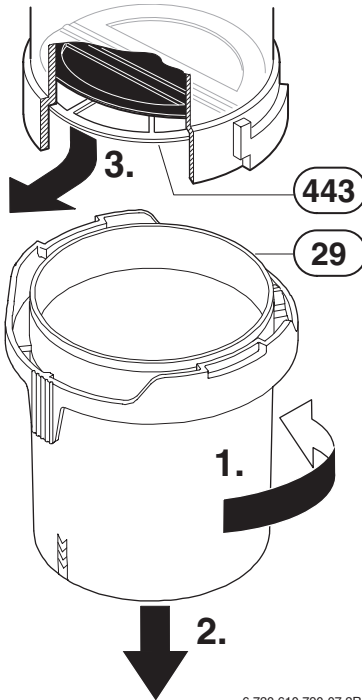

6 720 610 790-07.2R

Fig. 58

- ▶ Carefully refit diaphragm (443) the correct way round into the fan intake tube.



The flaps of the diaphragm (443) must open upwards.

- ▶ Seal the mixer unit (29).

## Siphon

- ▶ Unscrew the clip and disconnect the pipe to the siphon.
- ▶ Remove the yellow plug to drain the siphon.
- ▶ Unscrew the securing nut from beneath the side fascia and remove the siphon. Refer to figure below.

- ▶ Refit and prime the siphon.

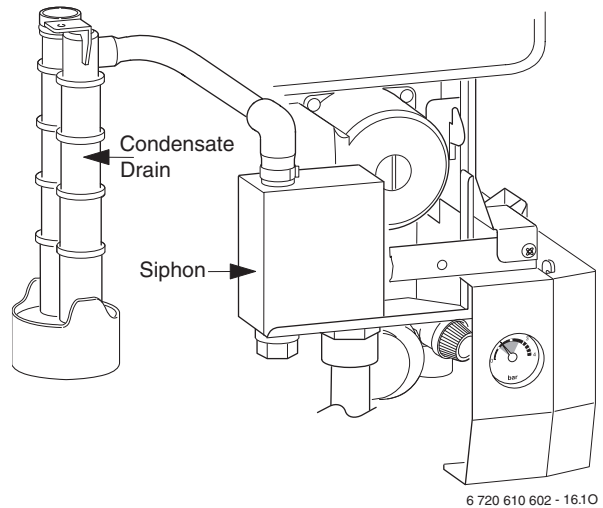


Fig. 59

## Expansion vessel

The expansion vessel should be checked once a year.

- ▶ Depressurise appliance.
- ▶ If necessary, adjust expansion vessel charge pressure to static head of the heating system.

## Heating system pressure



Fill the system using the WRAS approved filling loop.

- ▶ The pointer on the pressure gauge should be 1 bar.
- ▶ If the pointer is below 1 bar (when the system is cold), water should be added until the pointer is 1 bar again.
- ▶ **Max. pressure** of 2.5 bar when the heating system water is at maximum temperature must not be exceeded. If this pressure is exceeded then an extra expansion vessel must be fitted in the system return as close to the appliance as possible.
- ▶ If the system does not retain the pressure, the expansion vessel and the heating system should be checked for leaks.

## Electrical wiring

- ▶ Check the electrical wiring for physical damage and replace any damaged wires.

### 8.3 Replacement of Parts

Before changing any components check that the gas is turned off and that the appliance is electrically isolated. When necessary close the system valves and drain the appliance.

Refitting is a reverse of the procedure for removal using new seals or o-rings as appropriate.

#### 8.3.1 PCB control board and transformer

- ▶ Switch off the appliance.
- ▶ Disconnect appliance from the power supply.
- ▶ Unplug all connectors from the control box (inc. keyed plug). Access is gained by removing the covers. Refer to fig. 27, 28.
- ▶ Remove screw holding power connector earth lead and remove earth lead.
- ▶ Remove two top fixing screws from the control box. Refer to fig. 60.

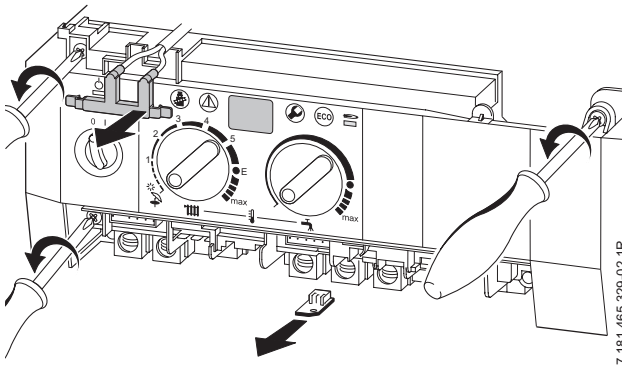


Fig. 60

- ▶ Lower the control box.
- ▶ Unscrew earth lead.
- ▶ Unscrew four fixing screws from cover plate. Refer to fig. 61.
- ▶ Prise off cover plate.
- ▶ Pull off transformer.
- ▶ Remove pcb holder.

- ▶ Remove the pcb control board.

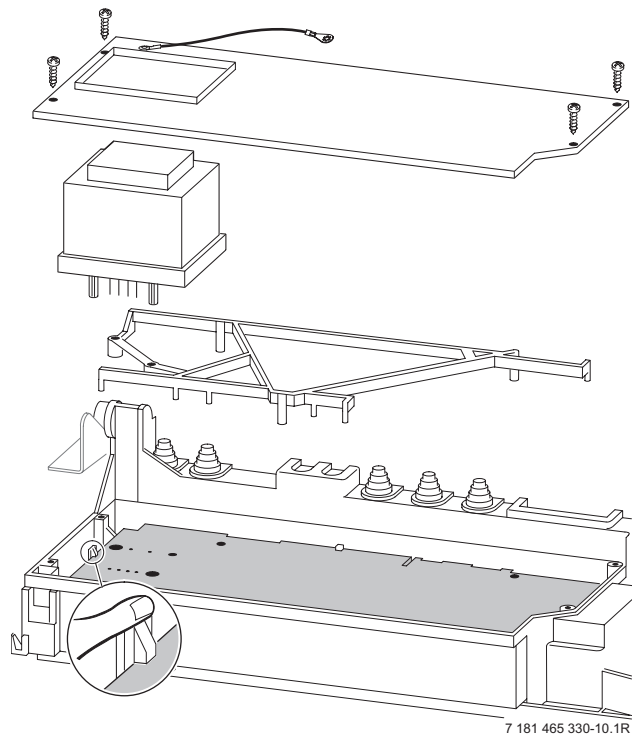


Fig. 61

#### Fuses

- ▶ Remove the connections covers. Refer to fig. 27, 28.

The fuses are located adjacent to the mains connector block and connector ST18. Refer to fig. 4.

Fuse, item 312, is only replaceable by removing the pcb.

Spare fuses are fixed to the connections cover.

A fuse pack is available: Part number 8 744 503 010 0.

### 8.3.2 Fan Assembly

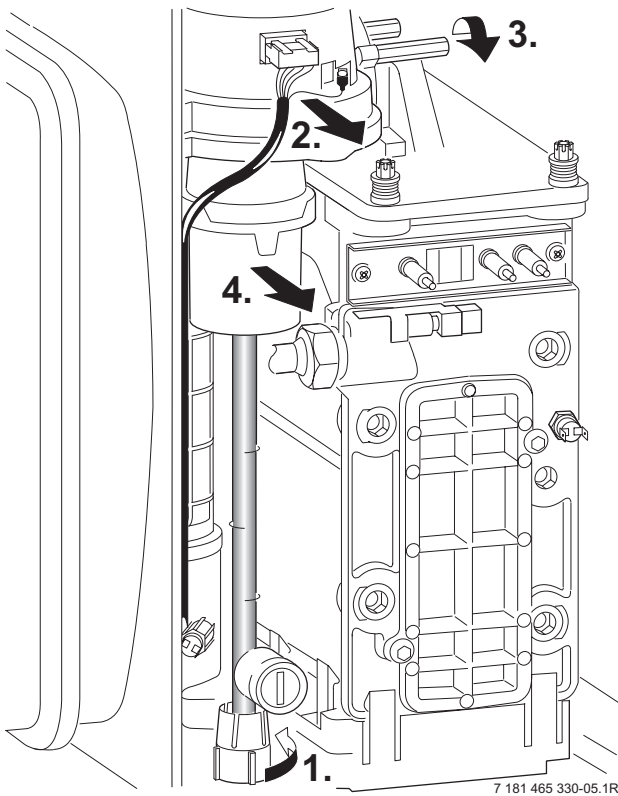


Fig. 62

- Switch off the appliance.
- Disconnect the appliance from the power supply.
- Undo lower pipe union on gas pipe (1.). Refer to fig. 62.
- Remove fan lead and earth connector (2.). The earth connector has a positive clip fixing.
- Remove fixing screws attaching fan to the burner cover (3.).
- Remove fan together with gas pipe and mixer unit.
- Separate the fan from the pipe and mixer unit by twisting the mixer unit to release it (4.).

### 8.3.3 Pump

- Switch off the appliance.
- Disconnect the appliance from the power supply.
- Remove two switchbox fixing screws (1.). Refer to fig. 63.
- Lower switchbox (2.).
- Unscrew and remove the siphon by releasing the jubilee clip. Refer to fig. 59.
- Unscrew the pump union nuts (3.). Refer to fig. 63.
- Carefully remove the pump and disconnect the leads.

#### Alternatively

- After removing the siphon release the four Allen screws and remove and replace the pump head.

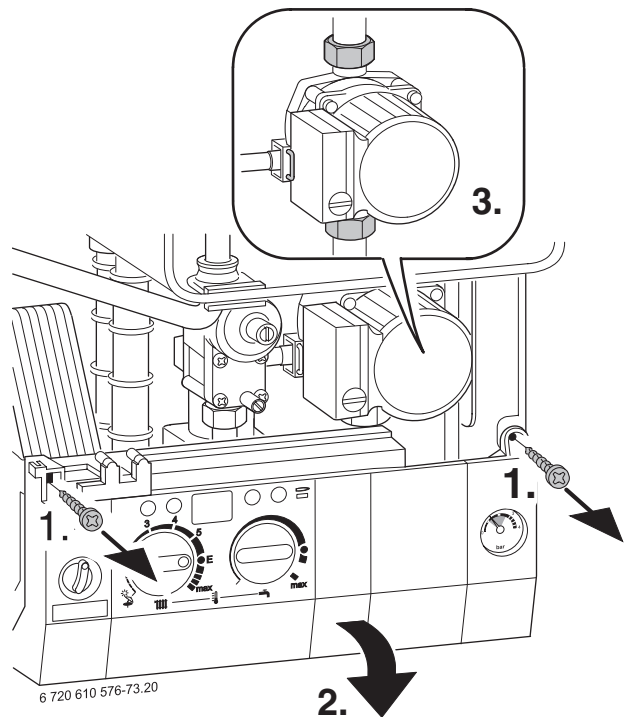


Fig. 63

### 8.3.4 3-way diverter valve

- Switch off the appliance.
- Disconnect appliance from the power supply.
- Turn off service cocks.
- Unplug connector from 3-way valve motor. Refer to fig. 64.
- Pull out retaining clip.
- Remove motor.
- Disconnect the relief valve drain.
- Disconnect the pressure gauge by withdrawing the clip and pulling out the capillary head.
- Undo pipe unions by withdrawing the clips.

- Remove 3-way valve.

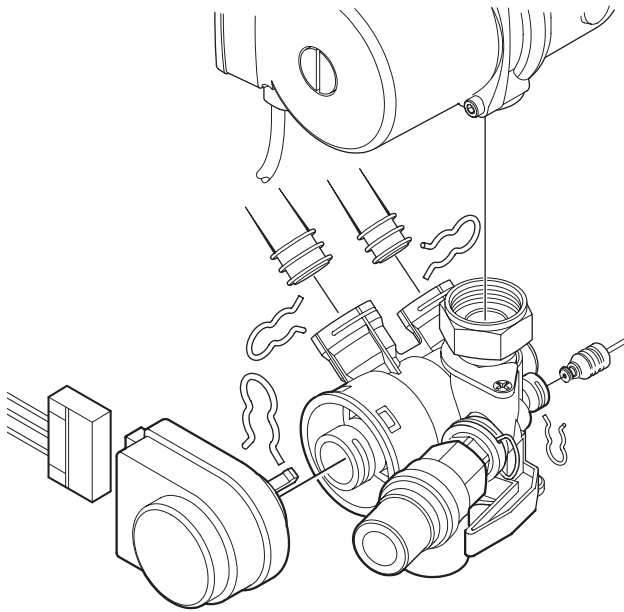


Fig. 64

After refitting:

- Fill system, bleed and re-pressurise (see Installation Instructions).

### 8.3.5 3-way diverter valve motor

- Switch off the appliance.
- Turn off the service cocks.
- Unplug connector from 3-way valve motor. Refer to fig. 64.
- Pull out retaining clip.
- Remove motor.

### 8.3.6 Sensors

- Check that the appliance is electrically isolated.

#### Central Heating Flow Temperature Sensor – Item 36, fig. 2, 60

- Pull-off the connector.
- Release the sensor clip and withdraw the sensor.
- Apply heat transfer paste to the replacement sensor.

#### Safety Temperature Limiter – Item 6, fig. 2, 60

- Pull-off the connectors.
- Unscrew the sensor.

#### Flue Temperature Limiter – Item 9, fig. 2, 60

- Pull-off the connectors.
- Unscrew the sensor.

### 8.3.7 Gas Valve

- Check that the gas cock is turned off.
- Lower the control panel. Refer to fig. 63.
- Pull off the solenoid connections at the rear of the valve.
- Undo the union, within the inner casing, securing the valve to the gas/air tube. Refer to fig. 62.
- Remove the white plastic cap from the gas valve.
- Release the gas inlet union at the manifold assembly.
- Unscrew the two screws securing the gas valve assembly bracket to the back panel and withdraw the assembly.
- Transfer the bracket and inlet pipe assembly to the new gas valve.
- Check for gas soundness when the new gas valve has been fitted.
- Recheck the combustion performance as described in section 7.1.

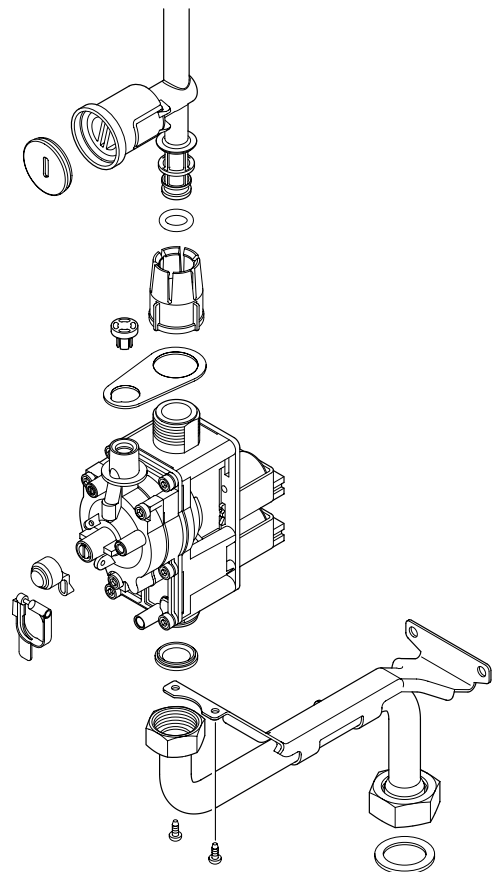


Fig. 65

### 8.3.8 Electrode assembly

- Refer to section 8.2.
- Use a new seal if the existing seal is damaged.



### 8.3.9 Pressure gauge

- ▶ Drain the appliance.
- ▶ Lower the facia. Refer to fig. 63.
- ▶ Twist the pressure gauge head anti-clockwise to release it from the casing. Refer to fig. 2.
- ▶ Disconnect the capillary head from the rear by withdrawing the clip and pulling out the head.

### 8.3.10 Expansion vessel

- ▶ Drain the appliance.
- ▶ Undo the union connection at the base of the vessel. Refer to fig. 2.
- ▶ Unscrew the top and bottom fixing screws and remove the vessel.

### 8.3.11 Pressure Relief Valve

- ▶ Drain the appliance.
- ▶ Disconnect the drain pipe from the valve. Refer to fig. 33.
- ▶ Pull-out the clip securing the valve.
- ▶ Pull-out the valve.
- ▶ Ensure that the replacement valve is fully entered before fitting the clip.

### 8.3.12 Burner

- ▶ Refer to section 8.2.

### 8.3.13 Primary Heat Exchanger

- ▶ Drain the appliance.
- ▶ Check that the gas supply is turned off.
- ▶ Check that the appliance is electrically isolated.
- ▶ Remove the fan assembly complete with the gas/air tube and mixer assembly. Refer to section 8.3.2.
- ▶ Remove the burner. Refer to section 8.2.
- ▶ Disconnect the sensors. Refer to section 8.3.6.
- ▶ Undo the central heating flow union.
- ▶ Undo the top connection of the pump. Refer to fig. 63.
- ▶ Undo the grey plastic cap, next to the top pump connection at the base of the heat exchanger.
- ▶ Unscrew and remove the condensate trap. Refer to section 8.2.
- ▶ Unscrew and remove the two screws securing the heat exchanger top bracket to the rear panel.
- ▶ Lift up the flue duct, item 271, refer to fig. 2.
- ▶ Pull forward from the top and lift the heat exchanger from the casing.
- ▶ Transfer components, as necessary, to the new heat exchanger.
- ▶ Ensure that all the seals are in place and all of the connections are tight before re-commissioning the appliance.

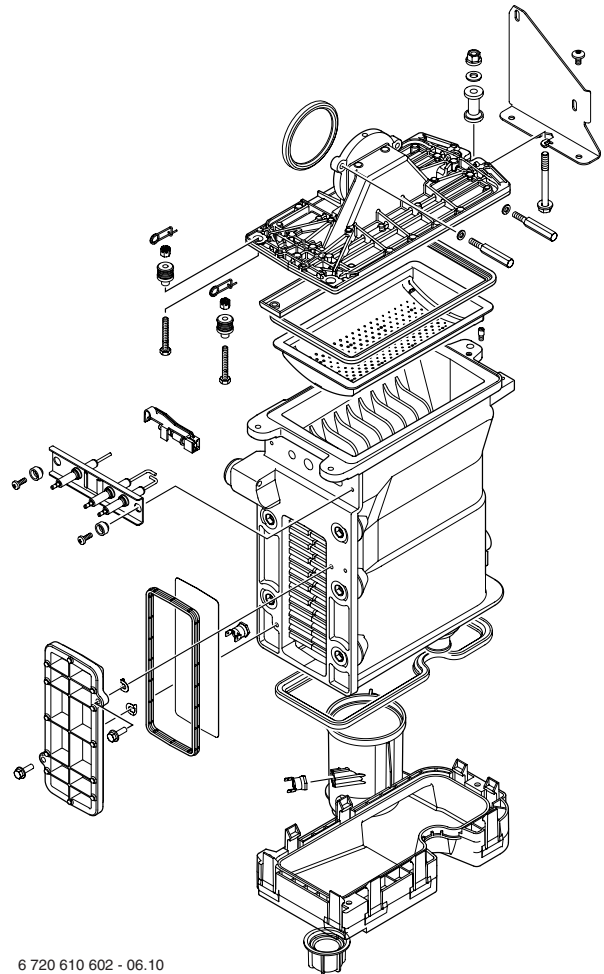


Fig. 66



## 9 Appendix

### 9.1 Fault Codes

More detailed fault finding procedures are described in the Service booklet for the Engineer number 7 181 465 346.

Display code	Description	Remedy
<b>A8</b>	Break in communication	Check connecting lead to programmer.
<b>AC</b>	Module not detected.	Check connecting lead between TA211E/TR212E and Heatronic.
<b>b1</b>	Keyed plug not detected.	Insert keyed plug correctly, test and replace if necessary.
<b>C1</b>	Fan speed too low.	Check fan lead and connector, and fan; replace as necessary.
<b>d3</b>	Jumper 8-9 not detected.	Connector not connected, link missing, underfloor heating limiter tripped.
<b>E2</b>	CH flow NTC sensor defective	Check CH flow NTC sensor and connecting lead.
<b>E9</b>	Safety temp. limiter in CH flow has tripped.	Check system pressure, check safety temp. limiters, check pump operation, check fuse on pcb, bleed appliance.
<b>EA</b>	Flame not detected.	Is gas cock turned on? Check gas supply pressure, power supply, igniter electrode and lead, ionisation sensing electrode and lead, flue duct and CO2 level.
<b>F0</b>	Internal error.	Check electrical connector contacts, programmer interface module ignition leads are not loose; replace pcb if necessary.
<b>F7</b>	Flame detected even though appliance switched off.	Check electrode assembly, dry pcb. Flue clear?
<b>FA</b>	Flame detected after gas shut off.	Check gas valve and wiring to gas valve. Clean condensation trap and check electrode assembly. Flue clear?
<b>Fd</b>	Reset button pressed by mistake.	Press reset button again.
<b>P1, P2, P3, P1...</b>	Please wait, initialisation in progress.	24 V fuse blown. Replace fuse.

Table 16

## 9.2 Short parts list

Key	Description	Qty GC	Spare part number
1	Sensor - Flue gas temp.	1	8 729 000 144 0
2	Sensor - CH flow temp.	1	8 714 500 087 0
3	Control board	1	8 748 300 418 0
4	Gas valve	1	8 747 003 516 0
5	Fan assembly	1	8 717 204 373 0
6	Fan washer	1	8 729 000 183 0
7	Expansion vessel	1	8 715 407 236 0
8	Relief valve	1	8 717 401 012 0
9	Electrode assembly	1	8 718 107 077 0
10	Electrode lead	1	8 714 401 999 0
11	Pump	1	8 717 204 384 0
12	Pressure gauge	1	8 717 208 079 0
13	Burner skin seal	1	8 711 004 168 0
14	Transformer - facia	1	8 747 201 358 0
15	Heat exchanger washer	1	8 710 103 153 0
16	Washer set Condensation Trap	1	8 710 103 154 0
17	Fuse set	1	8 744 503 010 0
18	Primary heat exchanger	1	8 715 406 615 0

Table 17

## 9.3 Heating/hot water output settings (N.G.)

Display code	Natural gas G20		
	Heat output kW	Heat input kW	Gas vol. flow rate (l/min at $t_V/t_R = 80/60^\circ\text{C}$ )
30	8.2	8.3	14.4
40	10.9	11.0	19.3
50	13.6	13.8	24.1
60	16.3	16.5	28.9
70	19.1	19.3	33.7
80	21.8	22.0	38.5
90	24.5	24.8	43.3
100	27.2	27.5	48.1

Table 18

## 9.4 Heating/hot water output settings (L.P.G)

Display code	Propane	
	Heat output kW	Heat input kW
40	10.9	11.0
50	13.6	13.8
60	16.3	16.5
70	19.1	19.3
80	21.8	22.0
90	24.5	24.8
100	27.2	27.5

Table 19

9.5 Operational Flow diagrams  
9.5.1 Central heating function

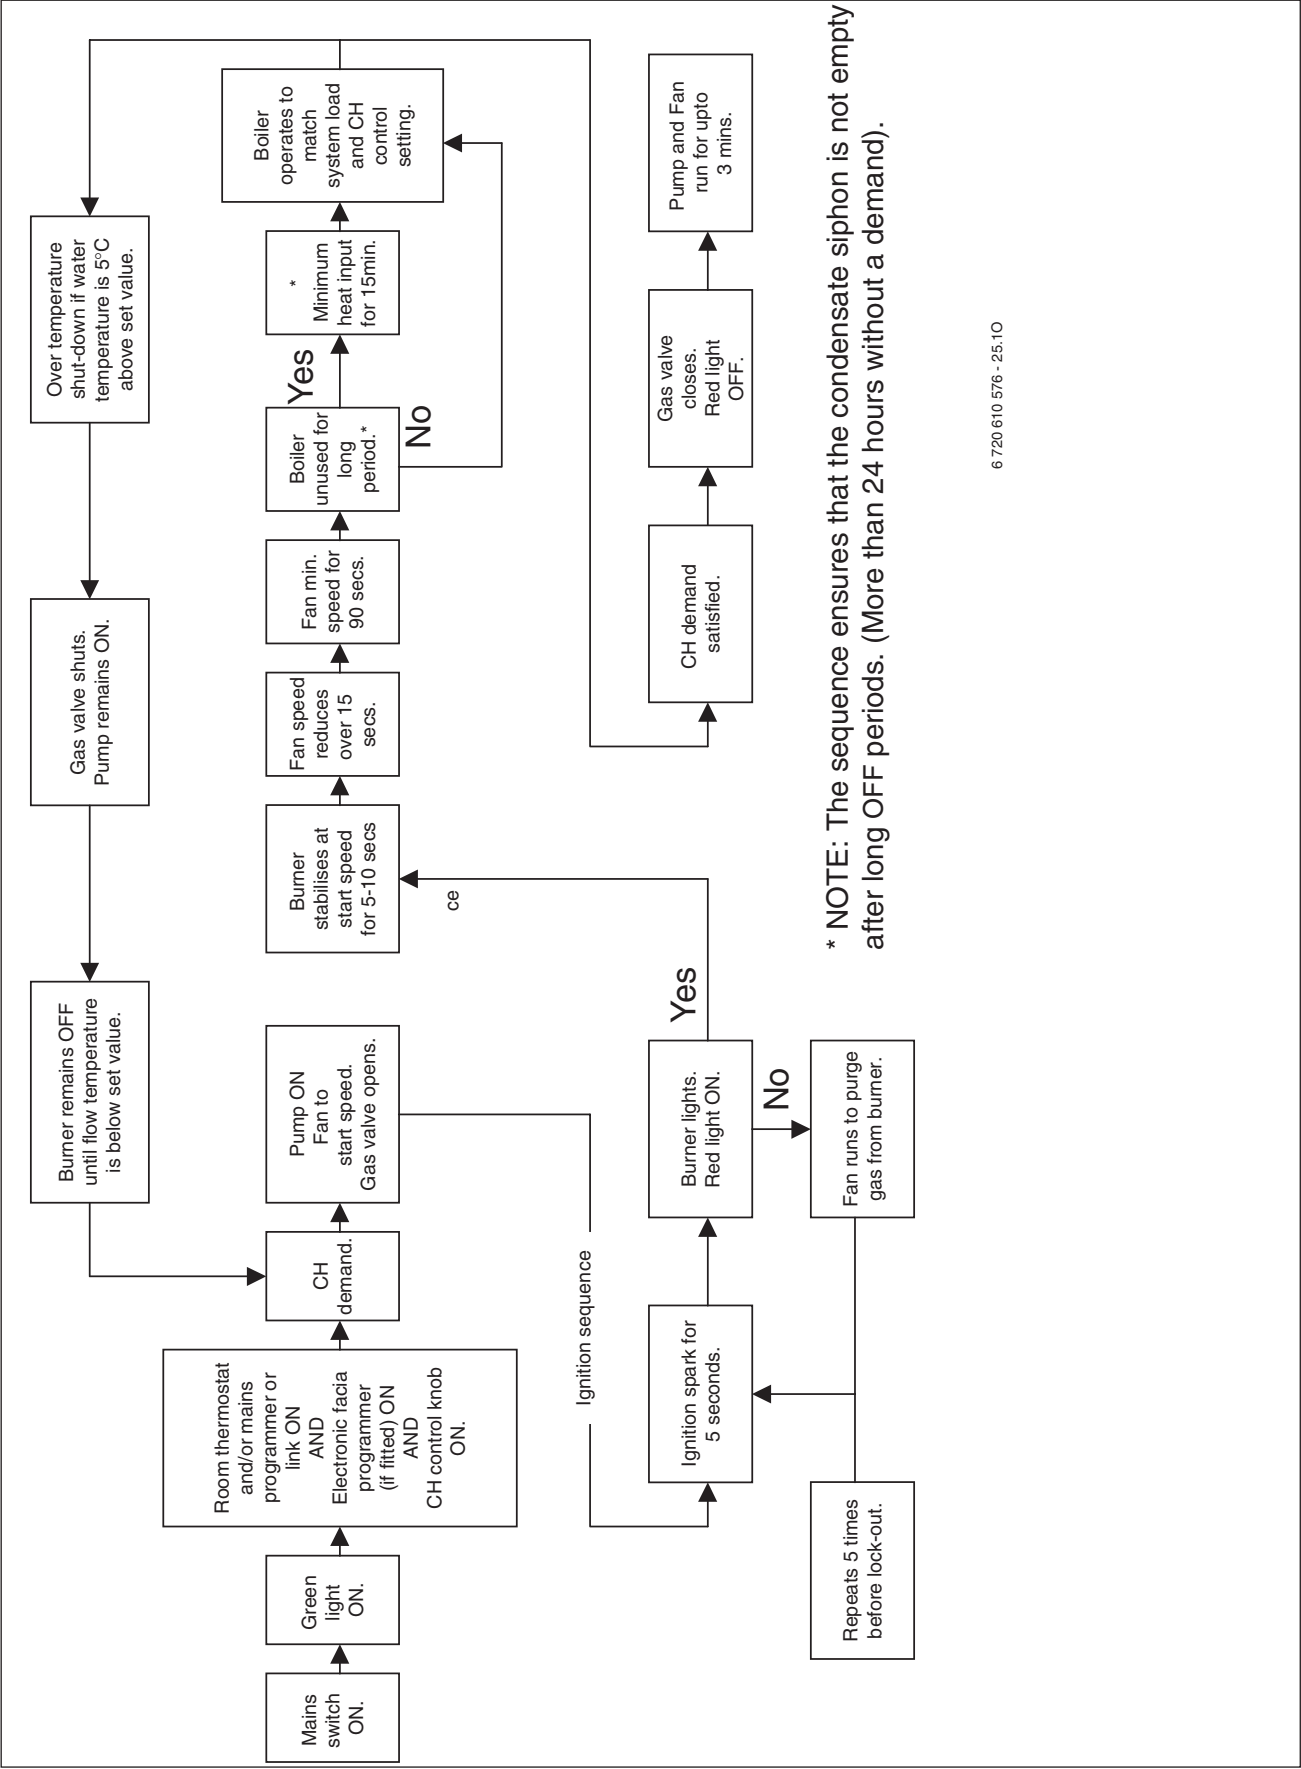


Fig. 67

**EXCELLENCE COMES AS STANDARD**

**Worcester Heat Systems Limited, Cotswold Way, Warndon, Worcester WR4 9SW.  
Telephone: (01905) 754624 Fax: (01905) 754619**